



FLEXnet™ DC

User's Guide

Includes Mounting and Installation

Warranty

Dear OutBack Customer,

Thank you for your purchase of OutBack products. We make every effort to assure our power conversion products will give you long and reliable service for your renewable energy system.

As with any manufactured device, repairs might be needed due to damage, inappropriate use, or unintentional defect. Please note the following guidelines regarding warranty service of OutBack products:

- Any and all warranty repairs must conform to the terms of the warranty.
- All OutBack equipment must be installed according to their accompanying instructions and manuals with specified over-current protection in order to maintain their warranties.
- The customer must return the component(s) to OutBack, securely packaged, properly addressed, and shipping paid. We recommend insuring your package when shipping. Packages that are not securely packaged can sustain additional damage not covered by the warranty or can void warranty repairs.
- There is no allowance or reimbursement for an installer's or user's labor or travel time required to disconnect, service, or reinstall the damaged component(s).
- OutBack will ship the repaired or replacement component(s) prepaid to addresses in the continental United States, where applicable. Shipments outside the U.S. will be sent freight collect.
- In the event of a product malfunction, OutBack cannot bear any responsibility for consequential losses, expenses, or damage to other components.
- Please read the full warranty at the end of this manual for more information.

About OutBack Power Systems

OutBack Power Systems is a leader in advanced energy conversion technology. Our products include true sine wave inverter/chargers, maximum power point tracking charge controllers, system communication components, as well as breaker panels, breakers, accessories, and assembled systems.

Notice of Copyright

FLEXnet DC User's Guide © 2007 All rights reserved.

Disclaimer

UNLESS SPECIFICALLY AGREED TO IN WRITING, OUTBACK POWER SYSTEMS:

(a) MAKES NO WARRANTY AS TO THE ACCURACY, SUFFICIENCY OR SUITABILITY OF ANY TECHNICAL OR OTHER INFORMATION PROVIDED IN ITS MANUALS OR OTHER DOCUMENTATION.

(b) ASSUMES NO RESPONSIBILITY OR LIABILITY FOR LOSS OR DAMAGE, WHETHER DIRECT, INDIRECT, CONSEQUENTIAL OR INCIDENTAL, WHICH MIGHT ARISE OUT OF THE USE OF SUCH INFORMATION. THE USE OF ANY SUCH INFORMATION WILL BE ENTIRELY AT THE USER'S RISK.

Date and Revision

January, 2008

Contact Information

OutBack Power Systems

19009 62nd Ave. NE

Arlington, WA 98223

Phone (360)435-6030

Fax (360)435-6019

outbackpower.com

TABLE OF CONTENTS

Warranty Summary..... 1

Introduction..... 4

System Overview..... 5

Reading the FLEXnet DC..... 6

FLEXnet DC Package 7

Installing the FLEXnet DC..... 7-10

FLEXnet DC Measurements 11

Logged Data..... 12

User Adjustable Set Points..... 12

Programming and Using the MATE for FLEXnet Operations..... 13

FLEXnet DC Modes..... 14

Programming the Auxiliary Relay..... 16

MATE Screens..... 17-28

Technical Notes..... 29

Warranty..... 30-31

Warranty Registration..... 32

Introduction

The OutBack Power Systems FLEXnet DC

The FLEXNet DC collects, monitors and records time-based battery amp, watt and volt data for display on the OutBack MATE series of products, allowing for more accurate set point adjustments and precise battery recharging. Five LEDs on the FLEXnet DC act as a state-of-charge indicator bar for a quick status display.

The FLEXnet DC also offers an auxiliary (AUX) relay that acts like a switch to turn on or off a user-installed light, alarm, or similar low voltage DC device. It can also be set up as a two-wire auto generator starter.


The FLEXNet DC works in conjunction with up to three input current shunts (either a FW-SHUNT250 or FW-SHUNT500, each rated 500A/50mV) also available from OutBack.

Only a single FLEXNet DC is needed for any system using OutBack components.

The FLEXnet DC is not intended to be used with the MATE2M. It is designed to work with the MATE or the MATE2.


NOTE: • One shunt is included as standard equipment with each OutBack FW500-DC and FW1000-AC enclosures.
• The shunt(s) cannot be connected to a positive (+) ground system.

SYSTEM OVERVIEW

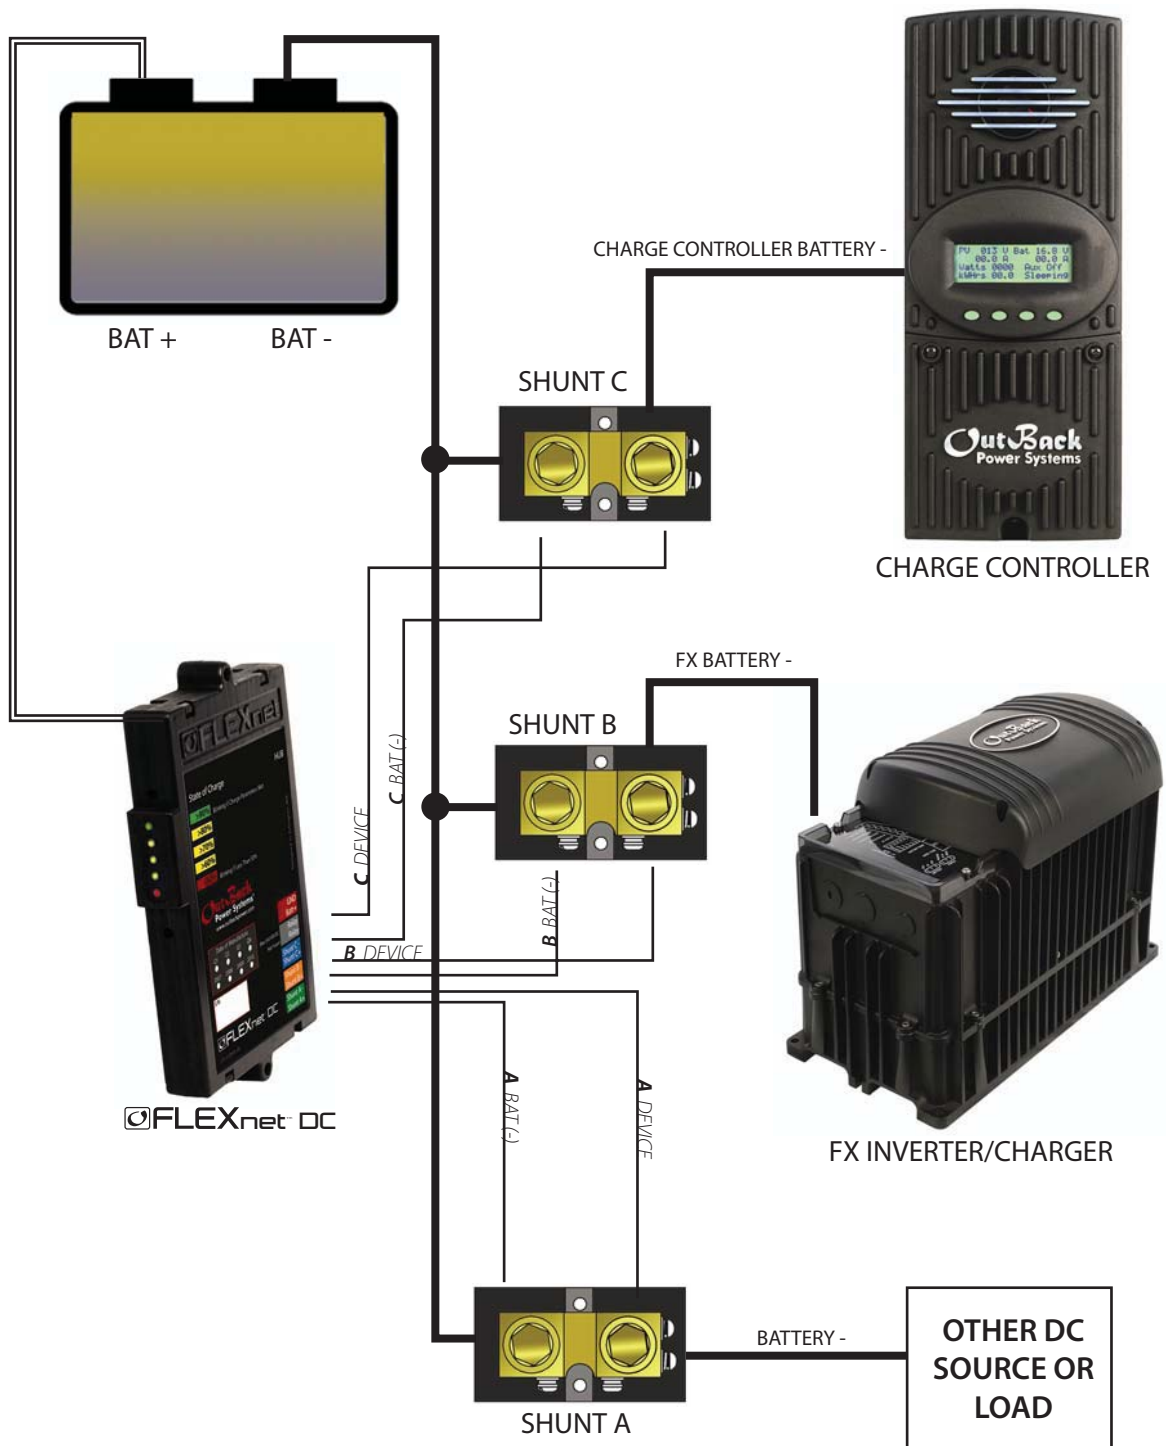

Think of the input shunts as breaks or junctions in the DC (-) conductor. The current is conducted as though it were a continuous conductor, but the shunts allow the user to monitor the current, providing information for more accurate battery recharging.

Reading the FLEXnet DC

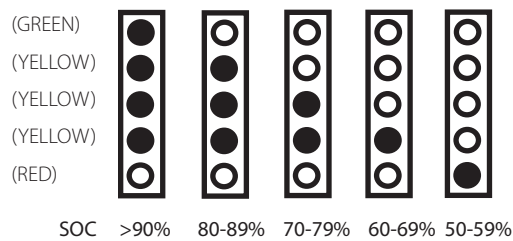

ON ●
OFF ○

10-position wiring block

- 1: BAT-
- 2: BAT+
- 3: Relay
- 4: Relay
- 5: **C** DEVICE SIDE
- 6: **C** BAT (-) SIDE
- 7: **B** DEVICE SIDE
- 8: **B** BAT (-) SIDE
- 9: **A** DEVICE SIDE
- 10: **A** BAT (-) SIDE

- Blinking green LED: Charge parameters met
- Solid green LED: SOC** is above 90%
- Solid red LED: SOC is greater than 49% but less than 60%
- Off red LED: SOC is above 59%
- Blinking red LED: SOC is less than 50%


*See page 15

**State of Charge

- BAT+/- must connect directly to battery terminals of the bank being monitored.
- Proper polarity must be observed on all connections.

The FLEXnet DC package includes:


- A. FLEXnet DC
- B. Ten-pin wiring plug for shunt, relay and battery connections
- C. Six feet of CAT5 cable for HUB connection
- D. Ten-foot color-coded twisted pair (TP) cable connects to the battery
- E. Three six-foot, color-coded, twisted pair cables for shunt connections
- F. Two #6-32 X 3/8" panhead machine screws
- G. Colored labels identifying shunts

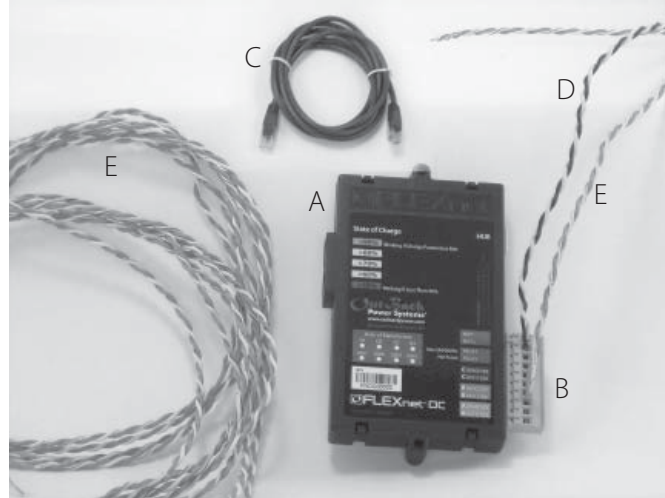


Installing the FLEXnet DC

The FLEXnet DC mounts in a 3/4" DC breaker slot in an OutBack DC breaker bracket installed inside a FLEXware enclosure or previous model OutBack enclosure. To mount the FLEXnet DC inside an OutBack enclosure:


1. Put the system into bypass mode
2. Shut off all AC input to inverters
3. Shut off all PV and DC breakers
4. Disconnect the battery cables at the battery
5. Remove the breaker bracket from its enclosure by removing the four corner screws
6. Remove a DC breaker knockout

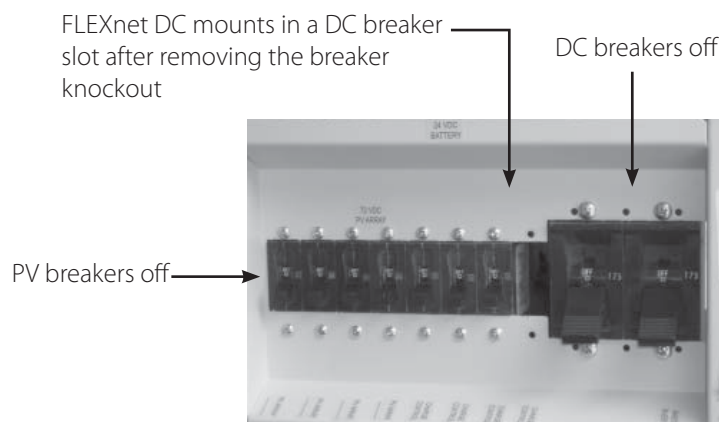

- Insert the FLEXNet DC inside the DC breaker box and through the back side of the breaker bracket; secure with two #6-32 X 3/8 panhead machine screws (included) torqued at 5 to 8 inch-pounds

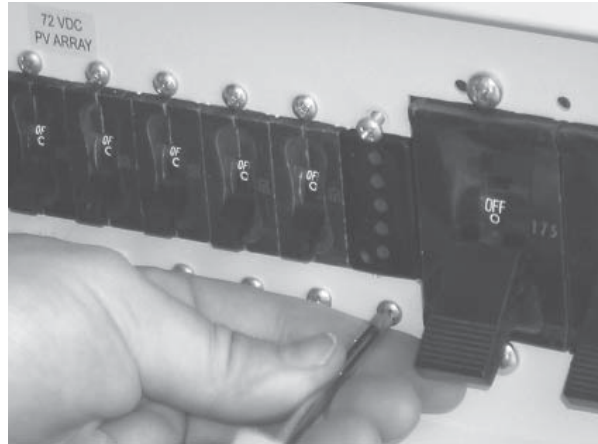


- Connect all wires to the ten-pin wiring connector. Do not leave any loose wires!
- Connect each twisted pair to a shunt.

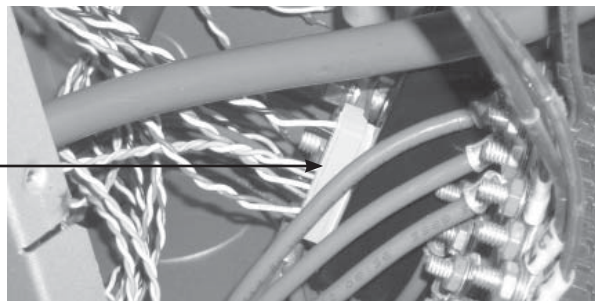

Example:

- Battery side (green wire in twisted pair) connects to the battery negative side of the shunt
- Device side (white wire in twisted pair) connects to the source/load (negative) side of the shunt

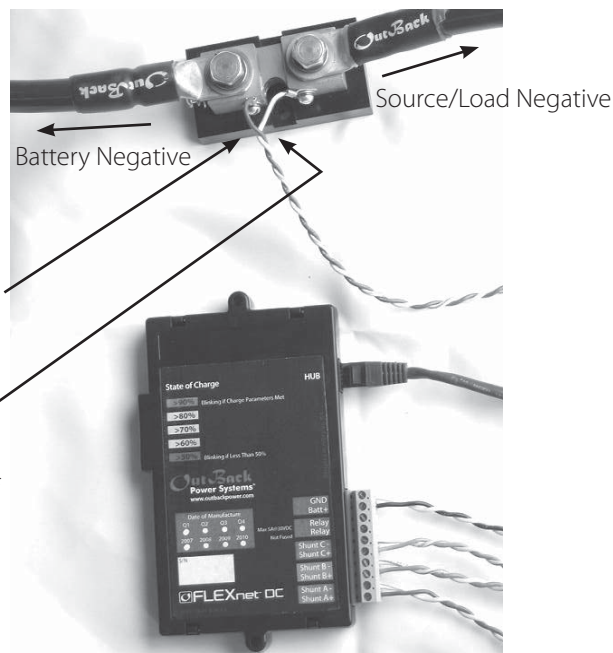


NOTE: Color of wiring jacket can vary

NOTE: The FLEXNet DC shunts must be connected in the negative (low) side of whatever they monitor. Otherwise, the unit can be damaged.

- Black/White twisted pair connects directly to the battery bank being monitored:

- White to BAT (-)
- Black to BAT (+)
- An appropriate fuse—with a rating of 5 amps or less and greater than 100 volts DC—may be placed in the black conductor

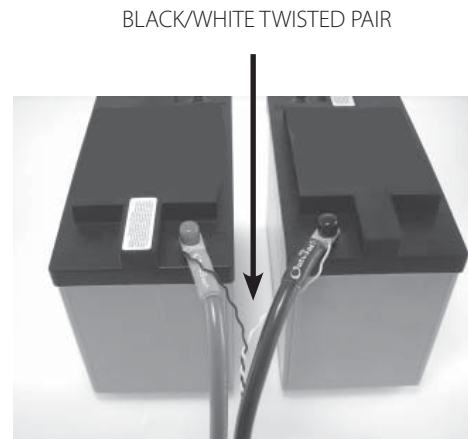


Wiring Block Connections

Color-coded twisted pair 18 AWG connects the wiring block and shunt(s) or battery. The wiring must be installed with the proper polarity to avoid corrupting the data.

The wires connected to the wiring block should match the color-coded label where the wiring block inserts into the FLEXnet DC.

- Green and White/Green
 - Orange and White/Orange
 - Blue and White/Blue
 - Black and White
- 6' twisted pair wires with #8 forked spade terminals connected to the shunts
- 10' twisted pair wire with 5/16" ring terminals connected to the battery bank

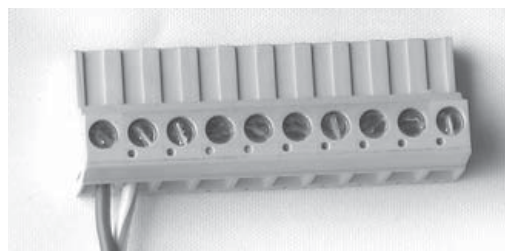

The wiring block can accommodate #12 AWG to #26 AWG (2.5 mm² to .20 mm²) wire with a strip length of 1/4" (6 mm).


Torque Values

- Five inch-pound maximum torque on each terminal block screw
- 4-5 inch-pound torque is recommended if using the supplied 18 AWG stranded twisted pair wire




(Installing the FLEXnet DC continued)

- Insert the 10-pin connector to the wiring block on the back of the FLEXnet DC.

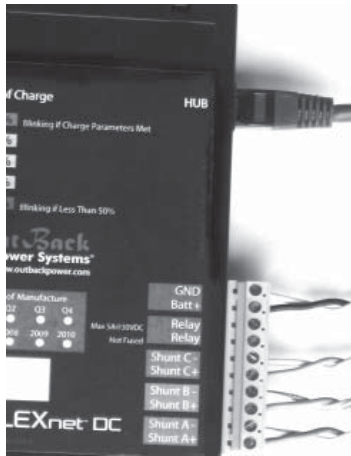


- Install the CAT5 cable into the RJ45 jack in the back of the FLEXNet DC. Connect the other end of the cable to the HUB using Port #2 or higher.

FLEXnet DC removed from the breaker bracket for clarity.

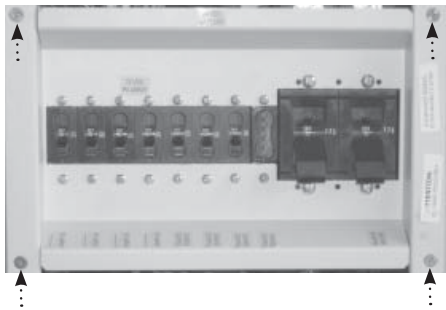

- Replace the breaker bracket and secure with its four corner fasteners.

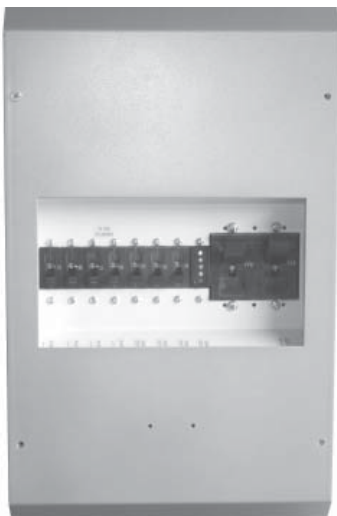

- With all FLEXnet DC wires connected, reinstall the DC enclosure cover and secure its four Phillips screws.
- After the cover is installed, reconnect the battery cables at the battery, turn on all the breakers, and power up the system.

FLEXNet DC Measurements

The FLEXNet DC can measure and record:

- Volts for one battery bank*
- Amps**
- KiloWatts
- kWhrs removed from the batteries
- kWhrs returned to the batteries
- Amp hours removed from the batteries
- Amp hours returned to the batteries
- Battery bank state-of-charge
- Lifetime kiloamp hours removed from the batteries***
- Days since charge parameters last met
- Lowest battery state-of-charge reached
- Minimum battery voltage***
- Maximum battery voltage***
- Maximum amp charged***
- Maximum amp discharged***
- Maximum kWhrs charged***
- Maximum kWhrs discharged***

For each channel

For each amps channel

* Battery volt input: 0-80 VDC in .1 volt resolution

** 2000 amp DC span (+/- 1000 amps DC—net amps are charging, net amps are discharging), .1 amp resolution

*** The user can manually reset these data. At any given time, the values displayed are the most recent since the values were last displayed


Logged Data*

The previous 128 days of data are accessible with the MATE. The data is logged each night at midnight. Be sure the MATE's clock is set to the correct local time (refer to your MATE manual).

* Data Logging

User Adjustable Set Points

- Battery charge factor (65-100%) [see page 29]
- Battery bank capacity 0-10000 amp hours
- Shunt A, B, C—enabled or disabled
- Absorb volts (0-80.0 volts, the maximum voltage the battery can absorb)
- Return amps (0-500.0A, the maximum current amperage going into the battery)
- Parameters met timer (0-240 minutes, the amount of time allowed to recharge)
- AUX Relay Set Points

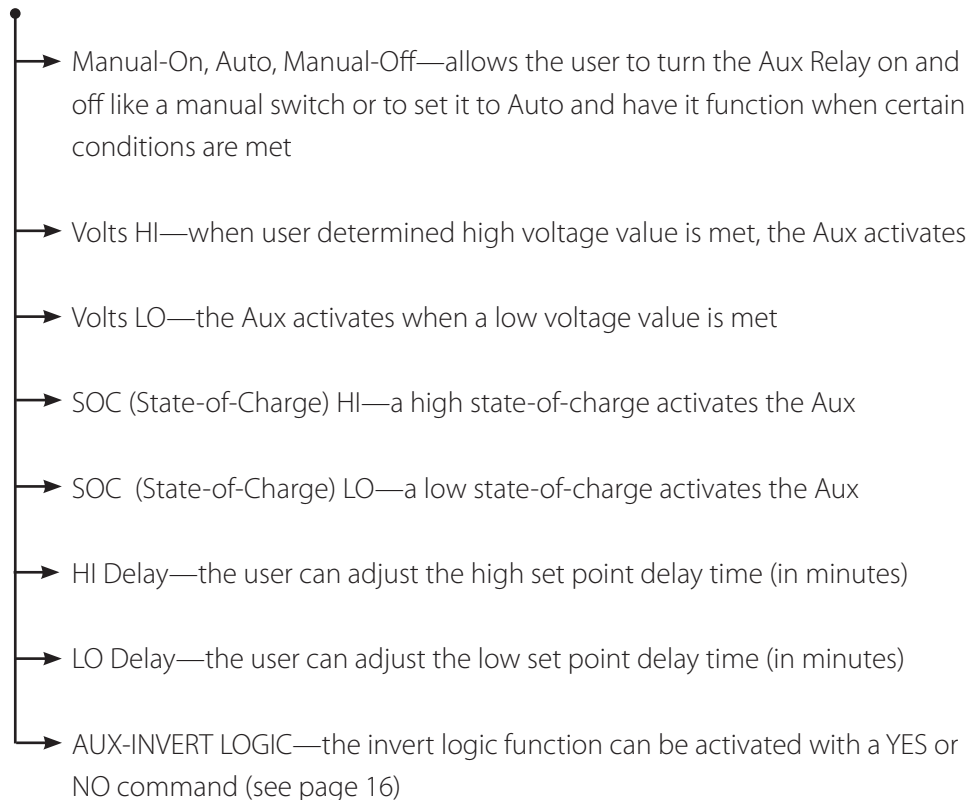

Programming and Using the MATE for FLEXNet DC Operations

At initial power up, use the MATE (see pages 17-28) to program:

- Battery Bank 20 Hour Capacity (provided by the manufacturer) in amp hours (from 100-10,000 amp-hours in ten amp increments)
- Battery charge parameters
 - Return amps: See the manufacturer recommendations or set to 2% of the battery bank amp hour capacity (e.g. a 1000 amp hour battery bank would set the return amps to 20.0 amps)

NOTE: Older battery banks might require a higher value if the system end of charge amps does not drop to the 2% level.

- Battery End-of-Charge Voltage: See the manufacturer recommendations or set .2 volts lower than the system absorb voltage for 12/24 volt systems and .4 volts lower for 48 volt or higher systems
- Battery Charge Factor (BCF)
 - The BCF compensates for recharging inefficiency from gassing and heating losses to assure the battery state-of-charge (SOC) display is accurate by scaling it; the BCF is programmable from 65% to 100% (see page 29).
 - If the SOC percentage displays full before the batteries' user-determined charge settings are met, decrease the BCF percentage; increase it if the SOC is low.
 - The default setting is 94%, meaning 94% of the charging current is being used for recharging and 6% is lost. OutBack suggests maintaining the default setting until the FLEXNet DC has monitored the system through a few charge/discharge cycles.
 - Setting the BCF to 100% effectively disables any BCF display changes.
- Charge Parameters Met Time
 - During this period, the charge parameters must meet or exceed the user-set charge parameters before the battery is considered full.
 - Programmable from 0 to 240 minutes
 - Setting this time to 0 effectively eliminates any filtering provided by this timer. The first time the charge parameters are met, the unit will consider the parameters met and perform accordingly.
 - The default setting is one minute. Longer or shorter periods may apply to certain sources such as wind generators or hydros.

FLEXNet DC Modes

- Channel A is enabled by default
- Each input channel is either enabled or disabled.
- A disabled channel will show zero values only.
- All enabled channels will run in parallel.
- An enabled channel monitors and totals all current flowing into or out of the battery bank through its shunt. Any DC loads or sources wired directly to the battery cannot be accounted for by FLEXNet and will result in inaccurate readings.
- All unused channels should be set to disabled.

NOTE: All shunts must be connected in the negative or low side of the system and operate in parallel. High side connection may result in erratic operation and/or failure of the FLEXNet DC.

Charge Cycle

At power up, the FLEXNet DC assumes the battery is full regardless of the battery state-of-charge. The batteries should receive a full charge at this time to meet the user-determined charge parameters (entered at start up).

Typical charge cycle:

1. The battery bank is charging and charge parameters are satisfied (return amps, battery voltage, and the parameters met time set point).
2. When the top green LED is blinking, the charge parameters have been satisfied.
3. When a discharge begins, an internal timer counts for one minute. After one minute of discharge, a new discharge cycle starts. All LEDs go solid and all amp hours and kilowatt hours registers return to zero.

The FLEXNet DC is now synchronized to the battery.

4. The charged and removed amp-hours from the battery are monitored according to the following:
 - Amp-hours removed from the battery are counted at 100%.
 - Amp-hours returned to the battery are discounted by the Battery Charge Factor.
 - The default charge factor is 94% (each amp-hour returned to the battery is accounted for as 0.94 Amp-Hours).

The FLEXnet DC's LEDs indicate the SOC by their individual ON/OFF states. *Excluding* the RED or last LED, when viewing the remaining four LEDs—GREEN, YELLOW, YELLOW, AND YELLOW— the following are true:

- All LEDs on = 90-100% SOC
 - GREEN LED blinking—charge parameters met
 - Solid GREEN LED—SOC is above 90%
- All but top LED on = 80-89% SOC
- All but top two LEDs on = 70-79% SOC
- Bottom yellow LED on = 60-69% SOC

When viewing the last (RED) LED:


- Bottom RED LED on = 50-59% SOC
- Bottom LED blinking = less than 50% SOC

NOTE: The bottom LED is always off unless the SOC is less than 60%

5. When the SOC is less than 90%, enough of a discharge has taken place that the FLEXnet DC's data can be used to determine, among other things, an accurate Battery Charge Factor. A battery amp-hour charge factor* and the battery kWhr efficiency factor** for the last cycle are calculated using the stored values from the previous charge cycle (if the SOC is higher than 90%, the values aren't reliable enough for these calculations). The battery must cycle at least twice for these values to be valid.

* Battery amp-hour charge factor = amp-hours removed/amp-hours charged

** Battery kWh efficiency factor= kWhs removed/kWhs charged

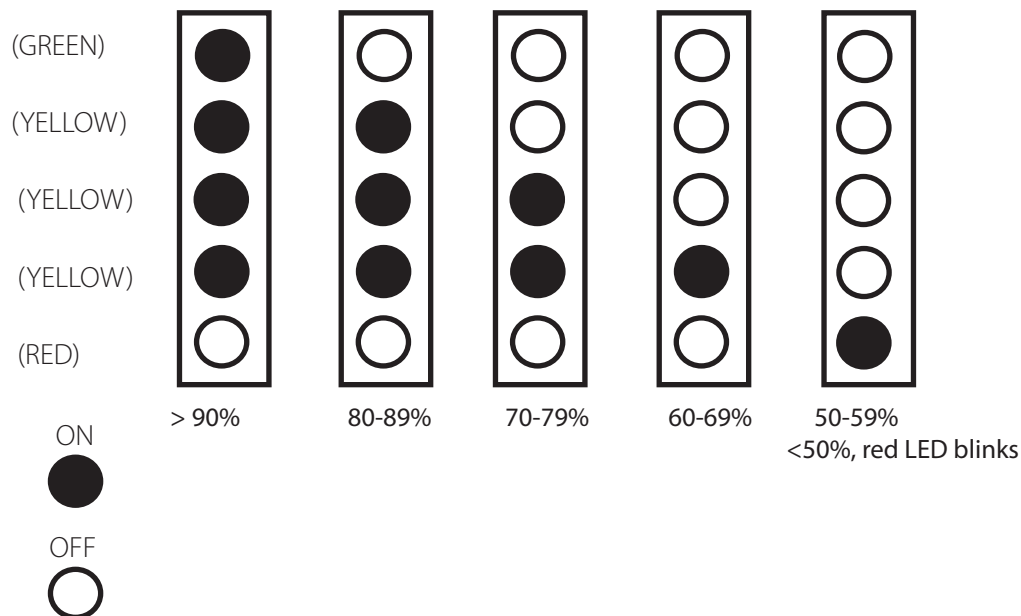

Programming the Auxiliary Relay

The FLEXNet DC's unpowered relay is rated 5 amps/30VDC.

NOTE: This relay is not fused and requires appropriate sized wiring and over-current protection. Damage due to unprotected relay devices is not covered by the warranty.

The relay may be configured in one of two modes:

1. AUTO activates the relay based on user selected battery voltage, percentage of SOC delay times and invert logic settings.
2. MANUAL allows direct relay control using the MATE, causing the relay to behave as a switch.

NOTE: When the MATE's AGS function is active, it will override the AUX set points of whichever component it has been programmed to control (this should be the AUX connected to the generator). OutBack strongly recommends using the AGS function of the MATE to control a generator.

AUTO Mode

Six user adjustable set points govern the control logic of AUTO Mode:

1. Vbat Hi (0-99.9Vdc)
2. Vbat Lo (0-99.9Vdc)
3. %SOC Hi (0-100%)
4. %SOC Lo (0-100%)
5. Hi Delay Time in Minutes (0-240 minutes)
6. Lo Delay Time in Minutes (0-240 minutes)

NOTE: Relay logic can be inverted for these set points

- If the battery voltage set points are not met, then the %SOC set points are evaluated.
- If %SOC set points are not met, then no action is taken.
- If either volts or %SOC set points are met, then the delay timer runs.
- When the set points have been satisfied for a time (either Hi Delay for the Hi set points met or Lo Delay for the Lo set points met) the relay is actuated.
- Please see pages 26-28 to set the AUX Mode.

Relay Logic:


- Expressed as NO/NC (Normally Open/Normally Closed), basically off/on
- May be controlled via the invert logic selection from the MATE.
- Toggling the relay logic setting changes the logic mode for Hi or Lo set points

Example: The relay's contacts are closed when the Hi set point is satisfied and open again when the Lo set point is achieved. However, you want the relay's contacts to be open under this condition. Toggling the invert logic set point will accomplish this. The truth table appears as follows:


Invert Logic	Hi Set Point Satisfied	Lo Set Point Satisfied
Yes	Relay Open	Relay Closed
No	Relay Closed	Relay Open

The Hi and Lo delay times are set in minutes.


MATE Screens

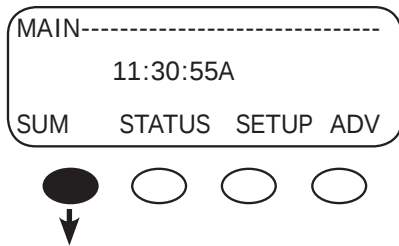


From the *MAIN* MATE menu, press the **<SUM>** soft key to view a summary of the system's operation.

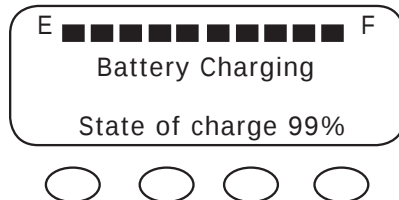

This first summary screen appears for a few seconds to display the battery *State of Charge*. The screen automatically disappears and a system summary screen appears.

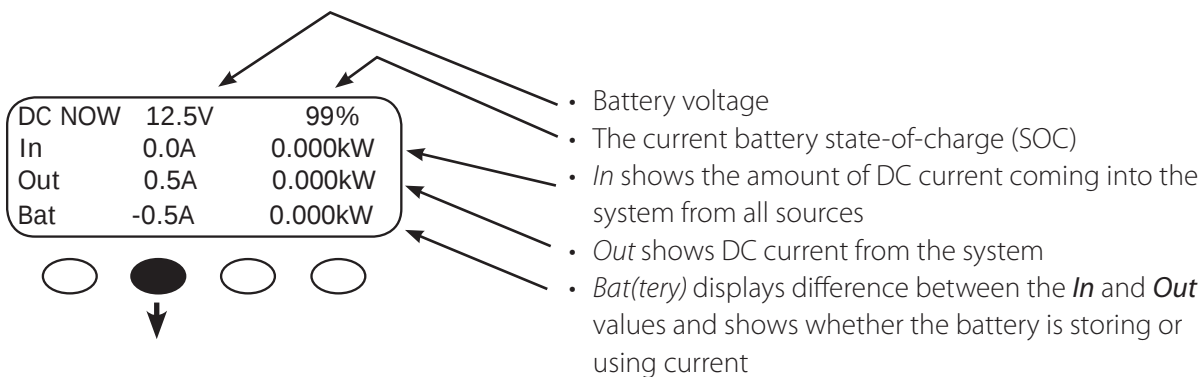

Press the second soft key to view the next *SUM* screen (the screens will also scroll automatically after a user-determined period of time programmed in the MATE).

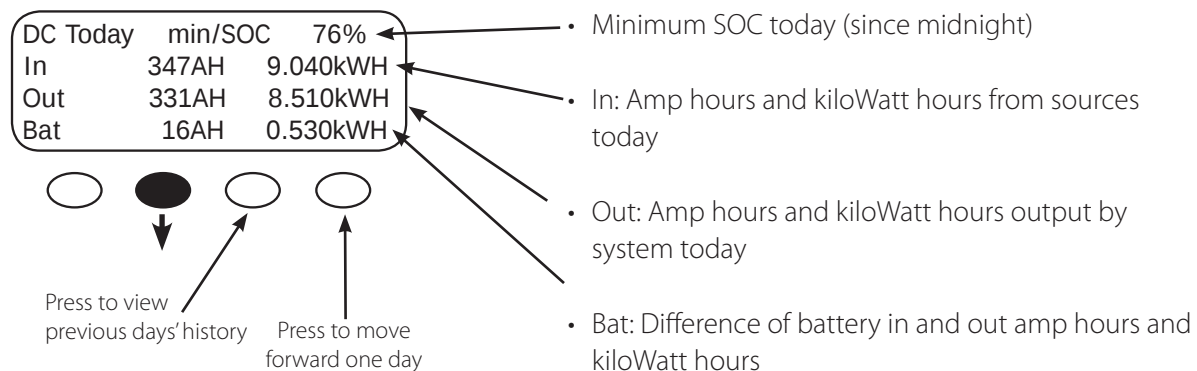

Press the second soft key to view the next *SUM* screen

FX Total	12.6V	99%
Inverting		0.000kW
AC Loads		0.000kW
Buying	\$	0.000kW



DC BAT	12.5V	99%
Bat	-0.6A	0.000kW
Net	-4AH	00.7kWH
Days Since Full		4.8



From the *MAIN* menu, press the **<SUM>** soft key to view a summary of the system's operation. This information is a sum of all FlexNet DC data. Press the second soft key to view the next *SUM* screen

The fourth *SUM* screen shows:

- Battery voltage
- The current state-of-charge
- Battery readings show the instantaneous amp, amp hour, kilowatt, and kilowatt hour figures. When comparing the amp hours reading to "FULL," the figure is charge factor compensated.
- The number of days since the battery last met the charge parameters.

Press the first soft key to return to the *MAIN* screen.

MAIN-----		11:30:55A	
SUM	STATUS	SETUP	ADV



STATUS

choose device:

FX

CC

DC

MAIN



STATUS/DC/PAGE1 -----

STATS


METER SHUNT BATT TOP




Press the **<STATUS>** soft key to open the *STATUS* screen to view the status of either the *FX*, *Charge Controller*, or (FLEXnet) *DC*

Press the **<DC>** soft key to view the status of the (FlexNet) *DC*


Press the **<METER>** soft key to view the (FlexNet) *DC* meter readings.

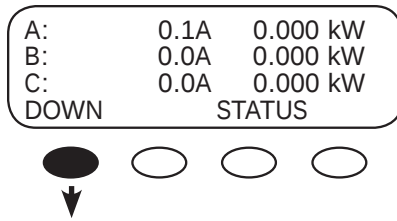


The first *METER* screen shows the amount of instantaneous current running through each shunt. A positive value indicates current flow into the battery; a negative value means a load is being supplied. Press the **<DOWN>** soft key to view the *AH* and *kWH* (amp hour and watt hour) screen.

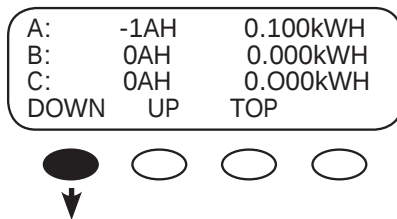


The second *METER* screen shows the accumulated amp hours and kilowatt hours for each shunt. Press the **<DOWN>** soft key to view the next *METER* screen.

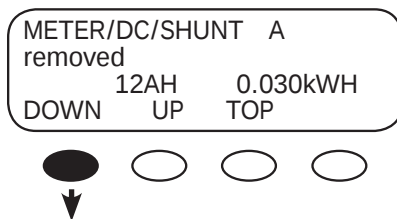


This screen shows the number of removed amp hours and watt hours as measured by SHUNT A. Press the **<DOWN>** soft key to view the *SHUNT A charged* screen.

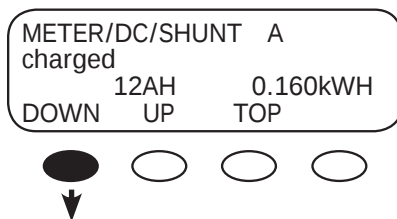


The fourth meter screen displays the number of charged amp hours and watt hours as measured by SHUNT A. Press the **<DOWN>** soft key to view the first *SHUNT B METER* screen.

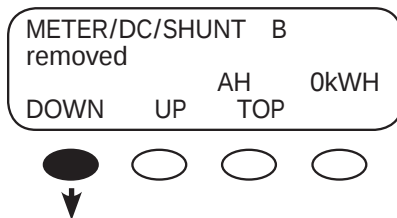


Pressing the **<DOWN>** soft key brings up the *SHUNT B charged* screen.

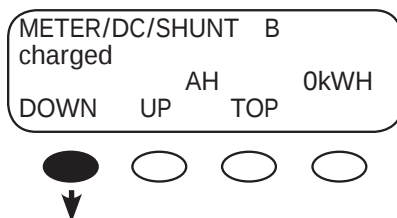


Pressing the **<DOWN>** soft key brings up the first *SHUNT C METER* screen.

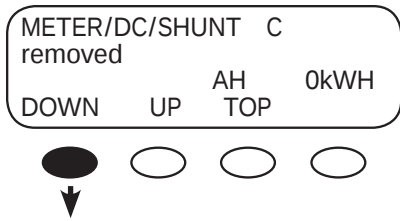


Pressing the **<DOWN>** soft key brings up the *SHUNT C charged* screen.

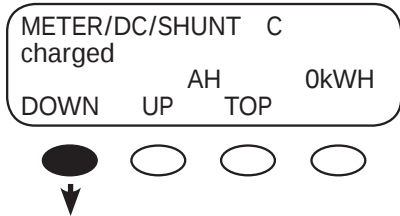


Pressing the **<DOWN>** soft key brings up the *FN firmware* screen.

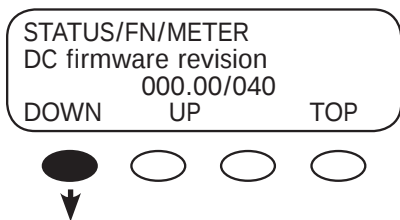


Pressing the **<DOWN>** soft key leads to the end of the meter menu

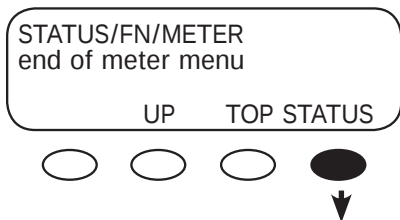


Press the **<STATUS>** soft key to return to the *STATUS* screen.

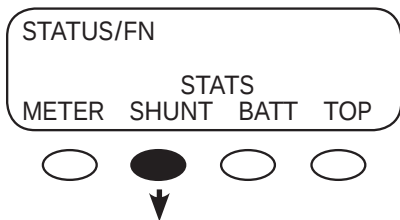


Press the **<SHUNT>** soft key to view the amps and kilowatts removed and charged in each shunt

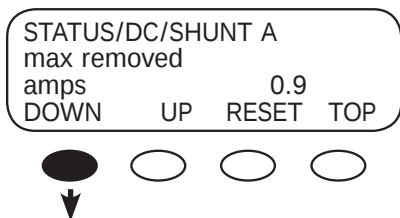


In this example, SHUNT A has detected 0.9 amps removed. Press the **<RESET>** soft key to return this value to 0. Press the **<DOWN>** soft key to continue through the menu.

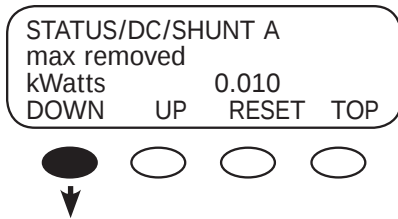

Displaying the kilowatts removed provides the user with more precise energy usage information. This figure can be returned to 0 by pressing the **<RESET>** soft key. Press the **<DOWN>** soft key to view the *max charged* screen.

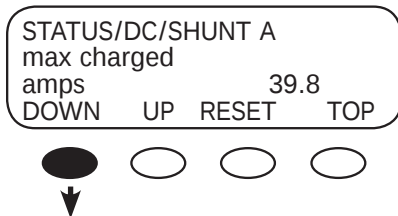


SHUNT A shows a maximum of 39.8 amps charged. Pressing the **<RESET>** soft key returns this value to 0. Press the **<DOWN>** soft key to continue in the *STATUS* menu.

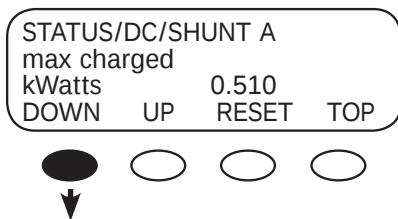


SHUNT A shows 0.510 kilowatts as the maximum charged. Pressing the **<RESET>** soft key returns this value to 0. Press the **<DOWN>** soft key to view SHUNT B and SHUNT C values. Proceed through the same steps as in SHUNT A. When finished with SHUNT C, the *end of shunt status* menu screen appears


CONTINUING TO PRESS THE **<DOWN>** SOFT KEY LEADS TO *max removed amps*, *max removed kWatts*, *max charged amps*, and *max charged kWatts* for SHUNT B and SHUNT C

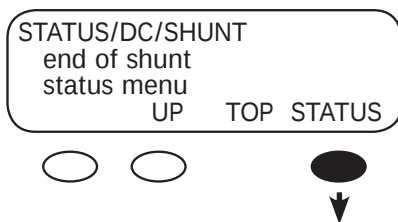


Press the **<STATUS>** soft key.

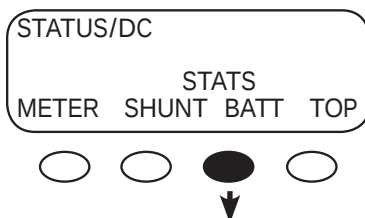

Press the **<BATT>** soft key to view the FlexNet DC battery readings

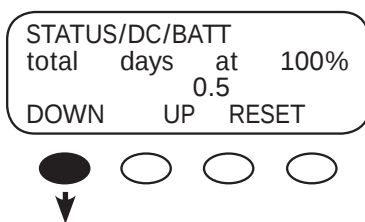

STATUS/DC/BATT displays the number of days the battery has been at 100% SOC. Press the **<RESET>** soft key to restart the timer. Press the **<DOWN>** soft key to view the next battery status screen.

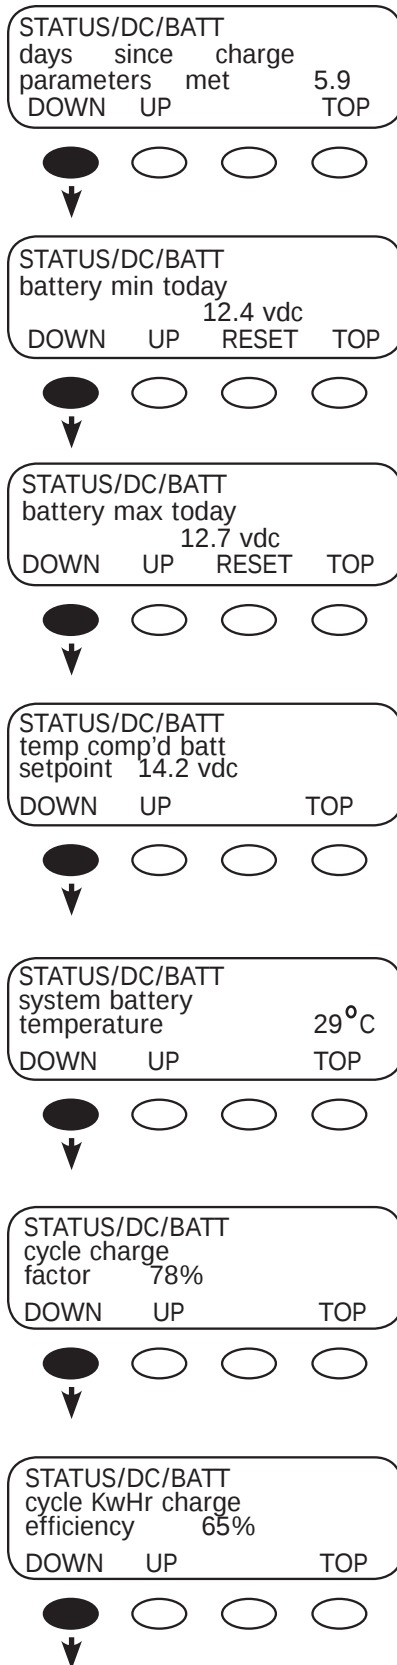

STATUS/DC/BATT provides the number of days since the battery last met its charge parameters. Press the **<RESET>** soft key to restart the timer. Press the **<DOWN>** soft key to view the next battery status screen.

battery min(imum) displays the minimum battery voltage since it was last reset by the user. Pressing the **<RESET>** soft key resets the battery minimum voltage; it also resets automatically at midnight. Press the **<DOWN>** soft key to view the next battery status screen.


battery max(imum) displays the maximum battery voltage since it was last reset by the user. Pressing the **<RESET>** soft key resets the battery maximum voltage; it also resets automatically at midnight. Press the **<DOWN>** soft key to view the next battery status screen.

temp comp'd batt setpoint shows the temperature compensated end of charge volts when a network RTS is part of the system. Press the **<DOWN>** soft key to continue.


When an RTS is present and the temperature is less than 60°C and greater than 10°C, the temperature is displayed in Celsius (C). Instead of a temperature reading, ### will appear if an RTS is not present, is damaged, or the temperature is less than 10°C or greater than 60°C. Press the **<DOWN>** soft key to continue.

cycle charge factor displays the last cycle amp hours removed and amp hours returned (as a percentage). Press the **<DOWN>** soft key to continue.


cycle KwHr charge efficiency states the last cycle kilowatt hours removed and kilowatt hours returned (as a percentage). Press the **<DOWN>** soft key to view the next screen.

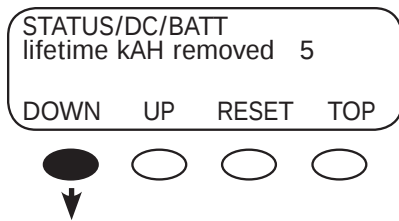


lifetime kAH removed shows the total kilowatt amp hours removed from the battery. This is essentially an “odometer” for battery usage. Press the **<DOWN>** soft key to continue.

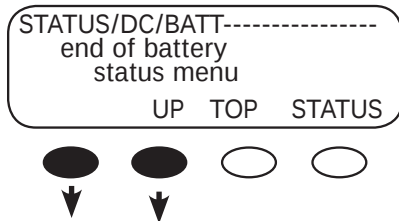


Press the first two soft keys to return to the *MAIN* menu.

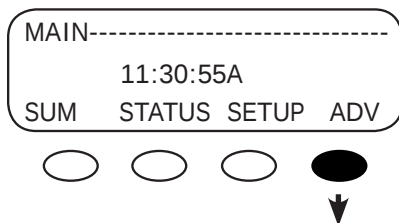


Press the **<ADV>** soft key.

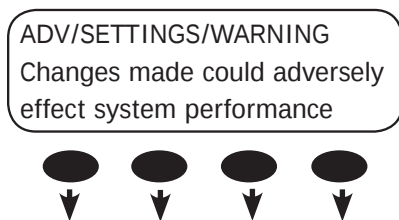


This screen acts as a warning intended to keep those unfamiliar with an OutBack system from altering the settings. Push any key to advance to the *enter the password* screen.

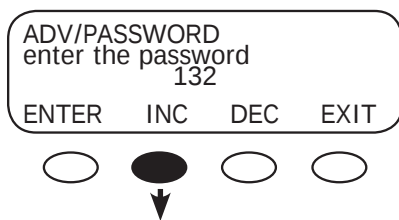


Push the **<INC>** soft key until 141 appears; this is the password.

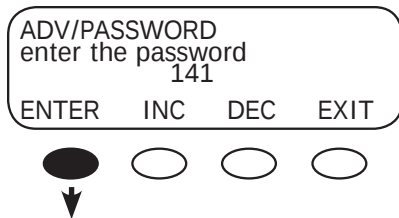


When 141 appears on the screen, press the **<ENTER>** soft key.

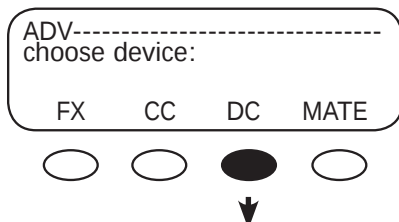


Press the **<DC>** soft key.

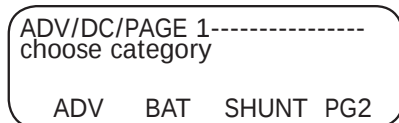


Press the **<BAT>** soft key.

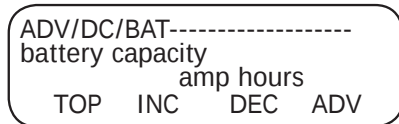

Use the battery capacity screen to set the battery bank capacity using either the **<INC>** or **<DEC>** soft key. When finished, press the **<TOP>** soft key.

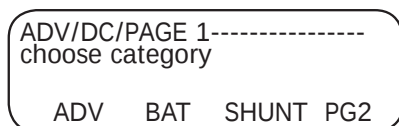


Press the **<SHUNT>** soft key.

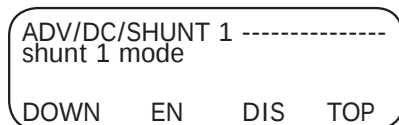


Pressing the **<DOWN>** soft key changes the shunt being enabled or disabled.


Shunt 1 is, by default, enabled or active when the FX is powered up. Pressing the **<DIS>** soft key disables the first shunt. Pressing the **<DOWN>** soft key leads to the shunt 2 mode and shunt 3 mode screens. These shunts are disabled at power-up and are enabled by pressing the **<EN>** soft key. When the setup for all shunts has been completed, press the **<DOWN>** soft key for the next screen.

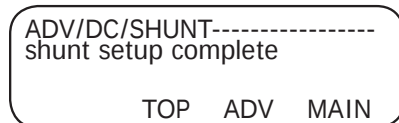

Press the **<ADV>** soft key.

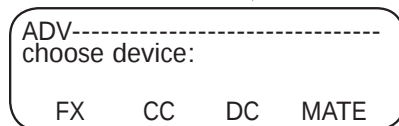

Press the **<DC>** soft key.

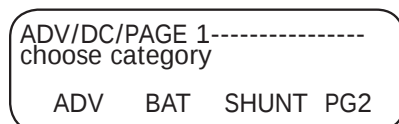

Press the **<PG2>** soft key.

ADV/DC/PAGE 2-----
choose category

PG1 CHARGE AUX PG3



ADV/DC/CHARGE-----
return amps

DOWN INC DEC TOP



ADV/DC/CHARGE-----
battery charge

DOWN INC DEC TOP



ADV/DC/CHARGE-----
parameters met time
minutes

DOWN INC DEC TOP



ADV/DC/CHARGE-----
charge factor %

DOWN INC DEC TOP



ADV/DC/CHARGE-----
charge parameters
complete

TOP ADV MAIN



ADV-----
choose device:

FX CC DC MATE



Press the **<CHARGE>** soft key.

The return amps screen allows the user to set the end of charge amps using the **<INC>** and **<DEC>** soft keys. Press the **<DOWN>** soft key to view the *battery charge* screen.

Set the end of charge voltage using the **<INC>** or **<DEC>** soft keys. Next, press the **<DOWN>** soft key.

Press the **<INC>** or **<DEC>** soft keys to determine the amount of time the charge parameters must be met before they are considered an accurate state of charge. The default period is one minute. By establishing a time, momentary spikes in voltage are accounted for. Press the **<DOWN>** soft key to view the *charge factor* screen.

Set the *charge factor* (see page 13) using the **<INC>** and **<DEC>** soft keys. When finished, press the **<DOWN>** soft key.

Press the **<ADV>** soft key.

Press the **<DC>** soft key.

ADV/DC/PAGE 1-----
choose category

ADV	BAT	SHUNT	PG2
-----	-----	-------	-----



Press the **<PG2>** soft key.

ADV/DC/PAGE 2-----
choose category:

PG1	CHARGE	AUX	PG3
-----	--------	-----	-----



Press the **<AUX>** soft key.

ADV/DC/AUX CONTROL-----
currently: Auto On

DOWN	OFF	AUTO	ON
------	-----	------	----



Pressing the **<OFF>** or **<ON>** soft keys will manually shut the AUX off (the relay is open) or turn it on (the relay is closed), respectively. In *AUTO* mode, the AUX is controlled by user-determined set points. After setting the AUX control, press the **<DOWN>** soft key.

ADV/DC/AUX HIGH VOLT-----
high volts vdc

DOWN	INC	DEC	TOP
------	-----	-----	-----



Use the *high volts* screen and the **<INC>** and **<DEC>** soft keys to control the AUX by a high voltage value. Press the **<DOWN>** soft key to view the *low volts* screen.

ADV/DC/AUX LOW VOLT-----
low volts vdc

DOWN	INC	DEC	TOP
------	-----	-----	-----



Use the *low volts* screen and the **<INC>** and **<DEC>** soft keys to control the AUX by a low voltage value. Press the **<DOWN>** soft key to view the *SOC high %* screen.

ADV/DC/AUX SOC HIGH-----
SOC high %

DOWN	INC	DEC	TOP
------	-----	-----	-----



Use the **<INC>** and **<DEC>** soft keys to change the *SOC high* percentage to trigger the AUX function. Press the **<DOWN>** soft key to view the *SOC low %* screen.

ADV/DC/AUX SOC LOW-----
SOC low %

DOWN INC DEC TOP

☒ ☐ ☐ ☐

↓

Change the *SOC low %* values using the **<INC>** and **<DEC>** soft keys. Press the **<DOWN>** soft key to continue.

ADV/DC/AUX/HI DELAY HIGH-
high setpoint delay

minutes

DOWN INC DEC TOP

☒ ☐ ☐ ☐

↓

Change the *high setpoint delay minutes* using the **<INC>** and **<DEC>** soft keys. Press the **<DOWN>** soft key to continue.

ADV/DC/AUX/LO DELAY HIGH-
low setpoint delay

minutes

DOWN INC DEC TOP

☒ ☐ ☐ ☐

↓

Set the *low setpoint delay minutes* using the **<INC>** and **<DEC>** soft keys. Press the **<DOWN>** soft key to continue.

ADV/DC/AUX/INVERT-----
invert logic

DOWN YES NO TOP

☒ ☐ ☐ ☐

↓

To activate the *invert logic* function, press the **<YES>** soft key; press the **<NO>** soft key to deactivate it. Press the **<DOWN>** soft key to view the last AUX screen.

ADV/DC/AUX-----
aux parameters
complete

TOP ADV MAIN

☐ ☐ ☒ ☐

↓

Press the **<ADV>** soft key.

ADV-----
choose device:

FX CC DC MATE

☐ ☐ ☒ ☐

↓

Press the **<DC>** soft key.


ADV/DC/PAGE 1-----
choose category

ADV BAT SHUNT PG2


☐ ☐ ☐ ☒

↓

Pressing the **<PG2>** soft key.

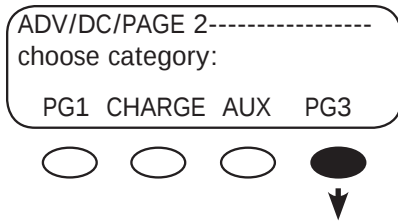

Press the **<PG3>** soft key.

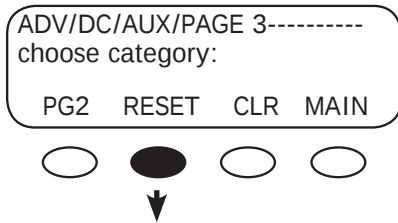

Pressing the **<RESET>** soft key resets the FLEXnet DC to its factory default settings.

Pressing the **<CLR>** soft key clears the data log memory.

Technical Notes

Battery Charge Factor (BCF)

Some energy is lost both when recharging and discharging a battery. The FLEXnet DC compensates for these losses by discounting the amp-hours charging the battery, meaning it doesn't count every hour used for recharging as actually recharging. Some of them are lost due to heat and gassing. The FLEXnet DC's default BCF is 94, which means for every 100 amp hours of charge to the battery, only 94 are shown in the amp hour display for a BCF of 94%. This means 6% of the amp hours is lost.

As the system goes through a few recharging cycles, the range of state-of-charge (SOC) percentages will vary, but should fall into a predictable range. This allows the user to change the BCF if necessary for more efficient recharging. If the SOC displays as full before the battery charge settings are met (either before the time setting or amp hour setting is satisfied), the BCF should be lowered because it's assuming too many amp hours have been recharging the battery. By lowering the BCF, the FLEXnet DC will read more hours as being unused due to inefficiency.

2-Year Limited Warranty

FLEXnet Products

OutBack Power Systems, Inc. ("OutBack") provides a two year (2) limited warranty ("Warranty") against defects in materials and workmanship for its FLEXnet products ("Products") if installed in fixed location applications.

For this Warranty to be valid, the Product purchaser must complete and submit the applicable Product registration card within ninety (90) days of the eligible Product's first retail sale. This Warranty applies to the original OutBack Product purchaser, and is transferable only if the Product remains installed in the original use location. The warranty does not apply to any Product or Product part that has been modified or damaged by the following:

- Installation or Removal;
- Alteration or Disassembly;
- Normal Wear and Tear;
- Accident or Abuse;
- Corrosion;
- Lightning;
- Repair or service provided by an unauthorized repair facility;
- Operation contrary to manufacturer product instructions;
- Fire, Floods or Acts of God;
- Shipping or Transportation;
- Incidental or consequential damage caused by other components of the power system;
- Any product whose serial number has been altered, defaced or removed; or
- Any other event not foreseeable by OutBack.

OutBack's liability for any defective Product, or any Product part, shall be limited to the repair or replacement of the Product at OutBack's discretion. OutBack does not warrant or guarantee workmanship performed by any person or firm installing its Products. This Warranty does not cover the costs of installation, removal, shipping (except as described below), or reinstallation of Products.

To request warranty service, you must contact OutBack Technical Services at (360) 435-6030 or support@outbackpower.com within the effective warranty period. If warranty service is required, OutBack will issue a Return Material Authorization (RMA) number. A request for an RMA number requires all of the following information:

1. Proof-of-purchase in the form of a copy of the original Product purchase invoice or receipt confirming the Product model number and serial number;
2. Description of the problem; and
3. Shipping address for the repaired or replacement equipment.

After receiving the RMA number, pack the Product(s) authorized for return, along with a copy of the original purchase invoice and warranty certificate, in the original Product shipping container(s) or packaging providing equivalent protection and mark the outside clearly with the RMA number. The sender must prepay all shipping charges, and insure the shipment, or accept the risk of loss or damage during shipment. OutBack is not responsible for shipping damage caused by improperly packaged Products, the repairs this damage might require, or the costs of these repairs. If, upon receipt of the Product, OutBack determines the Product is defective and that the defect is covered under the terms of this Warranty, OutBack will then and only then ship a repaired or replacement Product to the purchaser freight prepaid, non-expedited, using a carrier of OutBack's choice within the continental United States, where applicable

Shipments to other locations will be made freight collect. The warranty period of any repaired or replacement Product is twelve (12) months from the date of shipment from OutBack, or the remainder of the initial warranty term, which ever is greater.

THIS LIMITED WARRANTY IS THE EXCLUSIVE WARRANTY APPLICABLE TO OUTBACK PRODUCTS. OUTBACK EXPRESSLY DISCLAIMS ANY OTHER EXPRESS OR IMPLIED WARRANTIES OF ITS PRODUCTS, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. OUTBACK ALSO EXPRESSLY LIMITS ITS LIABILITY IN THE EVENT OF A PRODUCT DEFECT TO REPAIR OR REPLACEMENT IN ACCORDANCE WITH THE TERMS OF THIS LIMITED WARRANTY AND EXCLUDES ALL LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION ANY LIABILITY FOR PRODUCTS NOT BEING AVAILABLE FOR USE OR LOST REVENUES OR PROFITS, EVEN IF IT IS MADE AWARE OF SUCH POTENTIAL DAMAGES. SOME STATES (OR JURISDICTIONS) MAY NOT ALLOW THE EXCLUSION OR LIMITATION OF WARRANTIES OR DAMAGES, SO THE ABOVE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU.



FLEXnet™ DC Limited Warranty Registration

Complete this form to request a Limited Warranty and return it to:

Outback Power Systems Inc.
19009 62nd Ave. NE
Arlington, WA 98223

Note: A Limited Warranty Certificate will only be issued if this Registration Card is received by OutBack within 90 days of the date of the first retail sale of the eligible Product. Please submit a copy (not the original) of the Product purchase invoice, which confirms the date and location of purchase, the price paid, and the Product Model and Serial Number.

Two Year Limited FLEXnet DC Warranty Registration

System Owner

Name: _____ Country: _____
Address: _____ Telephone Number: _____
City, State, Zip Code: _____ E-mail: _____

Product

Product Model Number: _____ Sold by: _____
Product Serial Number: _____ Purchase Date: _____
Optional Extended Warranty* Coverage? (circle one): Yes No

Please circle the three most important factors affecting your purchase decision:

- Price
- Product Reputation
- Product Features
- Reputation of OutBack Power Systems
- Value

System

System Install/Commission Date: _____ Type of PV Modules: _____
System Battery Bank Size (Amp Hours): _____ System Array Size: _____
Type of Batteries: _____ System Array Nominal Voltage: _____
Please List Other sources of Back-up Power: _____

Devices Being Monitored by FLEXnet DC: _____

Installer

Installer: _____ Contractor Number: _____
Installer Address: _____ Installer City, State, Zip: _____
Installer E-mail: _____

*Extended Warranty - OutBack Power Systems offers an optional three year extension to the standard two year Limited Warranty in North America for the FLEXnet DC product. To request a 3-year Limited Warranty extension for a total effective warranty coverage period of five years(5); include a check or money order in the amount of \$50USD payable to OutBack Power Systems, Inc. along with your Warranty Registration.

Revision .2007-09-17



Corporate Office
19009 62nd Avenue NE
Arlington, WA USA
Phone: (+1) 360.435.6030

www.outbackpower.com

European Sales Office
C/ Castelló, 17
08830 - Sant Boi de Llobregat
BARCELONA, España
Phone: (+34) 93.654.9568

900-0093-01-00 REV B