

# CLICKSYS™

## ENPHASE ENERGY MICROINVERTERS INSTALLATION MANUAL v. 1.0

© 2009 by Unirac, Inc. All rights reserved.  
Pub 090731-1ii, July 2009



### IMPORTANT!

Unirac Inc. makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

The information in this document is subject to change without notice.

Unirac shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Unirac.

Unirac Inc.  
Marketing Department  
1411 Broadway Boulevard, NE  
Albuquerque, NM 87102-1545

© Unirac Inc., 2009. All rights reserved.

CLICKSYS™ is a registered trademark of Unirac Inc. in the United States of America and other countries.

### BEFORE YOU BEGIN

1 Verify that all of the components are included and consistent with your order.

2 To avoid conflicts, never modify or combine Unirac's CLICKSYS™ with components that are not made for CLICKSYS™. Doing so will void any warranty associated with CLICKSYS™.




1411 Broadway Boulevard NE  
Albuquerque NM 87102-1545 USA


[www.clicksys-beam.com](http://www.clicksys-beam.com)

# INSTALLING ENPHASE ENERGY MICROINVERTERS


**Step 1: Insert set screw through slider into 1/4" jam nut**

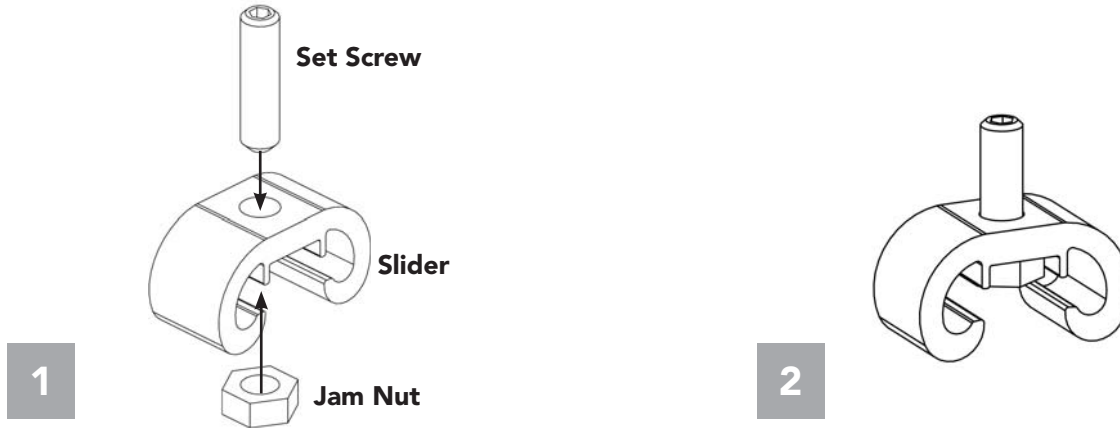


**Step 2: Slide two slider assemblies into position on the CLICKSYS beam**

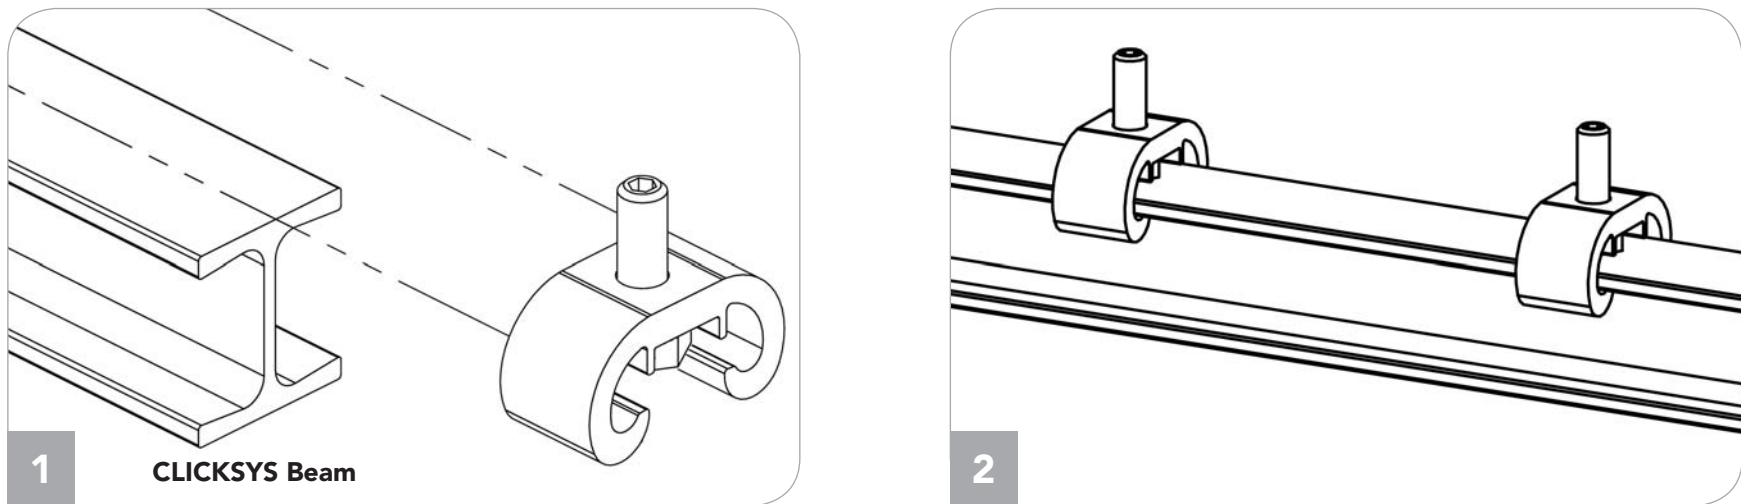


### Step 3A: Install ENPHASE MICROINVERTER on top of slider assemblies

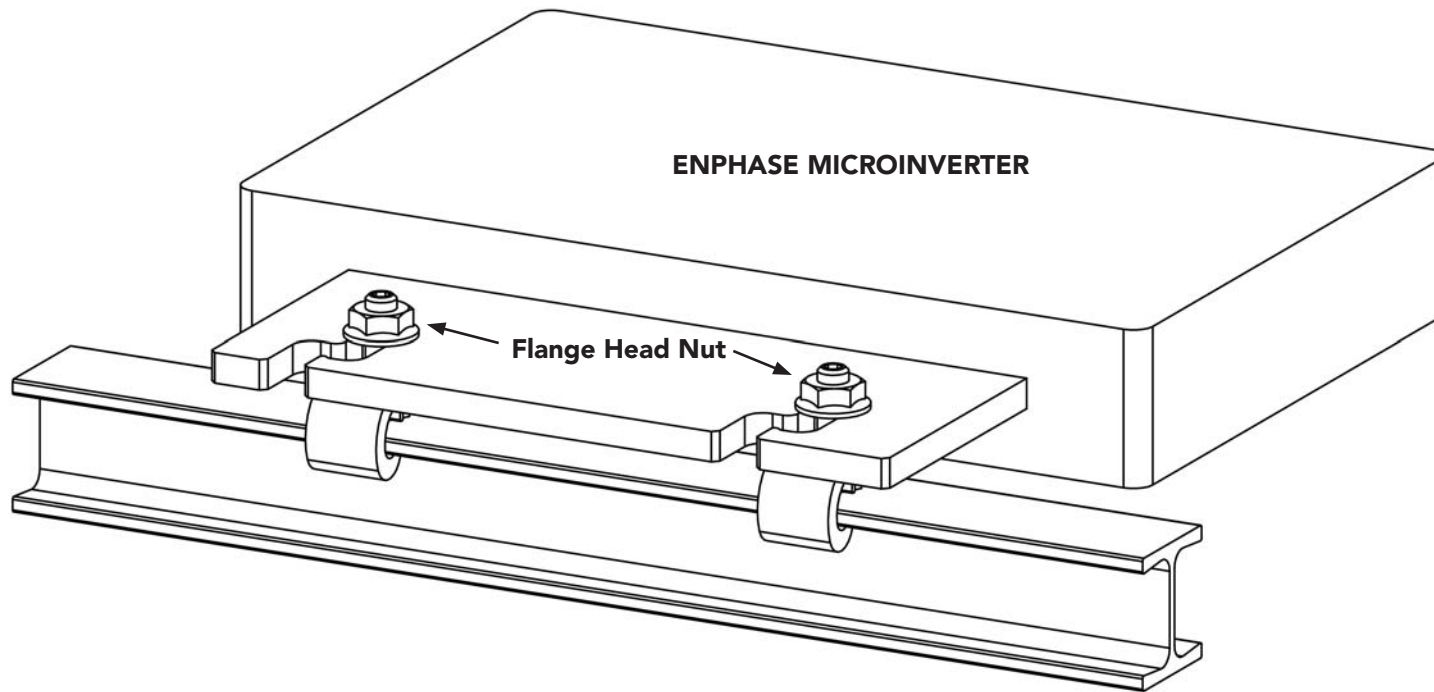

### Step 3B: Tighten set screw into the rail

 **NOTE:** Torque set screw to 5-10 ft lbs with anti-seize

### Step 3C: Install flange head nut on top of set screw

 **NOTE:** Torque flange head nut to 5-10 ft lbs with anti-seize

# WARRANTY

## 10 year limited Product Warranty

---

Unirac, Inc., warrants to the original purchaser ("Purchaser") of product(s) that it manufactures ("Product") at the original installation site that the Product shall be free from defects in material and workmanship for a period of ten (10) years, from the earlier of 1) the date the installation of the Product is completed, or 2) 30 days after the purchase of the Product by the original Purchaser.

The Warranty does not apply to any foreign residue deposited on the finish. All installations in corrosive atmospheric conditions are excluded. This Warranty does not cover damage to the Product that occurs during its shipment, storage, or installation.

This Warranty shall be VOID if installation of the Product is not performed in accordance with Unirac's written installation instructions and design specifications therein, or if the Product has been modified, repaired, or reworked in a manner not previously authorized by Unirac IN WRITING, or if the Product is installed in an environment for which it was not designed. Unirac shall not be liable for consequential, contingent or incidental damages arising out of the use of the Product by Purchaser under any circumstances.

If within the specified Warranty period the Product shall be reasonably proven to be

defective, then Unirac shall repair or replace the defective Product, or any part thereof, in Unirac's sole discretion. Such repair or replacement shall completely satisfy and discharge all of Unirac's liability with respect to this limited Warranty. Under no circumstances shall Unirac be liable for special, indirect or consequential damages arising out of or related to use by Purchaser of the Product.

Manufacturers of related items, such as PV modules and flashings, may provide written warranties of their own. Unirac's limited Warranty covers only its Product, and not any related items.

# CLICKSYS™

## ENPHASE ENERGY MICROINVERTERS INSTALLATION MANUAL v. 1.0

[www.clicksys-beam.com](http://www.clicksys-beam.com)