



# **SolarEdge**

## **StorEdge**

# **Installation Guide**

For North America  
Version 1.0

# Disclaimers

## Important Notice

---

Copyright © SolarEdge Inc. All rights reserved.

No part of this document may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photographic, magnetic or otherwise, without the prior written permission of SolarEdge Inc.

The material furnished in this document is believed to be accurate and reliable. However, SolarEdge assumes no responsibility for the use of this material. SolarEdge reserves the right to make changes to the material at any time and without notice. You may refer to the SolarEdge web site (<http://www.solaredge.us>) for the most updated version.

All company and brand products and service names are trademarks or registered trademarks of their respective holders.

Patent marking notice: see <http://www.solaredge.us/groups/patent>

The general terms and conditions of delivery of SolarEdge shall apply.

The content of these documents is continually reviewed and amended, where necessary. However, discrepancies cannot be excluded. No guarantee is made for the completeness of these documents.

The images contained in this document are for illustrative purposes only and may vary depending on product models.

## FCC Compliance

---

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance may void the user's authority to operate the equipment.

# Contents

<b>Disclaimers</b>	<b>1</b>
Important Notice	1
FCC Compliance	1
<b>Contents</b>	<b>2</b>
<b>HANDLING AND SAFETY INSTRUCTIONS</b>	<b>5</b>
SAFETY SYMBOLS	5
IMPORTANT INVERTER SAFETY INSTRUCTIONS	5
<b>Chapter 1: Overview</b>	<b>8</b>
The StorEdge Solution Components	8
Installation Workflow	9
<b>Chapter 2: Installing the Power Optimizers</b>	<b>10</b>
Safety	10
Package Contents	12
Installation Guidelines	12
Step 1: Mounting and Grounding the Power Optimizers	12
Step 2: Connecting a PV Module to a Power Optimizer	14
Step 3: Connecting Power Optimizers in Strings	15
Step 4: Verifying Proper Power Optimizer Connection	16
<b>Chapter 3: Installing the Inverter</b>	<b>17</b>
Inverter Package Contents	17
Identifying the Inverter	17
Inverter Interfaces	18
StorEdge Connection Unit Interfaces	19
Opening Conduit Knockouts	20
Mounting the Inverter	22
<b>Chapter 4: Auto-transformer and Backed-up Loads Panel Installation (for Backup Only)</b>	<b>24</b>
Mounting the Auto-transformer	25
Installing the Backed-up Loads Panel	25
<b>Chapter 5: Electricity Meter Installation</b>	<b>26</b>
<b>Chapter 6: StorEdge Inverter Connections</b>	<b>27</b>
Installing the 9V Battery	28
Connecting to DC	29
Connecting the PV Strings	29
Connecting to the Battery	30
Connecting to AC	34
Connecting to the Auto-transformer	34
Connecting to the Grid and to Backed-up Loads	36
Connecting Communication to the Meter	37
DIP Switch Setup according to System Application	38
<b>Chapter 7: User Interface</b>	<b>39</b>
LCD User Buttons	39
Removing the Inverter Cover	39
Inverter Configuration – Setup Mode	40

Configuring the Inverter Using the LCD User Buttons .....	40
Configuring the Inverter Using the LCD Light Button .....	43
Configuration Menu Options .....	45
Country and Grid .....	45
Language .....	45
Communication .....	45
Power Control .....	47
Display .....	47
Maintenance .....	48
Information .....	48
Status Screens - Operational Mode .....	49
Initial Status .....	49
Main Inverter Status .....	49
Energy Meter Status .....	50
Telemetry Status .....	50
ID Status .....	51
Server Communication Status .....	51
IP Status .....	51
ZigBee Status .....	51
Cellular Status .....	52
GSM Status .....	52
Communication Ports Status .....	52
Smart Energy Management Status .....	53
Power Control Status .....	53
Battery Status .....	54
Time Of Use Status .....	54
<b>Chapter 8: Commissioning the Installation .....</b>	<b>55</b>
Step 1: Activating the System .....	55
Step 2: Pairing Power Optimizers to the Inverter .....	58
Step 3: Verifying Proper Operation .....	60
Step 4: Reporting and Monitoring Installation Data .....	60
The SolarEdge Monitoring System .....	60
Providing Installation Information .....	61
Paper Template .....	61
Site Mapper .....	61
Creating a Site in the SolarEdge Monitoring Portal .....	61
<b>Chapter 9: System Configuration .....</b>	<b>62</b>
Configuring the RS485 Bus for Battery and Meter Connection .....	62
Configuring StorEdge Application .....	65
Maximize Self-consumption .....	65
Profile Programming (for time of use arbitrage) .....	65
Backup Power .....	65
System Configuration .....	65
Verifying StorEdge Components Functionality .....	68
<b>Chapter 10: Setting Up Communication to the Monitoring Portal .....</b>	<b>71</b>



Communication Types .....	72
Communication Connectors .....	72
Creating an Ethernet (LAN) Connection .....	73
Creating an RS485 Bus Connection .....	75
Verifying the Connection .....	78
<b>Appendix A: Troubleshooting .....</b>	<b>79</b>
Communication Troubleshooting .....	79
Device type, number and protocol are displayed incorrectly .....	79
Troubleshooting Ethernet Communication .....	79
Meter Troubleshooting .....	80
<OK> is not displayed .....	80
An error message is displayed .....	81
Total [Wh] Import value is not advancing .....	81
Battery Troubleshooting .....	82
Additional StorEdge Troubleshooting .....	82
Error Codes .....	83
General Inverter Error Codes .....	84
StorEdge-related Errors Codes .....	87
System Warnings .....	87
StorEdge Connection Unit LEDs .....	88
Power Optimizer Troubleshooting .....	88
<b>Appendix B: Replacing and Adding System Components .....</b>	<b>90</b>
Replacing an Inverter .....	90
9V Battery Replacement .....	91
Fuse Replacement .....	92
StorEdge Connection Unit Replacement .....	92
Removing the Existing StorEdge Connection Unit .....	92
Installing a New StorEdge Connection Unit .....	93

# HANDLING AND SAFETY INSTRUCTIONS

During installation, testing and inspection, adherence to all the handling and safety instructions is mandatory.

## SAFETY SYMBOLS

The following safety symbols are used in this document. Familiarize yourself with the symbols and their meaning before installing or operating the system.

### WARNING!



Denotes a hazard. It calls attention to a procedure that, if not correctly performed or adhered to, could result in **injury or loss of life**. Do not proceed beyond a warning note until the indicated conditions are fully understood and met.

*Dénote un risque: il attire l'attention sur une opération qui, si elle n'est pas faite ou suivie correctement, pourrait causer des blessures ou un danger de mort. Ne pas dépasser une telle note avant que les conditions requises soient totalement comprises et accomplies.*

### CAUTION!



Denotes a hazard. It calls attention to a procedure that, if not correctly performed or adhered to, could result in **damage or destruction of the product**. Do not proceed beyond a caution sign until the indicated conditions are fully understood and met.

*Dénote un risque: il attire l'attention sur une opération qui, si elle n'est pas faite ou suivie correctement, pourrait causer un dommage ou destruction de l'équipement. Ne pas dépasser une telle note avant que les conditions requises soient totalement comprises et accomplies.*



### NOTE

Denotes additional information about the current subject.



### IMPORTANT SAFETY FEATURE

Denotes information about safety issues.

## IMPORTANT INVERTER SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

### WARNING



**RISK OF ELECTRIC SHOCK AND FIRE.** Use this inverter only with PV modules with a maximum system voltage rating of 600V or higher.

*RISQUE DE CHOC ELECTRIQUE ET D'INCENDIE. Utilisez cet onduleur seulement avec des modules PV spécifiés pour une tension de système maximum de 600V ou plus.*

### WARNING!



The inverter cover must be opened only after shutting off the inverter ON/OFF switch located at the bottom of the inverter. This disables the DC voltage inside the inverter. Wait five minutes before opening the cover. Otherwise, there is a risk of electric shock from energy stored in the capacitors.

*Ne pas ouvrir le couvercle de l'onduleur avant d'avoir coupé l'interrupteur situé en dessous de l'onduleur. Cela supprime les tensions CC et CA de l'onduleur. Attendre que le LCD affiche une tension sécurisée (50V). Si l'affichage LCD n'est pas visible, attendre cinq minutes avant d'ouvrir le couvercle. Sinon, il y a un risque de choc électrique provenant de l'énergie stockée dans le condensateur.*

**WARNING!**

Before operating the inverter, ensure that the inverter is grounded properly.

*Avant d'utiliser l'onduleur monophasé, assurez-vous que l'onduleur est correctement mis à la terre.*

**WARNING!**

Opening the inverter and repairing or testing under power must be performed only by qualified service personnel familiar with this inverter.

*L'unité ne doit être ouverte que par un technicien qualifié dans le cadre de l'installation et de la maintenance.*

**WARNING!**

The StorEdge Connection Unit meets all requirements for a code-compliant installation of this ungrounded system. The DC section disconnects both the positive and negative conductors.

*Le sectionneur externe (inclus) répond aux exigences de conformité pour l'installation de ce système non-relé à la terre. Le coupeur CC ouvre les conducteurs positifs et négatifs.*

**WARNING!**

The inverter must be connected to a dedicated AC branch circuit with a maximum Overcurrent Protection Device (OCPD) of 40 A.

*Les onduleurs doivent être connectés à un branchement AC dédié avec un disjoncteur de 40A.*

**WARNING!**

The inverter input and output circuits are isolated from the enclosure. This system does not include an isolation transformer and should be installed with an ungrounded PV array in accordance with the requirements of NEC Articles 690.35 and 690.43 National Electric Code, ANSI/NFPA 70, 2011 (and Canadian Electrical Code, Part I, for installations in Canada).

Equipment grounding is the responsibility of the installer and must be performed in accordance with all applicable Local and National Codes.

*Les circuits d'entrée et de sortie de l'onduleur sont isolés de l'enveloppe. Ce système n'inclut pas d'isolation galvanique (transformateur) et devra être installé sans mise à la terre du champ PV et en accord avec les articles 690.35 et 690.43 du National Electric Code (NEC), ANSI/NFPA 70, 2011 (et du Code Electrique Canadien, Partie 1, pour les installations faites au Canada).*

*La mise à la terre des équipements est la responsabilité de l'installateur et doit être faite en accord avec les toutes les règles locales et nationales applicables.*

**CAUTION!**

This unit must be operated under the specified operating specifications, as described in the latest technical specification datasheet, available on the SolarEdge website at

<http://www.solaredge.us/groups/us/products/overview>.

*Cette unité doit être utilisée selon les spécifications de fonctionnement, comme décrit dans la dernière fiche technique des spécifications, disponible sur le site web de SolarEdge,*

<http://www.solaredge.us/groups/us/products/overview>.

**CAUTION!**

HEAVY OBJECT. To avoid muscle strain or back injury, use proper lifting techniques, and if required - a lifting aid when removing or replacing.

*Objet lourd. Pour éviter la fatigue musculaire ou des blessures au dos, utilisez des techniques de levage appropriées et, si nécessaire - un auxiliaire de levage lors du retrait ou du remplacement.*

**NOTE**

Use only copper conductors rated for a minimum of 75°C/167°F.

**NOTE**

This inverter is provided with an IMI (Isolation Monitor Interrupter) for ground fault protection.

**NOTE**

The symbol  $\oplus$  appears at grounding points on the SolarEdge equipment. This symbol is also used in this manual.

**WARNING!**

Shutting off the AC breaker does not disable the DC voltage inside the inverter. To obtain safe DC voltage, turn off the inverter ON/OFF switch or the StorEdge Connection Unit ON/OFF switch.

*En mode autonome, la fermeture du coupeur CA n'élimine pas la tension CC à l'intérieur de l'onduleur. Afin d'obtenir une tension CC sécurisée, mettez l'interrupteur du coupeur CC de l'onduleur ou celui du coupeur CC de l'unité StorEdge en position OFF.*

**WARNING!**

Before operating the system, ensure that the inverter has been grounded properly.

*Avant d'utiliser l'onduleur monophasé, assurez-vous que l'onduleur est correctement mis à la terre.*

**WARNING!**

When handling the battery, adhere to all manufacturer safety instructions.

*Durant la manipulation de la batterie, adhérez à toutes les instructions de sécurité du fabricant.*

**CAUTION!**

This unit must be operated under the specified operating conditions as described in the technical specifications supplied with the unit.

*Cette unité doit être opérée suivant les instructions trouvées dans le manuel fourni avec le produit.*

**NOTE**

The battery used must be NRTL certified.

**NOTE**

For battery decommissioning and disposal, follow the manufacturer requirements and instructions.

**NOTE**

The StorEdge Connection Unit is NEMA type 3R rated. Unused conduit openings and glands should be sealed with appropriate seals.

# Chapter 1: Overview

StorEdge™ is SolarEdge's all-in-one solution that uses a single on-grid DC optimized inverter to manage and monitor both solar power generation and energy storage. Homeowners are automatically provided with backup power in the event of grid interruption to power pre-selected loads. Solar energy can be stored in a battery for Smart Energy Management applications such as export control, offering demand response and peak shaving, and performing time of use shifting for reduced electric bills.

## The StorEdge Solution Components

- **The StorEdge Inverter with StorEdge Connection Unit** - The inverter manages battery and system energy, in addition to its traditional functionality as a DC-optimized PV inverter.

The StorEdge Connection Unit, located at the bottom of the inverter, allows simple installation and connectivity to other system components and includes a DC Safety Switch.

- **The SolarEdge Electricity Meter** - The meter is used by the inverter for export/ consumption readings, and for Smart Energy Management applications, such as: export limitation, time-of-use profile programming and maximizing self-consumption.

The meter is required only in systems using Smart Energy Management applications (it is not required for StorEdge systems used only for backup power).

- **The Auto-transformer** - The auto-transformer handles the phase load balancing. It is required only in systems providing backup power.
- **The Battery** - A DC coupled battery designed to work with the SolarEdge system.

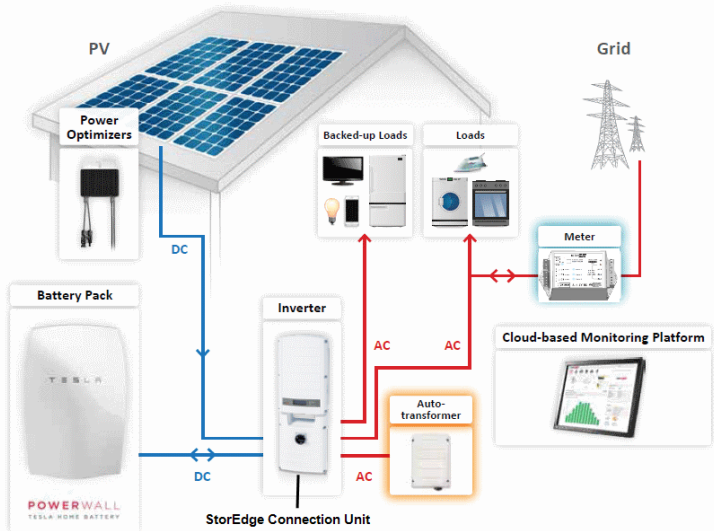


Figure 1: StorEdge system components

### NOTE

- Additional SolarEdge inverters (without batteries) can be connected with RS485. The inverters will participate in export limitation and maximizing self-consumption (Maximizing self-consumption for multiple inverters supported from Q2 2016). Connecting multiple inverters with RS485 master-slave connection requires an *RS485 Expansion Kit* (available from SolarEdge).
- PV modules connected to power optimizers are not mandatory for Time of Use (TOU) profile programming and for backup power.

## Installation Workflow

When installing the StorEdge system, follow this workflow to ensure all the components are connected and functioning correctly.

**Step 1 - PV system installation** - modules, power optimizers and inverter:

- Power optimizers - as described in *Installing the Power Optimizers* on page 10.
- Inverter - as described in *Installing the Inverter* on page 17.

**Step 2 - SolarEdge Auto-transformer and AC load panel installation (required for Backup Power only):** Refer to *Auto-transformer and Backed-up Loads Panel Installation (for Backup Only)* on page 24.

**Step 3 - Electricity Meter installation (required for Smart Energy Management):** Refer to *Electricity Meter Installation* on page 26.

**Step 4 - Connect the battery to the inverter and mount the battery**<sup>1</sup>. Refer to the installation information in the manufacturer documentation, and to *StorEdge Inverter Connections* on page 27.


**Step 5 - Connect all components to the inverter** - connect the auto transformer and loads (AC), PV strings (DC), and meter. Refer to *StorEdge Inverter Connections* on page 27.

**Step 6 - Commissioning the inverter** - Activate the system and pair the power optimizers. Refer to *Commissioning the Installation* on page 55.

**Step 7 - Configuring the StorEdge application.** Refer to *Configuring StorEdge Application* on page 65.


**Step 8 - Connecting communication between the inverter and monitoring portal.** Refer to *Setting Up Communication to the Monitoring Portal* on page 71.

The following flowchart appears throughout this Installation Guide to assist with the installation steps:

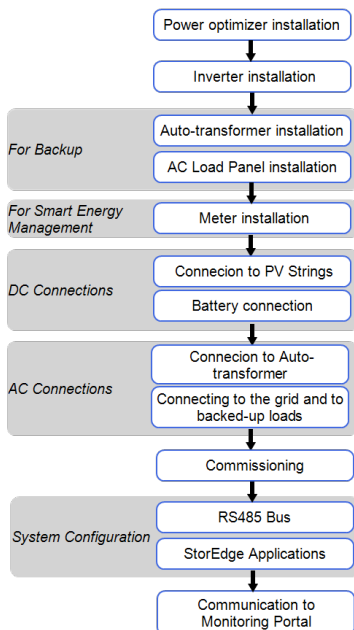

<sup>1</sup>To gain better accessibility to the battery connection panel, it is recommended to connect the battery cables *before* mounting it on the wall.

# Chapter 2: Installing the Power Optimizers

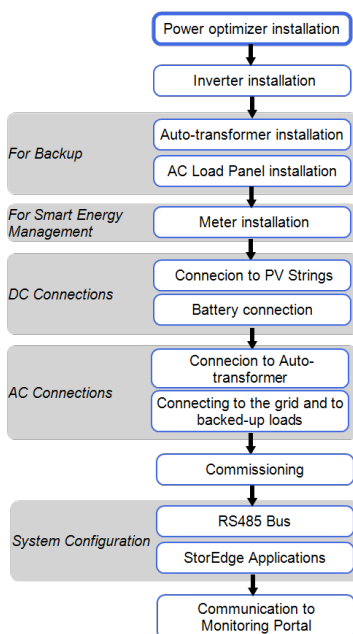

## Safety

The following notes and warnings apply when installing the power optimizers. modules:



### WARNING!

When modifying an existing installation, turn OFF the inverter ON/OFF switch, the StorEdge Connection Unit Safety Switch and the AC circuit breaker on the main AC distribution panel.

*Avant de faire ces étapes, éteignez l'onduleur monophasé en mettant sur OFF l'interrupteur ON/OFF situé au bas de l'onduleur.*



### WARNING!

Input and output connectors are not watertight until mated. Open connectors should be mated to each other or plugged with appropriate watertight caps.

*Les connecteurs d'entrée et sortie ne sont pas étanches jusqu'à ce qu'ils soient accouplés. Les connecteurs doivent être accouplés ou fermés avec des terminaux étanches.*



### CAUTION!

This unit must be operated according to the operating specifications provided with the unit.

*Cette unité doit être opérée suivant les instructions trouvées dans le manuel fourni avec le produit.*



### CAUTION!

Cutting the power optimizer input or output cable connector is prohibited and will void the warranty.

Sectionner les câbles d'entrées ou de sortie de l'optimiseur est interdit et annule sa garantie.



### CAUTION!

Power optimizers are IP65/NEMA4 rated. Choose a mounting location where optimizers will not be submerged in water.

*Les optimiseurs de puissances sont compatibles à la norme IP65/NEMA4. Choisissez le lieu de montage tel que l'optimiseur ne puisse pas être submergé par l'eau.*



### CAUTION!

All PV modules must be connected to a power optimizer.

*Tous les modules doivent être connectés à un optimiseur de puissance.*



### CAUTION!

If you intend to mount the optimizers directly to the module or module frame, first consult the module manufacturer for guidance regarding the mounting location and the impact, if any, on module warranty. Drilling holes in the module frame should be done according to the module manufacturer instructions.

*Pour installation à même le module ou la monture du module, consultez d'abord le fabricant du module sur la position et son impact sur la garantie du module. Le perçage de trous dans le cadre du module devra se faire suivant les instructions du fabricant.*



### CAUTION!

Installing a SolarEdge system without ensuring compatibility of the module connectors with the optimizer connectors may be unsafe and could cause functionality problems such as ground faults, resulting in inverter shut down. In order to ensure mechanical compatibility of the SolarEdge optimizers and the modules to which they are connected:

- Use identical connectors from the same manufacturer and of the same type on both the power optimizers and on the modules; or
- Verify that the connectors are compatible in the following way:
  - The connector manufacturer should explicitly verify compatibility with the SolarEdge optimizer connector; and
  - A third-party test report by one of the listed external labs (TUV, VDE, Bureau Veritas UL, CSA, Intertek) should be obtained, verifying the compatibility of the connectors.

*Les connecteurs du module doivent être mécaniquement compatibles avec les optimiseurs de puissance. Sinon, le système SolarEdge installé peut être dangereux ou causer des problèmes fonctionnels, tels que les défauts de terre, qui peuvent provoquer un arrêt de l'onduleur. Afin d'assurer la compatibilité mécanique entre les optimiseurs de puissance SolarEdge et les modules auxquels ils sont connectés, il faut :*

- *Utiliser des connecteurs identiques du même fabricant et du même type aussi bien pour les optimiseurs de puissance que pour les modules.*
- *Vérifiez que les connecteurs sont compatibles de la manière suivante:*
  - *Le fabricant du connecteur doit explicitement vérifier la compatibilité avec le connecteur SolarEdge.*
  - *Un rapport de test de tierce partie doit être effectué par l'un des laboratoires externes indiqués ci-dessous: (TUV, VDE, Bureau Veritas UL, CSA, Intertek), qui vérifiera la compatibilité des connecteurs.*



### IMPORTANT SAFETY FEATURE

Modules with SolarEdge power optimizers are safe. They carry only a low safety voltage before the inverter is turned ON. As long as the power optimizers are not connected to the inverter or the inverter is turned OFF, each power optimizer will output a safe voltage of 1V.



## Package Contents

- Power optimizers
- Stainless steel grounding lock washers

## Installation Guidelines

- The steps in this chapter refer to module add-on power optimizers. For smart modules, start from *Step 3: Connecting Power Optimizers in Strings* on page 15. Also refer to the documentation supplied with the smart modules.
- The power optimizer can be placed in any orientation.
- Position the power optimizer close enough to its module so that their cables can be connected.
- To allow for heat dissipation, maintain a 2.5 cm/ 1" clearance distance between the power optimizer and other surfaces.
- The minimum and maximum string length guidelines are stated in the power optimizer datasheets.
- Refer to the SolarEdge Site Designer for string length verification. The SolarEdge Site Designer is available on the SolarEdge website at <http://www.solaredge.us/groups/support/downloads>, under Software Tools.
- Completely shaded modules may cause their power optimizers to temporarily shut down. This will not affect the performance of the other power optimizers in the string, as long as the minimum number of unshaded power optimizers connected in a string of modules is met. If under typical conditions fewer than the minimum optimizers are connected to unshaded modules, add more optimizers to the string.
- Do not leave the power optimizers connectors disconnected. Open connectors should be mated to each other.
- Equipment grounding tightening torques: 4-6 AWG: 45 lb-in, 8 AWG: 40 lb-in, 10-14 AWG: 35 lb-in.



### NOTE

The images contained in the following sections are for illustrative purposes only and may vary depending on product models.

## Step 1: Mounting and Grounding the Power Optimizers

For each of the power optimizers<sup>1</sup>:

1. Determine the power optimizer mounting location and use the power optimizer mounting brackets to attach the power optimizer to the support structure (See Figure 2). For frame-mounted power optimizers follow the instructions supplied with the optimizers.
2. If required, mark the mounting hole locations and drill the hole.



### CAUTION!

Do not drill through the power optimizer or through the mounting holes. The drilling vibrations can damage the power optimizer and will void the warranty.

*Ne pas percer à travers la optimiseur de puissance ou ses trous de fixation. Les vibrations qui en résulteraient peuvent endommager la optimiseur de puissance.*

<sup>1</sup>Not applicable to smart modules.


3. Attach each power optimizer to the rack using the M6 (1/4") stainless steel bolts, nuts and washers. Apply torque of 9.5 N\*m / 7 lb\*ft. For 3NA series power optimizers, SolarEdge recommends mounting the power optimizer on a rail with the smooth side facing out, so that the power optimizer body will prevent its rotation.
4. Use the following methods to ground the power optimizer<sup>1</sup>:

**WARNING!**

The metallic enclosure of the power optimizer must be grounded in accordance with the requirements of the local and national codes.


*L'enceinte métallique de l'optimiseur de puissance doit être mise à la terre en accord avec les réglementations locales et nationales.*

- **For mounting on a grounded metal rail:** Use the provided 5/16" stainless steel grounding star washer between the railing and the flat side of the mounting bracket. The grounding washer should break through the anodize coating of the railing to ensure low resistive connection. Apply torque of 9.5 N\*m / 7 lb\*ft.

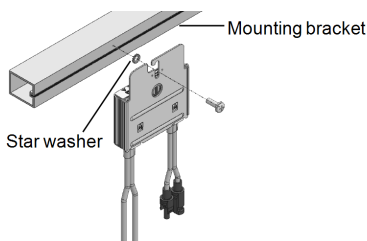

**Figure 2: Power optimizer installation and grounding using a star washer**

- **For mounting on rails with sliding nut fasteners:** If the star washer cannot be used, use the SolarEdge grounding plate (purchased separately) between the railing and the flat side of the mounting bracket. Apply torque of 9.5 N\*m / 7 lb\*ft.

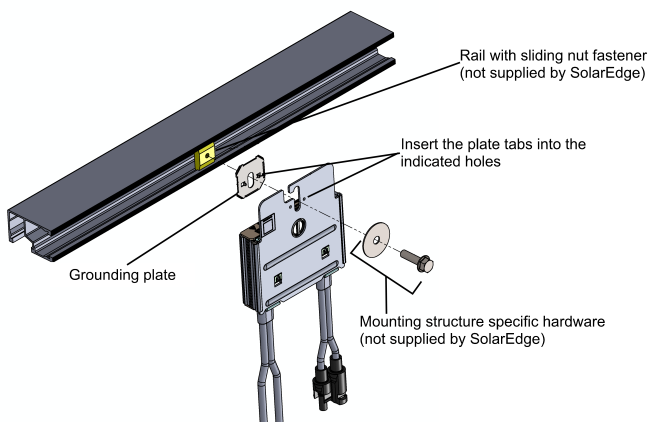

**Figure 3: Power optimizer installation and grounding using a grounding plate**

<sup>1</sup>For a list of racking models and their appropriate grounding method, refer to [http://www.solaredge.us/files/pdfs/grounding\\_se\\_power\\_optimizers.pdf](http://www.solaredge.us/files/pdfs/grounding_se_power_optimizers.pdf).

- **For mounting on un-grounded structures** (such as a wooden structure): If the star washer or the plate cannot be used, use the SolarEdge grounding lug (purchased separately) with an equipment-grounding conductor according to the supplied instructions. The grounding terminal accepts a wire size of 6-14 AWG, and must be sized for equipment grounding per NEC 250.122 requirements. Tighten the screws connecting the power optimizer to the frame and the grounding terminal screw. Apply torque of 9.5 N\*m / 7 lb\*ft.

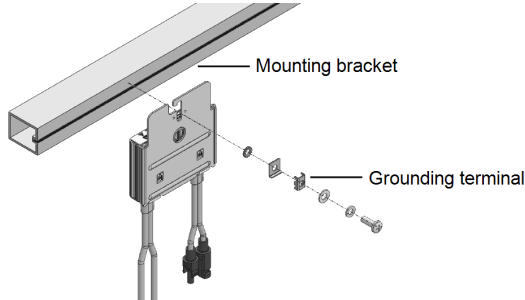


Figure 4: Power optimizer grounding terminal

5. Verify that each power optimizer is securely attached to the supporting structure or the module.

**NOTE**

Record power optimizer serial numbers and locations, as described in *Providing Installation Information* on page 61.

## Step 2: Connecting a PV Module to a Power Optimizer

For each of the power optimizers<sup>1</sup>:

- Connect the Plus (+) output connector of the module to the Plus (+) input connector of the power optimizer.
- Connect the Minus (-) output connector of the module to the Minus (-) input connector of the power optimizer.

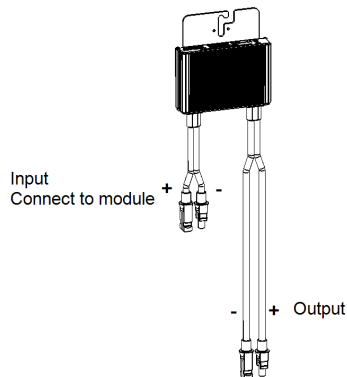


Figure 5: Power optimizer connectors

<sup>1</sup>Not applicable to smart modules.

**NOTE**

Images are for illustration purposes only. Refer to the label on the product to identify the plus and minus input and output connectors.


## Step 3: Connecting Power Optimizers in Strings

You can construct parallel strings of unequal length, that is, the number of power optimizers in each string does not have to be the same. The minimum and maximum string lengths are specified in the power optimizer datasheets. Refer to the SolarEdge Site Designer for string length verification.

**NOTE**

The total cable length of the string (including power optimizers' cables) should not exceed 1000ft./300m from DC+ to DC- of the inverter. Use at least 11 AWG/ 4 mm<sup>2</sup> DC cables.

1. Connect the Minus (-) output connector of the string's first power optimizer to the Plus (+) output connector of the string's second power optimizer.
2. Connect the rest of the power optimizers in the string in the same manner.

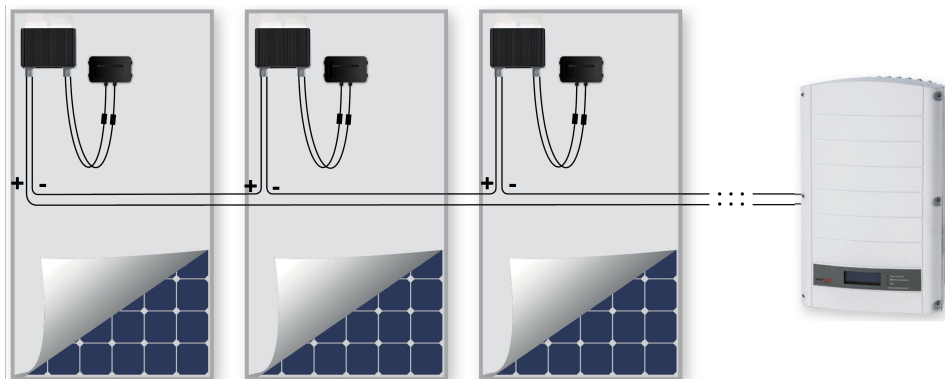

**Figure 6: Power optimizers connected in series**

3. If you intend to monitor the installation, using the SolarEdge monitoring portal, record the physical location of each power optimizer, as described in *Providing Installation Information* on page 61.

**WARNING!**

Input and output connectors are not watertight until mated. Open connectors should be mated to each other or plugged with appropriate watertight caps.

*Les connecteurs d'entrée et sortie ne sont pas étanches jusqu'à ce qu'ils soient accouplés. Les connecteurs doivent être accouplés ou fermés avec des terminaux étanches.*

## Step 4: Verifying Proper Power Optimizer Connection

After a module is connected to a power optimizer, the power optimizer outputs a safe voltage of 1V. Therefore, the total string voltage should be equal to 1V times the number of power optimizers connected in series in the string. For example, if 10 power optimizers are connected in a string, then 10V should be produced.

Make sure the modules are exposed to sunlight during this process; otherwise, the power optimizers may not be powered. If you use a tracker, the power optimizer will turn ON only if the tracker is tracking the sun and the module provides at least 2W.

In SolarEdge systems, due to the introduction of power optimizers between the PV modules and the inverter, the short circuit current  $I_{SC}$  and the open circuit voltage  $V_{OC}$  hold different meanings from those in traditional systems.

For more information about the SolarEdge system's string voltage and current, refer to the  $V_{OC}$  and  $I_{SC}$  in *SolarEdge Systems Technical Note*, available on the SolarEdge website at:

[http://www.solaredge.us/files/pdfs/isc\\_and\\_voc\\_in\\_solaredge\\_systems\\_technical\\_note.pdf](http://www.solaredge.us/files/pdfs/isc_and_voc_in_solaredge_systems_technical_note.pdf)


### ► To verify proper power optimizers connection:

Measure the voltage of each string individually before connecting it to the other strings or to the inverter. Verify correct polarity by measuring the string polarity with a voltmeter. Use a voltmeter with at least 0.1V measurement accuracy.

For troubleshooting power optimizer operation problems, refer to *Power Optimizer Troubleshooting* on page 88.

## Chapter 3: Installing the Inverter

Install the inverter either before or after the modules and power optimizers have been installed.

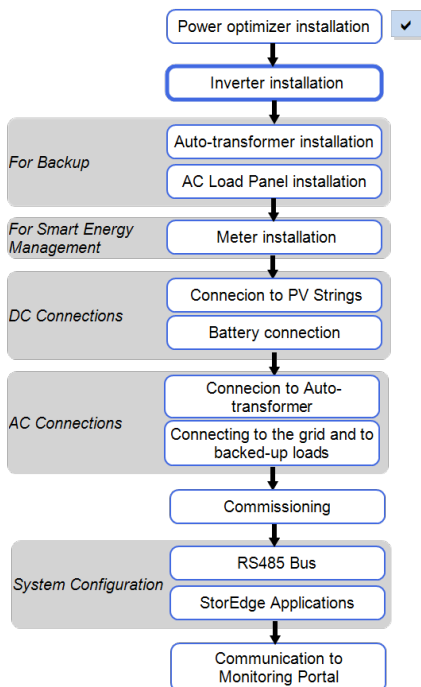

### Inverter Package Contents

- One StorEdge inverter
- One mounting bracket
- Two Allen screws for fastening the inverter to the mounting bracket
- Installation guide (with activation card and instructions)

### Identifying the Inverter

Refer to the sticker on the inverter that specifies its **Serial Number** and its **Electrical Ratings**. Provide the serial number when contacting SolarEdge support. The serial number is also required when opening a new site in the SolarEdge monitoring portal.

# Inverter Interfaces

The following figure shows the inverter connectors and components, located at the bottom of the inverter.


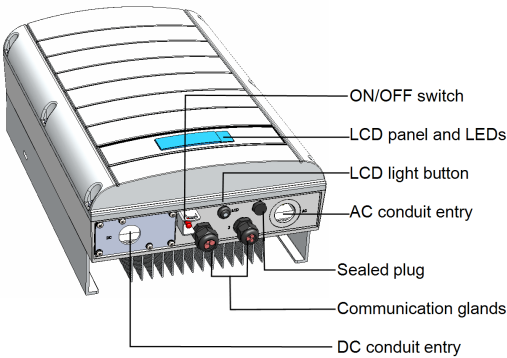


Figure 7: Inverter Interfaces

- **LCD panel:** displays inverter information and configuration parameters
- **LCD LEDs:** Three LEDs indicate the following inverter statuses:

Color	Description	Functionality
Green	Power production	<b>On</b> - The inverter is producing power. <b>Blinking</b> - Standby mode. The inverter is in Standby mode until its working voltage is reached. The inverter then enters Production mode and produces power. <b>Off</b> - The inverter is not producing power. This may be during Night mode, when the inverter ON/OFF switch is OFF or when an error occurs.
Yellow	Module communication and inverter shutdown	<b>Blinking:</b> <ul style="list-style-type: none"><li>◦ Monitoring information is being received from a power optimizer.</li><li>◦ The inverter is being shut down.</li></ul>
Red	Fault	<b>On</b> - There is an error. Refer to "Troubleshooting" on page 79 for more information. <b>Blinking</b> - The inverter is being shut down.

All LEDs turn on while the inverter is being configured.

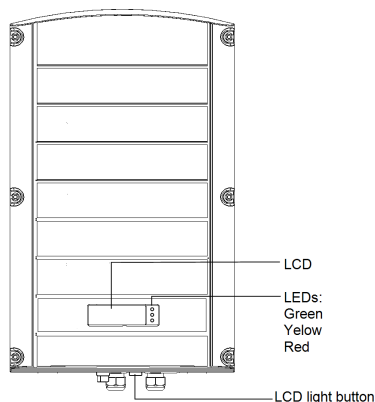


**Figure 8: Inverter front view**

- **AC and DC conduit entries:** Connection points of the StorEdge Connection Unit.
- **ON/OFF switch:** Turning this switch ON starts the operation of the power optimizers, enables power production and allows the inverter to begin exporting power to the utility grid/backed-up loads. Turning it OFF reduces the power optimizer voltage to a low safety voltage and inhibits exportation of power. When this switch is OFF, the inverter control circuitry remains powered up.
- **LCD light button:** Pressing this button lights up the LCD for 30 seconds. In addition, you can press this button to access configuration menu options, as described *Configuring the Inverter Using the LCD Light Button* on page 43.
- **Two communication glands,** for connection of inverter communication options. Each gland has three openings. Refer to *Setting Up Communication to the Monitoring Portal* on page 71 for more information.

## StorEdge Connection Unit Interfaces

The following components are part of the StorEdge Connection Unit and may be accessed for troubleshooting or maintenance.

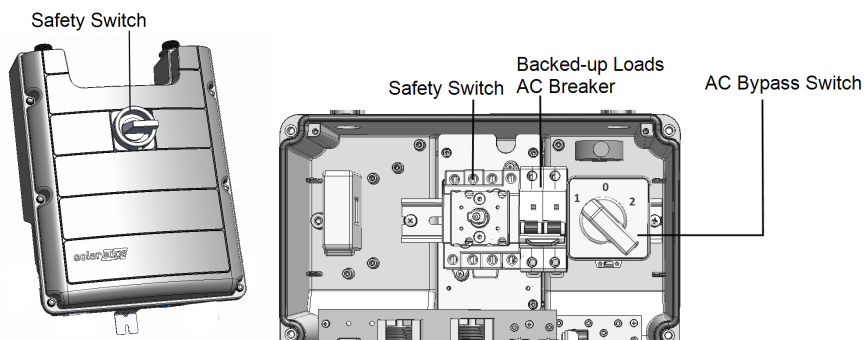

**Figure 9: StorEdge Connection Unit**



- **Safety Switch:** disconnects both the positive and negative conductors of the PV and the positive and negative conductors of the battery.
- **Backed-up Loads AC Breaker:** Main AC breaker for the backed-up loads. Ensure this breaker is UP before starting up the system.
- **Bypass Switch:** This switch bypasses the inverter functionality in case of inverter malfunction. Maintaining power to the backed-up loads is enabled by connecting the loads directly to the grid.

There are three switch positions. The following table describes the functionality and use of each position:

Switch position	Use Case	Functionality
1 (left)	Normal operation	Use this mode at normal operation. The backed-up loads panel is connected through the software controlled switches to the AC grid (during normal operation), or to the inverter (via auto-transformer, for backup power).
2 (right)	AC bypass	Using this mode disables the backup functionality. The backed-up loads panel is connected directly to the AC grid through the bypass switch. Use in case of inverter malfunction.
0	Not in use	Same as 2.

## Opening Conduit Knockouts

This step may be performed after or before mounting the inverter.

The knockouts for AC grid, PV DC and battery DC are already open. If required, use this procedure for opening additional knockouts.

For *AC connections* you can use one of the following conduit openings options:

- Option 1 - Connect the AC grid and backup loads wires using the AC opening (knockout already open; no need to open an additional knockout). In this case use minimum 1" conduit for inserting all wires.
- Option 2 - Use two separate conduits: minimum 1" conduit for the AC grid connection and 3/4" conduit for the load backup connection. In this case, an additional knockout should be opened for the backed-up loads.

### ▶ To open conduit knockouts:

1. Move the StorEdge Connection Unit safety switch and the inverter ON/OFF switch to OFF.

#### NOTE

When the StorEdge Connection Unit safety switch is OFF (for example during maintenance) it may be locked to prevent safety hazard:


1. Move the StorEdge Connection Unit safety switch to the Lock position.
2. Insert the lock through the knob opening and lock.



Lock here




2. Loosen the screws on the front cover of the StorEdge Connection Unit using the supplied Allen key, as shown below:

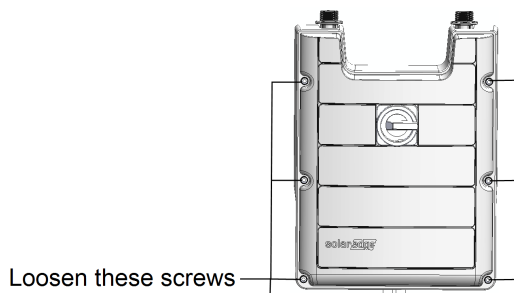

**Figure 10: Opening the StorEdge Connection Unit cover**

3. Remove the StorEdge Connection Unit cover.
4. Open the required conduit knockouts according to the conduits used in the installation (refer to the figure below for required knockouts; some of the knockouts may already be open but sealed): The knockouts are located at the bottom of the enclosure, each with two sizes:  $\frac{3}{4}$ " and 1". Open the required knockouts, taking care not to interfere with any of the internal components. A Unibit drill may be used.

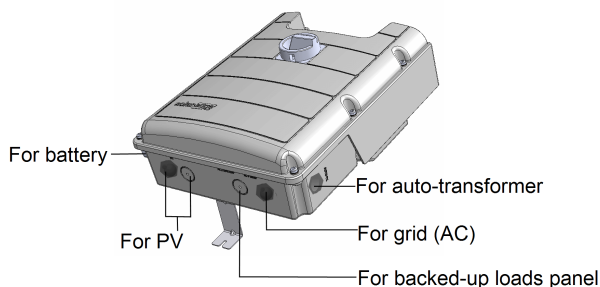

**Figure 11: StorEdge Connection Unit knockouts**



**NOTE**

Unused conduit openings and glands should be sealed with appropriate seals.

## Mounting the Inverter



### NOTE

Make sure the mounting surface or structure can support the weight of the inverter, and make sure that it spans the width of the bracket.



### CAUTION!

**HEAVY OBJECT.** To avoid muscle strain or back injury, use proper lifting techniques, and if required - a lifting aid when removing or replacing.


*Objet lourd. Pour éviter la fatigue musculaire ou des blessures au dos, utilisez des techniques de levage appropriées et, si nécessaire - un auxiliaire de levage lors du retrait ou du remplacement.*

1. Determine the inverter mounting location, on a wall, stud framing or pole. To allow proper heat dissipation, maintain the following minimum clearance areas between the inverter and other objects:
  - If installing a single inverter:
    - 8" (20 cm) to the top of the inverter.
    - At least 8" (20 cm) to the bottom of the StorEdge Connection Unit; if conduit entry to the StorEdge Connection Unit will be from the bottom, leave sufficient clearance for the conduits as well.
    - 4" (10 cm) to the right and left of the inverter.
  - If installing multiple inverters:
    - When installing inverters one above the other, leave at least 8" (20 cm) between the top of an inverter and the bottom of a StorEdge Connection Unit.
    - When installing inverters side by side, leave 20 cm / 8" between inverters.
2. Position the mounting bracket against the wall/pole and mark the drilling hole locations :
  - Ensure that the flat side of the bracket is at the bottom, as in *Figure 12*.
  - Use at least two bracket holes. Additional holes can be used to fix the bracket. Determine which and how many holes to use according to mounting surface type and material.
3. Drill the holes and mount the bracket. Verify that the bracket is firmly attached to the mounting surface.




### NOTE

When mounting an inverter on an uneven surface, you may use spacers/ washers behind the top mounting hole of the bracket (see ). Depending on the angle, use the appropriate size and number of spacers so that the bracket is perpendicular to the ground. Recommended: a stainless steel 3/4" long screw, with a 1/4" socket button head, two jam nuts and three washers.

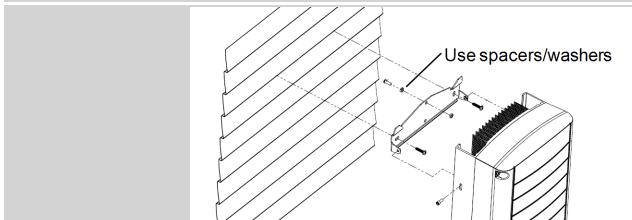


4. Hang the inverter on the bracket (see *Figure 12*): Lift the inverter from the sides, or hold it at the top and bottom of the inverter to lift the unit into place. Do not lift holding the Safety Switch StorEdge Connection Unit as it may be damaged.

- Align the two indentations in the inverter enclosure with the two triangular mounting tabs of the bracket, and lower the inverter until it rests on the bracket evenly.

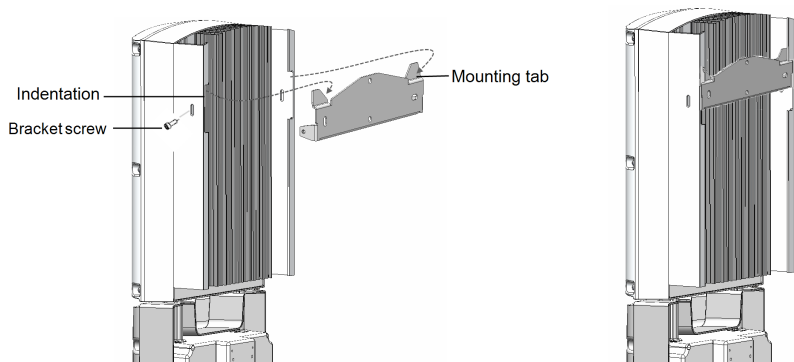

**Figure 12: Hanging the inverter on the bracket**

- Secure the StorEdge Connection Unit bracket to the wall:
  - Mark the location of the bracket screw for the Safety Switch StorEdge Connection Unit and drill the hole.
  - Fasten the bracket using a standard bolt.
  - Verify that the bracket is firmly attached to the mounting surface.

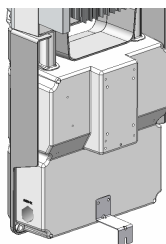


**Figure 13: StorEdge Connection Unit bracket**

- Insert the two supplied screws through the outer heat sink fin on both sides of the inverter and into the bracket (see *Figure 12*). Tighten the screws with a torque of  $4.0 \text{ N}\cdot\text{m}$  /  $2.9 \text{ lb}\cdot\text{ft}$ .
- Remove the inverter cover: Open the inverter cover's six Allen screws and carefully pull the cover horizontally before lowering it.

## Chapter 4: Auto-transformer and Backed-up Loads Panel Installation (for Backup Only)


The auto-transformer is used for backup power only, and is not mandatory if using Smart Energy Management applications only.

The auto-transformer connects to the AC side of the inverter. Since the inverter AC connections are on its right side, it is recommended to position the auto-transformer to the right of the inverter to simplify wiring.

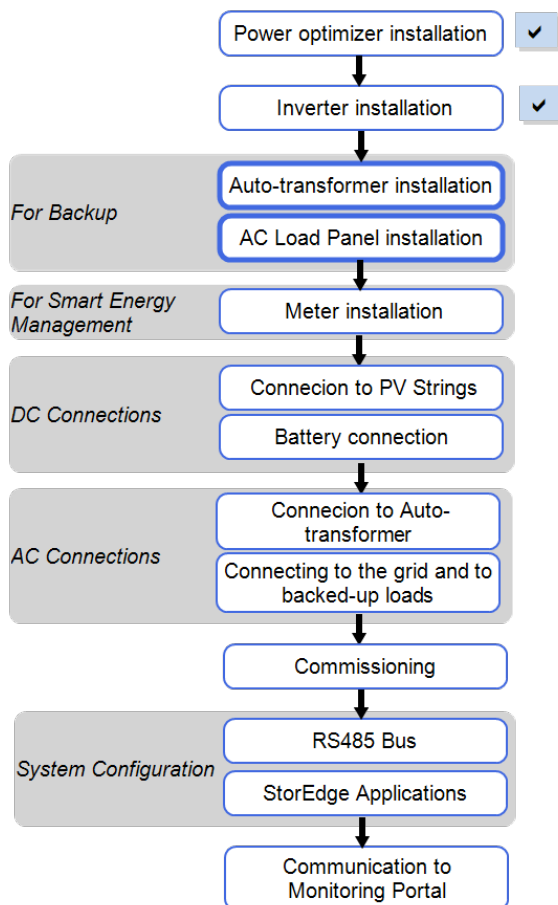

## Mounting the Auto-transformer

1. Determine the mounting location, on a wall, stud framing or pole. To allow proper heat dissipation and cable entry, maintain the following minimum clearance areas between the auto-transformer and other objects:
  - 8 in / 200 mm to the top and bottom of the auto-transformer; if conduit entry to the auto-transformer will be from the bottom, leave sufficient clearance for the conduits as well.
  - 4 in / 100 mm to the right and left of the auto-transformer.
2. Install the bracket with the flat side facing down. Verify that the bracket is firmly attached to the mounting surface.
3. Hang the auto-transformer on the bracket: Lift the auto-transformer from the sides, or hold it at the top and bottom to lift the unit into place.
4. Insert the two supplied screws through the outer heat sink fin on both sides of the auto-transformer and into the bracket. Tighten the screws with a torque of 4.0 N\*m / 2.9 lb.\*ft.

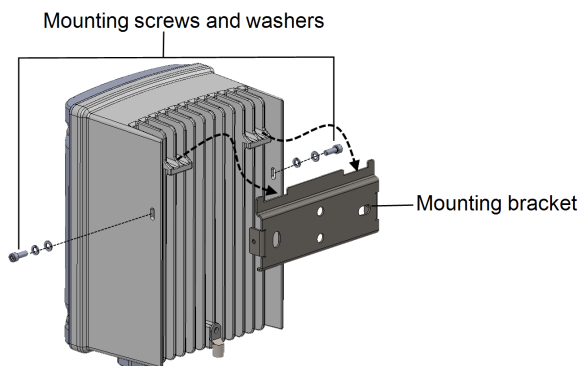


**Figure 14: Installing the auto-transformer**

## Installing the Backed-up Loads Panel

Install a secondary AC panel for backed-up loads (not supplied by SolarEdge). Rewire the backed-up loads through this panel.

Install two poles 25A main circuit breaker with integrated AFCI on this panel, to ensure the 25A phase imbalance limit is maintained at all times.

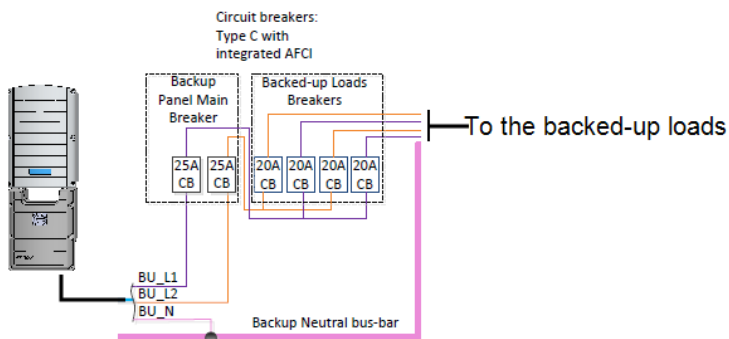

**Figure 15: Backed-up Loads Panel**


## Chapter 5: Electricity Meter Installation

The StorEdge solution requires connecting a meter for Smart Energy Management applications, such as maximizing self-consumption. *For backup power only, installing a meter is not required.*

The meter is connected to the inverter using RS485.

### NOTE

The inverter RS485 bus should be connected to the battery and meter. Connecting multiple inverters with RS485 master-slave connection requires an RS485 Expansion Kit (available from SolarEdge). Refer to [http://www.solaredge.com/files/pdfs/RS485\\_expansion\\_kit\\_installation\\_guide.pdf](http://www.solaredge.com/files/pdfs/RS485_expansion_kit_installation_guide.pdf).

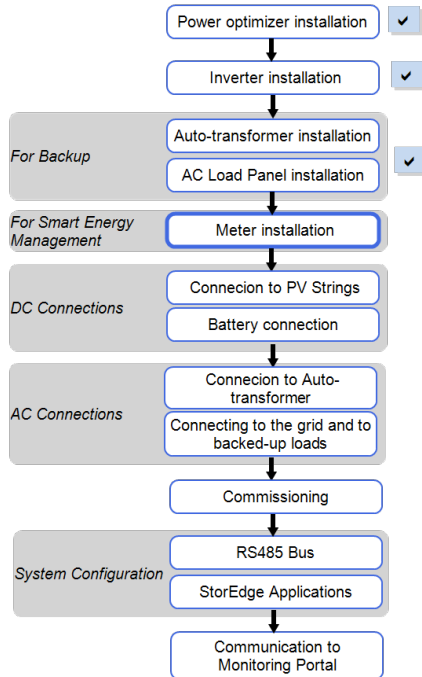


To install the SolarEdge meter refer to the installation guide supplied with it:

<http://www.solaredge.com/files/pdfs/solaredge-meter-installation-guide-na.pdf>.

For communication connection refer to *Connecting Communication to the Meter* on page 37.

## Chapter 6: StorEdge Inverter Connections

After installing the system components, connect them to the StorEdge Connection Unit as described in this chapter.

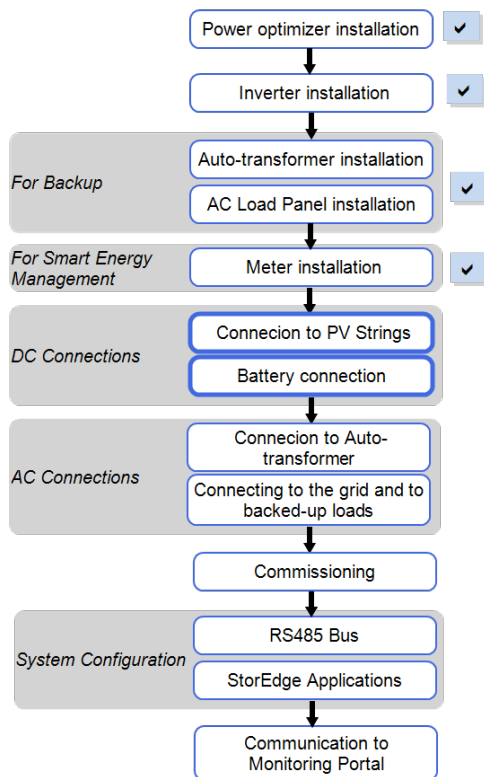


### NOTE

- The conduits, hubs and fittings must be suited for field wiring systems.
- The hubs and other fittings must comply with UL514B.
- Use the conduit and wiring appropriate for the installation location per the NEC.
- Outdoor installations must use components that are rated NEMA 3R or higher.



The following figure summarizes the connections in the StorEdge Connection Unit:

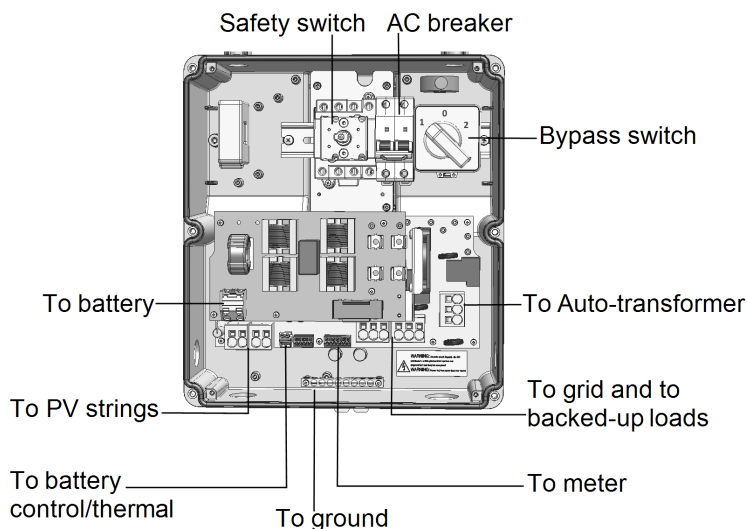


**Figure 16: The StorEdge Connection Unit connections**

## Installing the 9V Battery

The 9V battery is supplied with the accessories of the inverter.

1. Open the four internal screws securing the transparent cover to the StorEdge Connection Unit enclosure and remove the cover.
2. Install the 9V battery in the holder on the top board of the StorEdge Connection Unit and connect it to the battery pad.

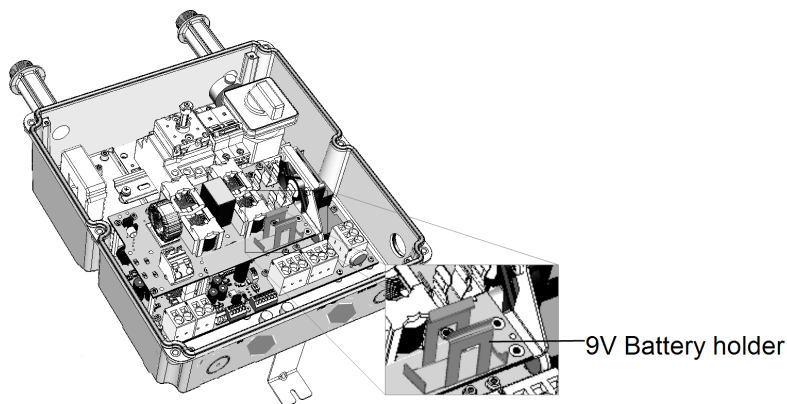

**Figure 17: The battery holder**

## Connecting to DC

### Connecting the PV Strings

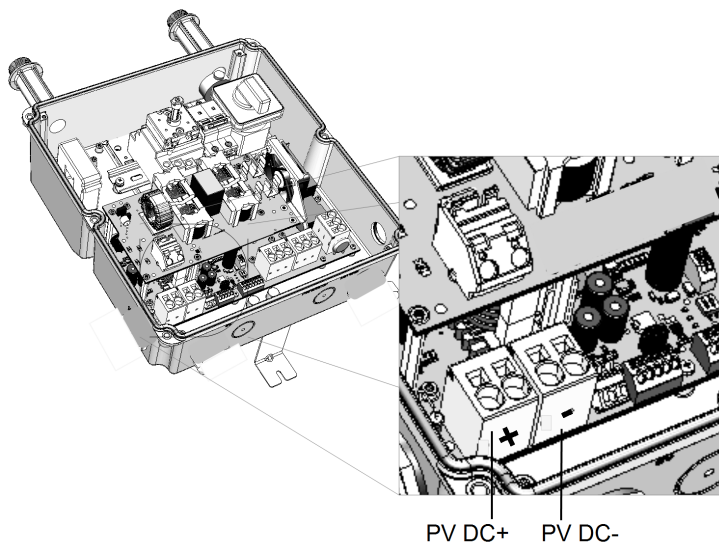


Figure 18: PV connection

1. Verify that the AC circuit breaker is OFF.
2. Strip 5/16" (8 mm) of the DC wire insulation.
3. Insert the DC conduit into the DC-side opening. Make sure the conduit is firmly attached to the inverter enclosure and sealed properly.
4. Connect the DC wires from the PV installation to the DC+ and DC- terminal blocks, according to the labels on the terminals:
  - a. Insert a flat blade screwdriver into the square opening at the top of the terminal block and press to open clamp mechanism.
  - b. Insert the wire into the round opening and release the screwdriver to spring back and clamp the wire. Check that the wire is fully inserted and cannot be pulled out easily.



#### CAUTION!

Ensure that the Plus (+) wire is connected to the Plus (+) terminal and that the Minus (-) wire is connected to the Minus (-) terminal connector.

*Veillez à ce que le câble Plus (+) soit connecté au terminal (+) et que le câble Minus (-) soit connecté au connecteur terminal (-).*



#### NOTE

For systems with three PV strings or more, fuses may need to be installed in both the positive and negative conductors as required by Article 690.35(B). For more information, refer to the Technical Note "String Fusing Requirements in SolarEdge Systems" at [http://www.solaredge.com/files/pdfs/string\\_fusing\\_requirements.pdf](http://www.solaredge.com/files/pdfs/string_fusing_requirements.pdf).

## Connecting to the Battery

To simplify the connection process it is advised to connect the battery to the inverter *before* mounting the battery according to the manufacturer instructions.

Follow these guidelines:

- For easy access to battery connectors, it is recommended to connect the cables to the battery and to set all the battery DIP switches to their correct positions while the battery is still on the ground. The following procedure is recommended:
  - a. Connect all the wires to the battery connection panel
  - b. Mount the battery
  - c. Assemble the conduit between the battery and the inverter
  - d. Connect to the StorEdge Connection Unit
- Measure the necessary length between the StorEdge Connection Unit and the battery for all cables. The maximum distance between the battery and the inverter is 35 ft/ 10m, when using 16AWG for battery thermal power and 24AWG for battery control.
- Tie and wrap the cables to avoid pulling them out during mounting.
- Be sure to adhere to all safety cautions and information in the battery documentation.
- The battery connects to the DC side of the inverter. Since the inverter DC connections are on its left side, it is recommended to position the battery to the left of the inverter to simplify wiring.



### NOTE

Per NEC requirements, if the battery is more than 5ft/ 1.5m away from the inverter, an additional external DC switch is required adjacent to the battery.

Prepare cables and connect as described in the following table (see *Figure 19*):

Recommended cable type (min-max AWG)	StorEdge Connection Unit connection	Tesla battery connection	Connection method
<b>DC</b>			
DC cable 10AWG (10-24 AWG), 600V insulated.	BAT DC + terminal block	DC+	◦ Insert a flat blade screwdriver into the square opening at the top of the terminal block and press to open clamp mechanism.
	BAT DC- terminal block	DC-	◦ Insert the wire into the round opening and release the screwdriver to spring back and clamp the wire.
<b>12V thermal power input</b>			
2-wire shielded twisted pair cable 16AWG (12-28AWG), 600V insulated	Battery Thermal V- (black)	THERMAL -	Push the lever to open the connection, insert the wire and release the lever when the wire is clamped.
	Battery Thermal V+ (red)	THERMAL +	

Recommended cable type (min-max AWG)	StorEdge Connection Unit connection	Tesla battery connection	Connection method
<b>Control and monitoring</b>			
5-wire shielded twisted pair cable 24 AWG (16-24AWG), 600V insulated.  A CAT5 600V insulated can also be used.	5-pin communication terminal block:	communication port 1 (located closer to the DIP switches):	Press the protrusion at the top of the terminal block to open the connection hole, insert the wire and release to spring back and clamp the wire.
	En (Enable)	ENABLE	
	V+	LOGIC +	
	G (RS485)	LOGIC -	
	B- (RS485) <sup>1</sup>	COM LO <sup>2</sup>	
	A+ (RS485) <sup>1</sup>	COM HI <sup>2</sup>	
		Modbus DIP switch setting: <ul style="list-style-type: none"> <li>○ S2, S6: Left</li> <li>○ S1, S5: DOWN</li> <li>○ S3, S4: UP</li> </ul> ID DIP switch setting: All (1,2,3) to the right (0 position)	Refer to <i>Figure 19</i> and <i>Figure 20</i> .

<sup>1</sup>Must be twisted pair<sup>2</sup>Must be twisted pair

## Tesla Battery

## StorEdge Connection Unit

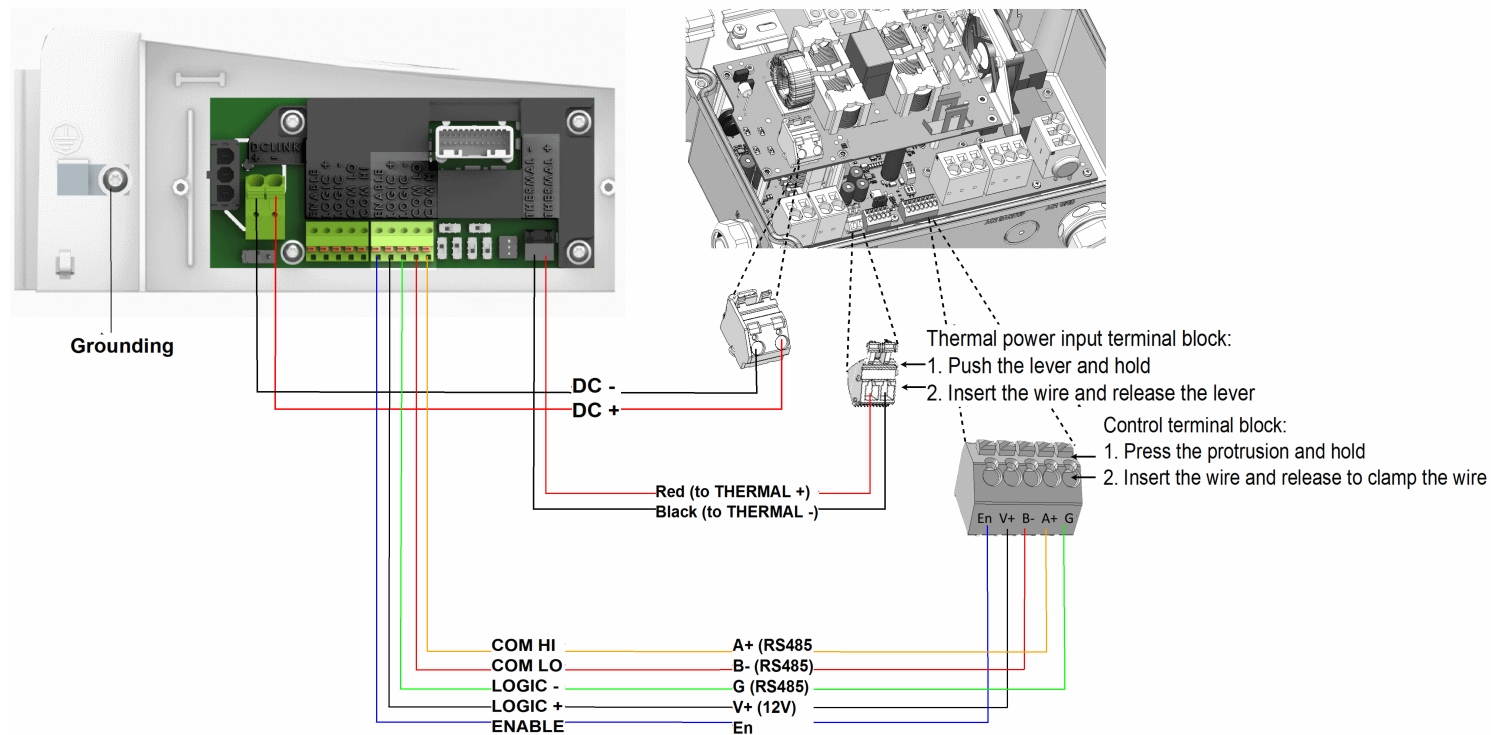



Figure 19: Connections to Tesla PowerWall Battery



# Connecting to AC

## Connecting to the Auto-transformer

The Auto-transformer is required for Backup Power only.

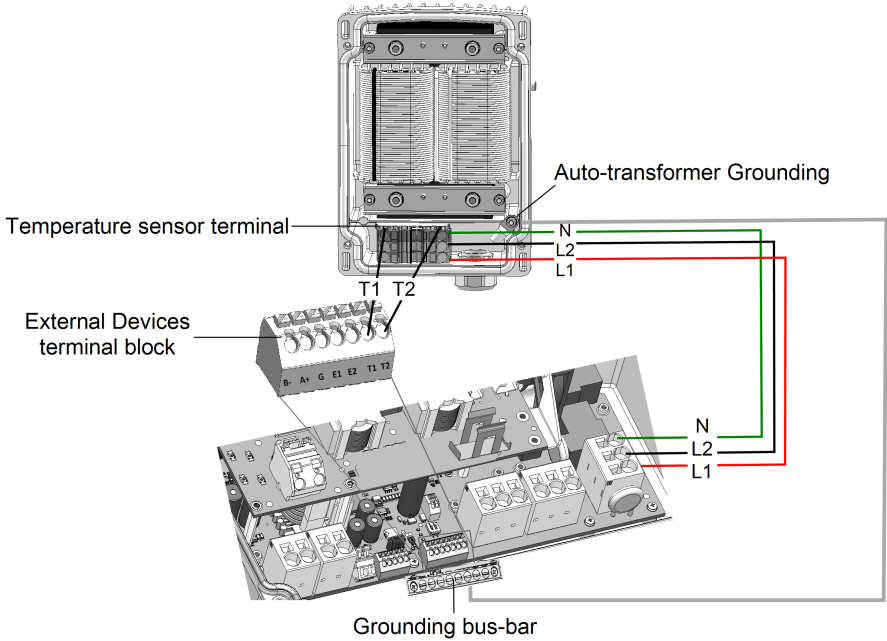

**Figure 21: Connecting to the auto-transformer**

1. Open the 4 screws of the auto-transformer and remove its cover.
2. Prepare cables and connect as described in the following table:

Recommended cable type (min-max AWG)	StorEdge Connection Unit connection	Auto-transformer connection	Connection method
AC			
8 AWG (6-20 AWG)	3-pin terminal block: L1	Line terminal: L1	<ul style="list-style-type: none"><li>○ Insert a flat blade screwdriver into the square opening at the top of the terminal block and press to open clamp mechanism.</li><li>○ Insert the wire into the round opening and release the screwdriver to spring back and clamp the wire.</li></ul>
	3-pin terminal block: L2	Line terminal: L2	
	3-pin terminal block: N	Neutral terminal: N	
Grounding			
10 AWG cable	Grounding Bus-bar	Grounding lug	

Recommended cable type (min-max AWG)	StorEdge Connection Unit connection	Auto-transformer connection	Connection method
Temperature Sensor			
Temperature sensor terminal 24 AWG (16-24 AWG), 300 Vrms insulated	External Devices 7-pin terminal block: T1	Temperature sensor terminal: T1 <sup>1</sup>	StorEdge Connection Unit: Press the protrusion at the top of the terminal block to open the connection hole, insert the wire and release to spring back and clamp the wire.  Auto-transformer:
	External Devices 7-pin terminal block: T2	Temperature sensor terminal: T2	<ul style="list-style-type: none"><li>○ Insert a flat blade screwdriver into the square opening at the top of the terminal block and press to open clamp mechanism.</li><li>○ Insert the wire into the round opening and release the screwdriver to spring back and clamp the wire.</li></ul>

<sup>1</sup>T1 and T2 are interchangeable



# Connecting to the Grid and to Backed-up Loads


This section describes:

- Connection to the AC Grid.
- Connection between the inverter to the backed-up loads panel.



## NOTE

Each inverter should be connected to a separate backup panel. Do not share backup output between inverters.

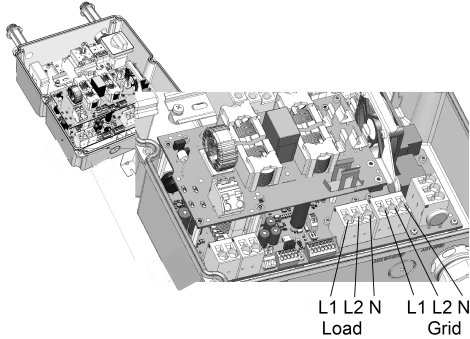

**Figure 22: Connection to grid, backed-up loads**

Prepare cables and connect as described in the following table:

Recommended cable type (min-max AWG)	StorEdge Connection Unit connection	External connection
<b>Grid</b>		
6 AWG (4-20 AWG)	3-pin terminal block: Grid L1	Main distribution panel: L1
	3-pin terminal block: Grid L2	Main distribution panel: L2
	3-pin terminal block: Grid N	Main distribution panel: N
Min. 10 AWG grounding wire		to ground
<b>Backed-up loads panel</b>		
6 AWG (4-20 AWG)	3-pin terminal block: L1	Backed-up loads panel: L1
	3-pin terminal block: L2	Backed-up loads panel: L2
	3-pin terminal block: N	Backed-up loads panel: N
Min. 10 AWG grounding wire		to ground

# Connecting Communication to the Meter

Prepare cables and connect the communication wires as described in the following table. For detailed information refer to the installation guide supplied with the meter.

Recommended cable type (min-max AWG)	External Devices connection	Meter connection
RS485 24 AWG (16-24 AWG), shielded twisted pair, 600V insulated	Ext. Devices 7-pin terminal block: B, A, G	RS485 4-pin terminal block: B, A, G

If you have a meter with SolarEdge label, connect as illustrated below:

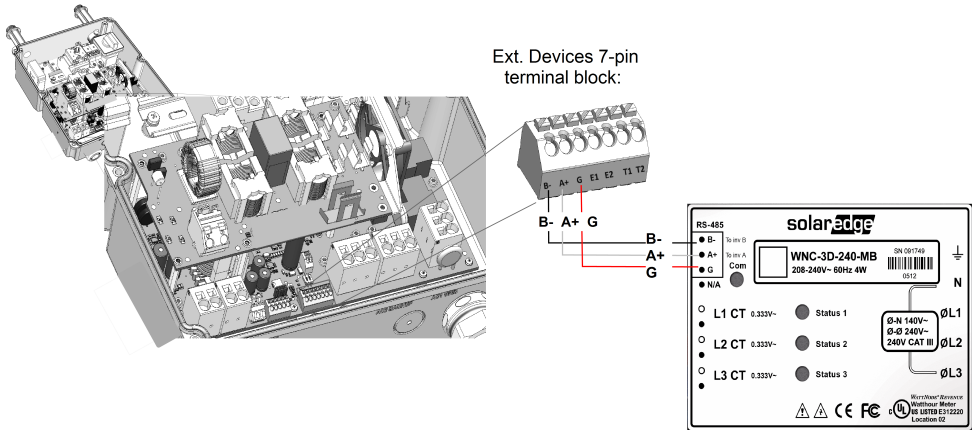


Figure 23: Connection to a meter (SolarEdge)

If you have a meter with WattNode label, connect as illustrated below:

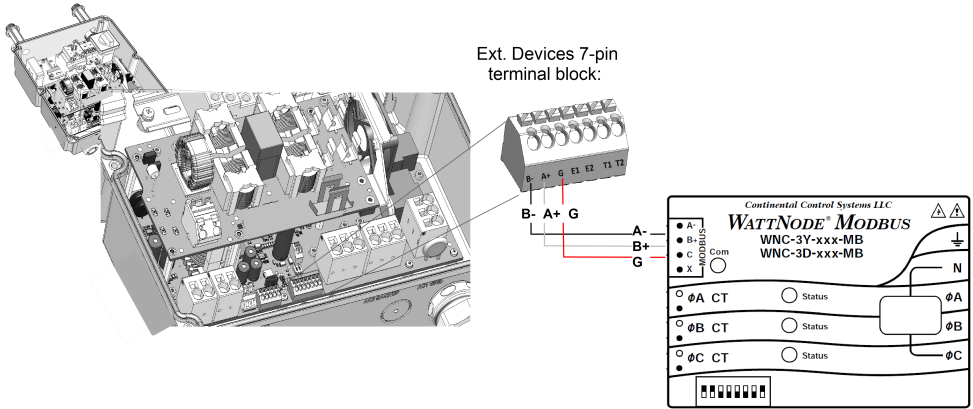


Figure 24: Connection to a meter (WattNode)

**DIP Switch Setup according to System Application**

Verify that the DIP switches on the StorEdge Connection Unit are set as described in the following table, according to the components used in the system:

System components	Left DIP switch (SW1) setup	Right DIP switch (SW2) setup
Auto-transformer with connected over-temperature sensor	Up (ON) - default	Down (OFF) - default
No auto-transformer, or auto-transformer with over-temperature sensor not connected	Up (ON) - default	Up (ON)


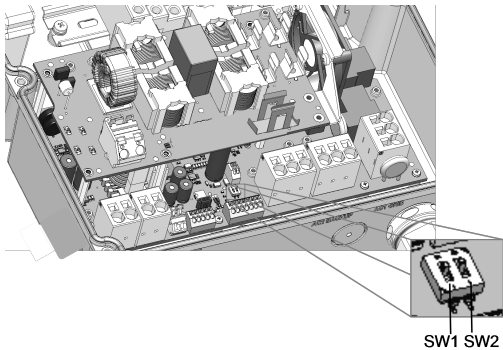


Figure 25: StorEdge Connection Unit DIP switches

## Chapter 7: User Interface

### LCD User Buttons

Four buttons are located inside the inverter above the LCD panel and are used for controlling the LCD menus, as shown below:

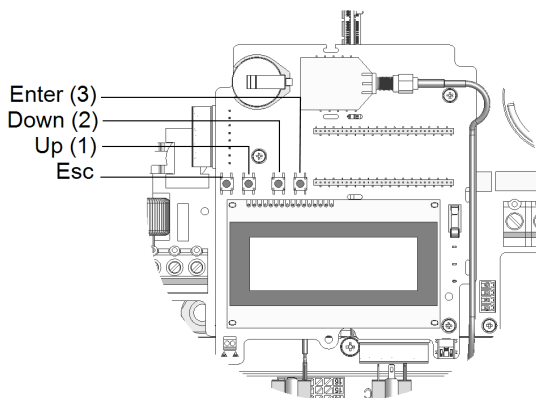

**Figure 26: LCD Internal menu buttons**

Use the four user buttons to control the LCD panel menus:

- **Esc:** Moves the cursor (>) to the beginning of the currently displayed parameter; goes to the previous menu, and cancels a value change with a long press (until **Aborted** is displayed).
- **Up (1) and Down (2):** Moves the cursor from one menu option to another, moves among the characters of a displayed parameter, and toggles between possible characters when setting a value.
- **(3):** Selects a menu option and accepts a value change with a long press (until **Applied** is displayed).

Use the three rightmost buttons for entering **123** when entering the Setup mode password **12312312**.

The LCD screen displays status information of the system and various menus for configuration options. The LCD panel and buttons are used during the following processes:

- **Operational mode:** The LCD panel allows checking for proper system operation. Refer to *Status Screens - Operational Mode* on page 49 for a description of this option. Use the LCD light button to toggle through the informative displays.
- **Setup mode:** Upon installation, the installer may perform basic configuration
- **Error messages:** In the event of a problem, an error message may be displayed on the LCD panel.

### Removing the Inverter Cover

Use the following procedure for cover removal for communication connection or maintenance.

1. Turn OFF, or verify that the StorEdge Connection Unit is OFF.
2. Turn OFF, or verify that the inverter ON/OFF switch is OFF.
3. Verify that AC to the inverter is OFF, or disconnect the AC to the inverter by turning OFF the circuit

breakers on the distribution panel. Wait 5 minutes for the capacitors to discharge.

4. Open the inverter cover's six Allen screws and carefully pull the cover horizontally before lowering it.



### CAUTION!

When removing the cover, make sure not to damage internal components. SolarEdge will not be held responsible for any components damaged as a result of incautious cover removal.

*Lors du retrait du couvercle, assurez-vous de ne pas endommager les composants internes. SolarEdge ne peut être tenue pour responsable des composants endommagés à la suite d'une imprudence dans le retrait du couvercle.*

## Inverter Configuration – Setup Mode

You can configure the inverter using one of the following:

- [The internal LCD user buttons](#). When using this option, the inverter cover is removed.
- [The external LCD light button](#). This option of configuration includes a less detailed configuration menu.

## Configuring the Inverter Using the LCD User Buttons

After inverter installation, a field technician may perform basic system configuration. Configuration is done when the inverter is in Setup mode.

### ► To enter Setup mode:

1. Turn the inverter ON/OFF switch to OFF (AC remains ON).



### WARNING!

If the inverter was operating properly (power was produced by the power optimizers), the following message is displayed.

DC VOLTAGE NOT SAFE  
DO NOT DISCONNECT VDC: 72.0

This message is displayed until the DC voltage is safe (50V). Do not open the cover until the voltage is safe or until at least five minutes have passed.

*La tension de sécurité par défaut est de 50V.*

*Ne pas ouvrir le couvercle ou les connecteurs DC jusqu'à ce que la tension soit affichée comme sécurisée ou jusqu'à ce que cinq minutes au moins se soient écoulées.*

2. Press the Enter button for at least 5 seconds. The following message is displayed:

Please enter  
Password  
\*\*\*\*\*

3. Use the three rightmost internal LCD user buttons to type in the following password: **12312312**. The following message is displayed:

```
Country <USA+>
Language <Eng>
Communication
Power Control
Backup Conf <En>
Display
Maintenance
Information
```

The inverter is now in Setup mode and all its LEDs are lit. The inverter automatically exits Setup mode if no buttons are pressed for more than 2 minutes.

The following shows a hierarchical tree of the menu options, which are described in *Configuration Menu Options* on page 45. Actual menus may vary from shown depending on the firmware version of the inverter.

Main menu:

```
Country <USA+>
Language <Eng>
Communication
Power Control
Backup Conf <En>
Display
Maintenance
Information
```

Country:

```
USA +
```

Language:

```
English
German
Spanish
French
Italian
```

Communication<sup>1</sup>

```
Server<LAN>
LAN Conf
RS485-1 Conf<S>
ZigBee Conf<S>
Wi-Fi Conf<N/A>
RS232 Conf
Cellular Conf
GPIO Conf <MTR>
```

<sup>1</sup>If ZigBee is connected, the Wi-Fi Conf menu is not displayed. If ZigBee is not connected, ZigBee Conf and Wi-Fi Conf are both displayed with <N/A>.

**Power Control :**

Grid Control <En>  
Energy Manager  
RRCR Conf.  
Reactive Pwr Conf.  
Active Pwr Conf.  
Phase Balance <Dis>  
Wakeup Conf.  
P(f)  
Advanced  
Load Defaults

**Display:**

Temperature <C>  
LCD On Time <30>  
TLM On Time <15>

**Maintenance:**

Date and Time  
Reset Counters  
Factory Reset  
SW Upgrade SD-Card  
AFCI <En>  
Diagnostics  
Standby Mode  
Grid Protection  
Optimizer Conf.

**Information:**

Versions  
Error Log  
Warning log  
Hardware IDs

## Configuring the Inverter Using the LCD Light Button

Use the LCD light button for communication setup and for displaying the Error log and Warning Log. There are fewer menus available when using this configuration option; however, the functionality of these menus is the same as when using the internal LCD user buttons.

1. Turn the inverter ON/OFF switch to OFF.
2. Press and hold down the LCD light button until the following message is displayed:

```
Keep holding button
for pairing, release
to enter menu...
Remaining:      3 sec
```

Releasing the button displays the following menu:

```
Optimizer pairing
Language <eng>
Communication
Maintenance
Information
Exit
```

3. Short-press (one second) to scroll down to the next menu option, and long-press (three seconds) to select the item. You can use the **Exit** option in these menus to move up one menu level or to exit the Setup mode from the main menu.

The following shows a hierarchical tree of the menu options that appear when using the LCD light button:

Main menu:

```
Optimizer pairing
Language <eng>
Communication
Maintenance
Information
Exit
```

Language:

```
English
German
Spanish
French
Italian
Exit
```



**Communication<sup>1</sup>:**

```
Server<LAN>
LAN Conf
RS485-1 Conf<S>
ZigBee Conf<S>
Wi-Fi Conf<N/A>
GPIO Conf <MTR>
RS232 Conf
Cellular Conf
Exit
```

**Information:**

```
Versions
Error Log
Warning log
HW IDs
Exit
```

**Maintenance:**

```
Date and Time
Reset Counters
Factory Reset
SW Upgrade SD-Card
AFCI <En>
Manual AFCI Test
Diagnostics
Standby Mode
Optimizer Conf.
Grid Protection
Exit
```

The options presented in these menus are described in the next section.

---

<sup>1</sup>If Wi-Fi is connected, the ZigBee Conf menu is not displayed, and vice versa.

## Configuration Menu Options

### Country and Grid

Configuring the country and grid is available using the internal user buttons only.

1. Select the **Country** option to specify the country in which the inverter is installed and the grid to which it is connected. This parameter may arrive pre-configured. If so, verify that it is set to the proper country.



#### WARNING!

The inverter must be configured to the proper country in order to ensure that it complies with the country grid code and functions properly with that country grids.

*L'onduleur doit être configuré pour le pays approprié afin d'assurer un fonctionnement convenable avec le réseau de ce pays.*

A list of countries is displayed. If no country is configured, the value is **<NONE>**.



#### NOTE

If an inverter is not configured to any country, it will not produce energy, and the following message will be displayed on the LCD:

No Country Selected

A plus sign (+) near the country indicates that another menu will be displayed after selection.

- When selecting **Auto**, the inverter automatically detects the used grid.
  - When selecting an option with **No Neutral** or **No N**, connection to Neutral line is not required. For any other option, you must connect the Neutral line.
2. Confirm your country selection in the confirmation screen: Toggle to **YES** and press **Enter**.

### Language

1. Select the **Language** option to set the language in which the LCD should display.
2. Confirm your language selection in the confirmation screen: Toggle to **YES** and press **Enter**.

### Communication

1. Select the **Communication** option to define and configure:
  - The communication option used by the inverter to communicate with the SolarEdge monitoring portal
  - The communication option used to communicate between multiple SolarEdge devices or other external non-SolarEdge devices, such as electricity meters or loggers.
2. Select **Server** to set which communication method is used to communicate between devices and the SolarEdge monitoring portal. Refer to for a full description of these communication options.



#### NOTE

The Server menu shows only the communication options installed in the inverter.

The following shows a hierarchical tree of the menu options in the **Communication** menu.

For detailed information about all the configuration options, refer to the *Communication Options Application Note*, available on the SolarEdge website at [http://www.solaredge.us/files/pdfs/solaredge-communication\\_options\\_application\\_note\\_v2\\_250\\_and\\_above.pdf](http://www.solaredge.us/files/pdfs/solaredge-communication_options_application_note_v2_250_and_above.pdf).

Communication<sup>1</sup>:

```

Server<LAN>
LAN  Conf
RS485-1  Conf<S>
ZigBee  Conf<S>
Wi-Fi  Conf<N/A>
RS232  Conf
Cellular Conf
GPIO  Conf <MTR>

```

## Server:

```

LAN
RS485
Zigbee
Cellular
RS232
None

```

## LAN Conf:

```

IP  Config
Set  DHCP  <en>
Set  IP
Set  Mask
Set  Gateway
Set  DNS
Set  Server Addr
Set  Server Port

```

## RS485-1 Conf:

```

Device Type <SE>
Protocol <M>
Device ID <1>
Slave Detect <#>
Slave List <#>

```

## ZigBee Conf. (enabled only if the ZigBee internal module is connected):

```

Device Type<SE>
Protocol<MP>
Device ID<1>
PAN ID
Scan Channel
Load ZB Defaults
Profile<ZB2007>

```

<sup>1</sup>If ZigBee is connected, the Wi-Fi Conf menu is not displayed. If ZigBee is not connected, ZigBee Conf and Wi-Fi Conf are both displayed with <N/A> and their menus are not accessible.

Wi-Fi Conf (enabled only if the internal module is connected):

RS232 Conf:

```
Device Type<SE>
Protocol<GSM>
Set APN
Set Modem Type
Set User Name
Set Password
```

GPIO Conf:

```
Device Type <RRCR>
```

## Power Control

For detailed information about active and reactive power control options refer to the *Power Control Application Note*, available on the SolarEdge website at [http://www.solaredge.us/files/pdfs/application\\_note\\_power\\_control\\_configuration.pdf](http://www.solaredge.us/files/pdfs/application_note_power_control_configuration.pdf).

```
Grid Control <En>
Energy Manager
RRCR Conf.
Reactive Pwr Conf.
Active Pwr Conf.
Phase Balance <Dis>
Wakeup Conf.
P ( f )
Advanced
Load Defaults
```

### NOTE



Phase Balance is applicable to single phase inverters only. For detailed information, refer to the *SolarEdge Phase Balancing Manual*, available on the SolarEdge website at [http://www.solaredge.us/files/pdfs/phase\\_balancing\\_connection\\_guide.pdf](http://www.solaredge.us/files/pdfs/phase_balancing_connection_guide.pdf)

The Grid Control option is disabled by default. Enabling it opens additional options in the menu, as shown on page 41.

## Display


Select **Display** to set the following:

```
Temperature <C>
LCD On Time <30>
TLM On Time <15>
```

- **Temperature:** Select Celsius or Fahrenheit units.
- **LCD On Time <30>:** The number of seconds that the LCD backlight is ON after pressing the LCD light button. Set a value within the range of 10-120 seconds.
- **TLM On Time <15>:** The number of minutes that the LCD backlight is ON while viewing the Telemetry window. Set a value within the range of 1-120 minutes.

## Maintenance

Select **Maintenance** to set the following options:

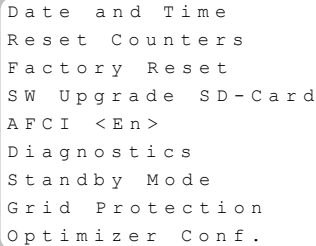


```
Date and Time
Reset Counters
Factory Reset
SW Upgrade SD-Card
AFCI <En>
Diagnostics
Standby Mode
Grid Protection
Optimizer Conf.
```

- **Date and Time:** Set the internal real-time clock. If connected to the SolarEdge monitoring portal, the date and time are set automatically and only time zone should be set.
- **Reset Counters:** Resets the accumulated energy counters that are sent to the SolarEdge monitoring portal
- **Factory Reset:** Performs a general reset to the default device settings.
- **SW Upgrade SD-Card:** Perform a software upgrade using an SD card.
- **Diagnostics:** Displays the Isolation Status and optimizers status screens. Refer to [http://www.solaredge.us/files/pdfs/application\\_note\\_isolation\\_fault\\_troubleshooting.pdf](http://www.solaredge.us/files/pdfs/application_note_isolation_fault_troubleshooting.pdf).
- **AFCI:** Enables or disables arc-fault self-test.
- **Manual AFCI Test:** Accessible from the LCD Light button menus only. Starts a self-test for arc detection.
- **Standby Mode:** Enables/disables Standby Mode - for remote commissioning.
- **Grid Protection:** Available in specific countries. Enables viewing and setting grid protection values. Refer to [http://www.solaredge.com/files/pdfs/viewing\\_grid\\_protection\\_values.pdf](http://www.solaredge.com/files/pdfs/viewing_grid_protection_values.pdf).
- **Optimizer Conf.:** Accessible from the LCD Light button menus only (the inverter ON/OFF switch must be ON). Enables the Rapid Shutdown feature when a kit is installed in the inverter.

## Information

Select **Information** to display the following options:

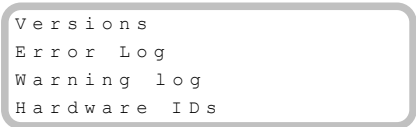

```
Versions
Error Log
Warning log
Hardware IDs
```

- **Versions:** Displays inverter firmware versions:
  - **ID:** The inverter ID.
  - **DSP 1/2:** The DSP digital control board firmware version
  - **CPU:** The communication board firmware version



### NOTE

Please have these numbers ready when you contact SolarEdge Support.

- **Error Log:** Displays the last five errors.
- **Warning Log:** Displays the last five warnings.

- **Hardware IDs:** Displays the following HW serial numbers (if exist, and connected to the inverter):
  - **ID:** the inverter's ID
  - **RGM1:** A preassembled RGM or any external electricity meter (with lower Modbus ID)
  - **RGM2:** A second external electricity meter (with the higher Modbus ID)
  - **ZB:** Zigbee MAC address
  - **Cell:** MEID (CDMA) or IMEI (GSM)
  - **WiFi:** Wi-Fi MAC address

## Status Screens - Operational Mode

Additional presses display the following screens one after the other.

### Initial Status

V a c [ V ]	V d c [ V ]	P a c [ W ]
2 4 0 . 7	3 7 1 . 9	2 3 4 9 . 3
P _ O K :	X X X / Y Y Y	< S _ O K >
		O N

- **Vac [V]:** The AC output voltage
- **Vdc [V]:** The DC input voltage
- **Pac [W]:** The AC output power

### Main Inverter Status

V a c [ V ]	V d c [ V ]	P a c [ W ]
2 4 0 . 7	3 7 1 . 9	3 2 1 0 . 0
F a c [ H z ]	O P s _ O k	T e m p
5 0 . 0	1 1	2 8 . 2

- **Vac [V]:** The AC output voltage.
- **Vdc [V]:** The DC input voltage.
- **Pac [W]:** The AC output power.
- **Fac [Hz]:** The AC output frequency.
- **OPs\_Ok:** Number of optimizers sending telemetries (indicating that they are paired)
- **Temp [C or F]:** The inverter heat sink temperature

## Energy Meter Status

Displays the total energy produced during the last day, month, year and since inverter installation.

```
Day [ Wh ] :      0 . 0
Month [ KWh ] :   0 . 0
Year [ KWh ] :    0 . 0
Total [ KWh ] :   0 . 0
```

If a meter is connected to the inverter, the following status screen, showing the total energy reading, is displayed instead of the above screen. The following is an example of a production meter status:

```
Production Meter
Status : <OK>
<Error Message>
Total [ Wh ] : XXXXXXXX
```

If the meter is set to Export +Import, there are two status screens, with the first line displaying: "Export Meter" and "Import Meter".

- **Status:** Displays OK if the meter is communicating with the communication board.
- **<Error message>:** If there is a meter error, it is displayed in this line.
- **Total (Wh):** The energy read by the meter. The value displayed in this line depends on the meter type connected to the inverter and its location:
  - If a bidirectional meter is connected at the consumption point, this value is the consumed energy.
  - If the meter is installed at the production connection point, this value is the energy produced by the site.
  - If the meter is installed at the grid connection point, this value is the energy exported to the grid.

If the inverter is connected to the SolarEdge server, this value will also be displayed in the monitoring portal.



### NOTE

This data is accumulated according to an internal real-time clock.

## Telemetry Status

This screen displays the last power optimizer telemetry received. The display changes as each power optimizer sends its telemetry.

In order to verify proper installation, the installer may view the Telemetry window for some time in order to observe the power optimizers' report process.

```
Module : 000C1ED9-03
Energy [ Wh ] : 0
Vdc_O [ V ] : 0 . 5
Vdc_I [ V ] : 29 . 5
```

- **Module#:** Power optimizer serial number
- **Energy:** power optimizer energy
- **Vdc\_O:** Power optimizer output voltage
- **Vdc\_I:** Power optimizer input voltage (module voltage)

## ID Status

This screen displays the inverter software version and the country to which the inverter is configured.

```
ID: ##### ##
DSP1/2: 1.0210 / 1.0034
CPU: 0003.14xx
Country: USA1
```

- **ID:** The inverter ID.
- **DSP 1/2:** The DSP digital control board firmware version
- **CPU:** The communication board firmware version
- **Country:** the current country setting

## Server Communication Status

```
Server: LAN    <S_OK>
Status:        <OK>
               xxxxxxxx
<ERROR MESSAGE>
```



### NOTE

If the connection method is CDMA (Cellular) or GSM, the server screen is replaced with the Cellular or GSM status screens (see *Cellular Status* on the next page and *GSM Status* on the next page).

- **Server:** The method of connection to the SolarEdge monitoring portal.
- **S\_OK:** The connection to the SolarEdge monitoring portal is successful (should appear only if the inverter is connected to the server).
- **Status:** Displays OK if the inverter established successful connection and communication with the specified server port/device (LAN, RS485 or ZigBee module).
- **xxxxxxx:** Eight-bit Ethernet communication connection status: A string of 1s and 0s is displayed. 1 indicates OK, 0 indicates an error. For a list of the possible errors and how to troubleshoot them, refer to *Communication Troubleshooting* on page 79.
- **Error message,** according to failure. Refer to *Errors and Troubleshooting* on page 1.

## IP Status

This screen describes the Ethernet configuration: IP, Mask, Gateway and MAC address (Media Access Control) of the Inverter.

```
IP   192.168.2.119
MSK  255.255.255.0
GW   192.168.2.1
MAC  0-27-02-00-39-36
```

## ZigBee Status

This screen describes the ZigBee configuration:

```
PAN: XXXXX
CH: XX / XXXX  RSSI: <L>
MID: XXXX XX
```



- **RSSI:** The receive signal strength indication of the closest ZigBee in the system. L = low, M = medium, H = high and (-) = no signal.
- **PAN ID:** The ZigBee transceiver PAN ID
- **Ch.:** The ZigBee transceiver channel
- **ID:** The ZigBee transceiver ID
- **MID:** The Master ID of the coordinator (master) ZigBee module. This field is shown only in devices with router (slave) ZigBee modules, and after a successful ZigBee association. If a ZigBee module is not connected, a **No ZigBee** message is displayed instead of the **MID** field.

## Cellular Status

If a cellular (CDMA) modem is connected, this screen replaces the Server status screen:

```
Server:Cell <S_OK>
Status: <OK> Sig:5
<Error message>
```

- **Server:** The method of communication to the SolarEdge monitoring portal. Should display **Cell**.
- **Status:** Displays OK if the inverter established a successful physical connection to the Cellular modem.
- **S\_OK:** The last communication to the SolarEdge monitoring portal was successful (appears if the inverter is connected to the portal).
- **Sig:** The signal strength, received from the cellular modem. A value between 0-5, (0 = no signal, 5 = excellent signal).
- **Error message** per communication connection status failure

## GSM Status

If a GSM modem is connected, this screen replaces the Server status screen:

```
Server:Cell <S_OK>
Status: <OK>
MNO: <xxxxxxx> Sig:5
<Error message>
```

- **Server:** The method of communication to the SolarEdge monitoring portal. Should display **Cell**.
- **Status:** Displays OK if the inverter established a successful physical connection to the modem.
- **S\_OK:** The last communication to the SolarEdge monitoring portal was successful (appears if the inverter is connected to the portal). If S\_OK is not displayed, refer to *Status Screens - Operational Mode* on page 49.
- **MNO:** The mobile network operator name
- **Sig:** The signal strength, received from the modem. A value between 0-5, (0 = no signal, 5 = excellent signal).
- **Error message** per communication connection status failure.

## Communication Ports Status

```
Dev Prot ##
RS485-1<SE><S> <-->
ZigBee <SE><MPS><-->
```

- **##**: The total number of slaves detected on the specific port
- **Dev**: The type of device that was configured to a specific port (based on the port's functionality), as follows:
  - **SE**: SolarEdge device (default)
  - **DM**: Revenue meter
  - **LGR**: Non-SolarEdge logger
- **PROT**: The protocol type to which the port is set:
  - For a SolarEdge device:
    - **S**: SolarEdge slave
    - **M**: SolarEdge master
    - **P2P**: ZigBee point-to-point
    - **MPM**: ZigBee multipoint master (for the SolarEdge ZigBee home gateway)
    - **MPS**: ZigBee multipoint slave (for a ZigBee router module)
  - For electricity meters, refer to the *application note - Connecting an Electricity Meter to SolarEdge Devices* at <http://www.solaredge.us/files/pdfs/connecting-revenue-grade-meter-to-solaredge-devices.pdf>.
  - **SS**: SunSpec - for a non-SolarEdge logger (monitoring and control)

## Smart Energy Management Status

This screen is displayed only when Smart Energy Management is enabled. The screen shows energy details of the site:

```
Site Limit:      7.0 kW
Site Prod:       10.0 kW
Site Export:     4.0 kW
Self-consume:    6.0 kW
```

- **Site Limit**: The limit that was defined for the site
- **Site Prod**: The power produced by the site
- **Site Feed**: The power that is fed into the grid
- **Self-consume**: The PV power consumed by the site

## Power Control Status

This screen is displayed only when Power Control is enabled (available from communication board (CPU) firmware version 2.7xx/3.7xx and later).

```
PWR CTRL: REMOTE
PWR Limit: 10.04 kW
CosPhi:    0.9
Power Prod: 7000W
```

- **PWR CTRL**: The power control status:
  - **REMOTE** - Communication with the RRCR or smart energy manager is confirmed/validated.
  - **LOCAL** - The power is controlled locally (e.g. by a fixed limit), or this inverter limits the PV power production to its relative portion of the feed-in power limit, as a result of disconnected communication with the smart energy manager. If this status appears, check the communication to the smart energy manager or the communication to the meter.

- **PWR Limit:** The inverter maximum output power set by one of the power limiting options:
  - RRCR
  - Smart energy manager (Feed-in limitation)
  - P(f)
  - Q(U)
- **Cos Phi:** The ratio between active to reactive power
- **Power Prod:** The power produced by the inverter

For more information, refer to the following application notes:

- *Power Control Application Note*, available on the SolarEdge website at [http://www.solaredge.us/files/pdfs/application\\_note\\_power\\_control\\_configuration.pdf](http://www.solaredge.us/files/pdfs/application_note_power_control_configuration.pdf)
- *Feed-in Limitation Application Note*, available on the SolarEdge website at [http://www.solaredge.us/files/pdfs/products/feed-in\\_limitation\\_application\\_note.pdf](http://www.solaredge.us/files/pdfs/products/feed-in_limitation_application_note.pdf)

## Battery Status

This screen is displayed only when the battery is configured, and shows the battery identification information, its charging status and power, and the operating mode.

```
BSN : XXXXXXXXXXXX ID : 24
SOE : 89%          PWR : 0W
Total : 0Wh
State : Idle
```

- **BSN:** Battery serial number
- **ID:** Battery identification - should be 24 as set up above
- **SOE:** State of Energy - the battery capacity percentage (calculated as Available Energy\Max. Energy)
- **PWR:** The charging or discharging power (in Watts) according to the battery state (see below)
- **Total:** The total discharged energy in Watt/hour
- **State:** The battery status: Charging/ Discharging, Idle, Init (pre-heating) or Fault <error code>.

## Time Of Use Status


This screen is displayed only if TOU is configured, and shows information about the TOU settings for the site.

```
Name : xxxx
Last Sync: <Date>
Source : <Remote>
Set Until : <date>
```

- **Name:** The TOU profile file name
- **Last Sync:** Date when the time-of-use profile was loaded from the monitoring portal
- **Source:** the source from which the TOU profile was uploaded:
  - Remote - Profile uploaded from the SolarEdge monitoring portal
  - Local - Profile uploaded from an SD card
- **Set Until:** The date until the current profile is applicable

## Chapter 8: Commissioning the Installation

This chapter describes how to activate the system, pair the power optimizers to the inverter and verify the proper functioning of the system.

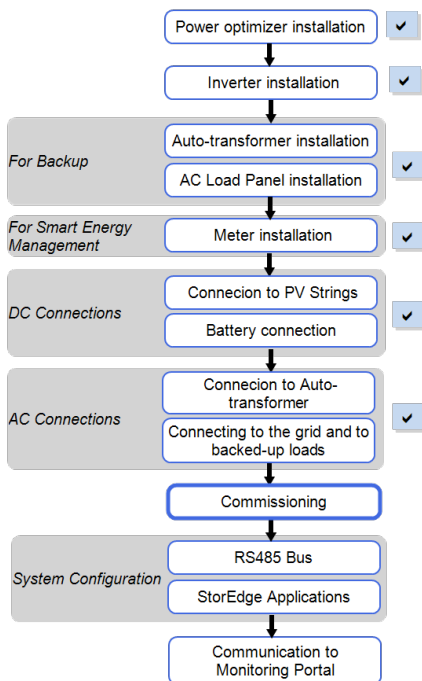

### Step 1: Activating the System

1. Verify that the inverter ON/OFF switch is OFF.
2. Move the StorEdge Connection Unit ON/OFF switch to the ON position.



#### **WARNING!**

ELECTRICAL SHOCK HAZARD. Do not touch uninsulated wires when the inverter cover is removed.

*RISQUE D'ÉLECTROCUTION, ne touchez pas les fils non isolés lorsque le couvercle de l'onduleur est retiré.*

3. Activate the inverter according to the activation instructions supplied in the inverter package:
  - a. Verify that the card S/N matches the inverter S/N.
  - b. Insert the card into the slot marked "CARD" on the communication board.
  - c. Turn AC ON.
  - d. LCD shows: Running Script... → Done!
  - e. If LCD shows: Script error, contact SolarEdge Support.

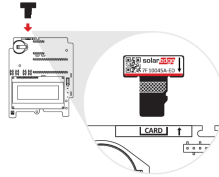


Figure 27: Activation card

4. Verify that the inverter is configured to the proper country: Press the LCD light button until reaching the ID status screen:

```

ID: #####
DSP1/2: 1.0210 / 1.0034
CPU: 0003.14xx
Country: USA1
  
```

5. If required, perform the following additional steps before closing the inverter cover:
  - Country settings or inverter configuration using the internal LCD user buttons – refer to *Country and Grid* on page 45.
  - Communication options connection – refer to *Setting Up Communication to the Monitoring Portal* on page 71.
  - StorEdge application configuration - refer to *System Configuration* on page 62.
6. Close the inverter cover by tightening the screws with a torque of 9.0 N\*m/ 6.6 lb\*ft. For proper sealing, first tighten the corner screws and then the two central screws. The following figure illustrates recommended order:


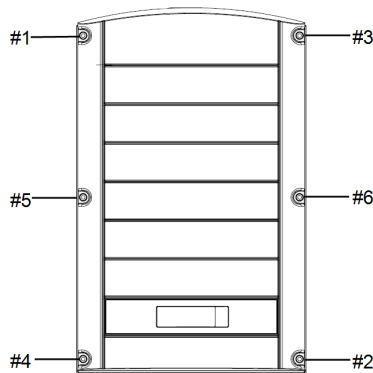


Figure 28: Tightening order of the screws

7. Make sure the AC Bypass switch is switched to the left (position 1).


8. Make sure the backed-up loads AC breaker is UP.

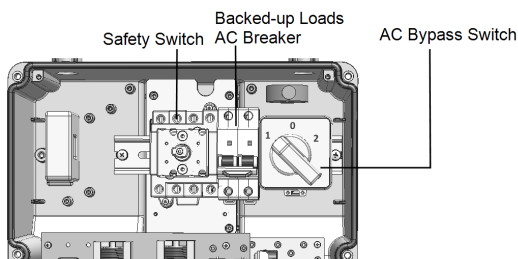

**Figure 29: StorEdge Connection Unit**

9. Close the StorEdge Connection Unit cover: Attach the cover and secure it by tightening the six screws with a torque of 1.2 N\*m / 0.9 ft. \*lb.
10. Ensure proper conduit sealing; inspect the entire conduit run and use standard conduit sealants to avoid water penetration.
11. Turn ON the StorEdge Connection Unit switch. If an additional external DC switch is installed between the power optimizers/ battery and the inverter(s) then turn it ON.

A status screen similar to the following appears on the LCD panel:

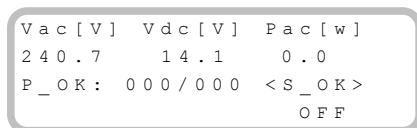

12. Verify that the following information appears on the LCD panel:
  - **P\_OK**: Appears only upon first telemetry reception from the power optimizers. Indicates connection to the power optimizers and that at least one power optimizer is sending monitoring data. If P\_OK does not appear, check the power optimizer, string and DC input connections.
  - **000/000**: Appears only upon first telemetry reception from the power optimizers. Indicates the number of power optimizers that have been paired to this inverter. At this stage, the number should be 000, since no power optimizers have been paired.
  - **S\_OK**: the connection to the SolarEdge monitoring portal is successful (should appear only if the inverter is connected to the server). If S\_OK is not displayed and the inverter is connected to the server, refer to "Troubleshooting" on page 79.
  - **Vac [V]**: the grid AC output voltage. Verify the correct value.
  - **Vdc [V]**: The DC input voltage of the longest string connected to the inverter. There should be a safety voltage of 1V for each power optimizer in the string.



#### NOTE

A measurement error on the inverter LCD of  $\pm 3$  V is acceptable.

- **Pac [w]**: the AC output power (should be **0.0** since the inverter is OFF).
- **OFF**: the inverter ON/OFF switch is in the OFF position.

## Step 2: Pairing Power Optimizers to the Inverter

Once all connections are made, all the power optimizers must be logically paired to their inverter. The power optimizers do not start producing power until they are paired with an inverter. This step describes how to assign each inverter to the power optimizers from which it will produce power.

Perform this step when the modules are exposed to sunlight. If the string length is changed or a power optimizer is replaced, repeat the pairing process.

1. Perform pairing: Press and hold down the inverter LCD button for about **10 seconds**. The following message is displayed:

```
Keep holding button
for pairing, release
to enter menu...
Remaining:      3 sec
```

Keep holding for 5 seconds until the following is displayed:

```
Pairing
Turn Switch To On
```

2. Turn the inverter ON/OFF switch to ON within 5 seconds. If you wait longer than 5 seconds the inverter exits the pairing mode. The following message is displayed indicating that the inverter is performing the pairing:

```
Pairing
Remaining [sec]:180
```

- Wait for the completion of the pairing (remaining seconds is 0). If pairing fails, an error is displayed. In this case, repeat the pairing steps. If the problem persists, contact SolarEdge Support. When pairing succeeds, the following message is displayed:

P a i r i n g

P a i r i n g   C o m p l e t e d

The system startup process begins:

Since the inverter is ON, the power optimizers start producing power and the inverter starts converting AC.



#### NOTE

When you turn ON the inverter ON/OFF switch, the DC cables carry a high voltage and the power optimizers no longer output a safe 1V output.

*Après avoir mis l'interrupteur ON/OFF de l'onduleur monophasé sur ON, les câbles DC portent une haute tension et les optimiseurs de puissance ne génèrent plus la tension de sécurité de 1V.*

When the inverter starts converting power after the initial connection to the AC, the inverter enters Standby mode until its working voltage is reached. This mode is indicated by the flickering green inverter LED.

While the inverter is in Standby mode, it monitors the grid and verifies correct grid voltage and frequency. The following message is displayed:

W a k i n g   U p . . .

R e m a i n i n g :   0 5 1   S e c

The countdown indicates the seconds remaining until entering the Production mode. This time is in accordance with local regulations and is typically between three to five minutes.

When countdown is complete, the inverter enters Production mode and produces power. The steadily lit green inverter LED indicates this mode.

- Scroll to the **Maintenance** menu and select **Optimizer Conf.** → **Set Rapid Shutdown** → **Enable**.

S e t   R a p i d   S h u t d o w n

E x i t



## Step 3: Verifying Proper Operation

After the wake-up time is over, a status screen similar to the following appears on the inverter LCD panel:

```
V a c [ V ]   V d c [ V ]   P a c [ W ]
2 4 0 . 7   3 7 1 . 9   2 3 4 9 . 3
P _ O K :   X X X / Y Y Y   < S _ O K >
                                O N
```

### 1. Verify the following:

- The green inverter LED is steadily lit.
- The ON/OFF indicator on the LCD panel reads **ON**.
- P\_OK: XXX/YYY**: There is a connection to the power optimizers and at least one power optimizer is sending monitoring data. Optimizers send telemetries in a frequency of up to 10 minutes. Initially after pairing, both XXX and YYY values show 000 and the values increase as paired power optimizers are reported.



### NOTE

It may take up to 20 minutes for all power optimizers to transmit their telemetries and to be counted on the LCD screen.

- S\_OK** appears, if the inverter is connected to the SolarEdge monitoring portal.
  - Vac [V]** specifies the measured grid AC output voltage.
  - Vdc [V]** : Specifies the DC input voltage, which should equal the sum of the output voltages of all modules (and should be within the operating range of the inverter).
  - Pac [W]** specifies the total AC output power produced.
2. Take note of the serial # on the inverter label using the detachable 2D barcode sticker on each device. This information is used in the SolarEdge monitoring portal to identify this inverter and is needed to open a new site in the monitoring portal.

Your SolarEdge power harvesting system is now operational.

## Step 4: Reporting and Monitoring Installation Data



### NOTE

This step requires connecting one of the communication options. Refer to *Setting Up Communication to the Monitoring Portal* on page 71.

## The SolarEdge Monitoring System

The SolarEdge monitoring portal enables accessing SolarEdge site information, including up-to-date information viewed in a physical or logical view. The monitoring portal is described in detail in the *SolarEdge Monitoring Portal User Guide*, available on the SolarEdge website at <http://www.solaredge.us/files/pdfs/solaredge-monitoring-portal-user-guide.pdf>. The SolarEdge monitoring portal can display logical and physical layouts of the installed system, as follows:

- Logical Layout**: Shows a schematic logical layout of the components in the system, such as: inverters, strings and modules, as well as their electrical connectivity. This view enables you to see which modules are connected in each string, which strings are connected to each inverter, and so on.
- Physical Layout**: Shows a schematic physical layout of the components in the system, such as: inverters, strings and modules, as well as their electrical connectivity. This view enables a bird's eye view of the actual location of a system component.

Using the portal, you can:

- View the latest performance of specific components.
- Find under-performing components, such as modules, by comparing their performance to that of other components of the same type.
- Pinpoint the location of alerted components using the physical layout.
- See how components are connected to each other.
- Pair power optimizers remotely.

To display a logical layout, insert the inverter serial number in the new site created in the application. When the communication between the inverter and the monitoring server is established, the logical layout is displayed.

To display a physical layout, you need to map the locations of the installed power optimizers. To generate a physical mapping, use either the Site Mapper application or a mapping template, which should be filled out using the detachable stickers (see *Providing Installation Information*, below).

The logical and physical mapping can be used for debugging a problem using the SolarEdge monitoring portal.

If you do not report the physical and logical mapping of the installed power optimizers to SolarEdge, the SolarEdge monitoring portal will show the logical layout indicating which power optimizers are connected to which inverter, but will not show strings or the physical location of power optimizers.

The inverter may be connected to the SolarEdge monitoring portal via LAN or via an external modem connected to the inverter's RS232 connector. Alternatively, you can connect the inverter to another inverter that is already connected to the server, in a master-slave configuration. Refer to *Setting Up Communication to the Monitoring Portal* on page 71 .

## Providing Installation Information

### Paper Template

Fill out the Physical Layout Template (downloadable from the SolarEdge site) using the detachable 2D barcode stickers on each power optimizer. Once the form is completed, scan it and upload the scanned file to the SolarEdge monitoring portal during site registration. For an example paper template, refer to <http://www.solaredge.us/files/pdfs/physical-layout-template.pdf>.

### Site Mapper

Use the SolarEdge Site Mapper smartphone application to scan the power optimizer and inverter 2D barcodes. The application creates an XML file that can be uploaded to the SolarEdge monitoring portal during site registration. The SolarEdge Site Mapper can be downloaded from the application stores.


For detailed information, refer to the *SolarEdge Site Mapper Software Guide* or to the *Site Mapper* demo movie, available on the SolarEdge website at <http://www.solaredge.us/groups/installer-tools/site-mapper>.

### Creating a Site in the SolarEdge Monitoring Portal

Create the site in the monitoring portal using the registration form available at <http://www.solaredge.us/groups/site-registration> . Fill out all required information in the form, which includes information about your installation, as well as details about its logical and physical mapping.

## Chapter 9: System Configuration

This chapter describes how to configure your StorEdge system by setting up the communication between the system components and setting up the required application.

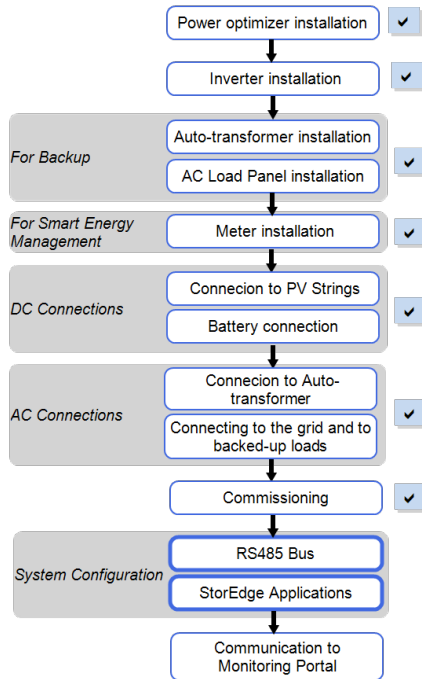

### Configuring the RS485 Bus for Battery and Meter Connection

This section describes how to set up the RS485 communication between the inverter, meter and battery. Some inverters are equipped with a built-in Revenue Grade Meter (RGM), which is located in the StorEdge Connection Unit. When an additional meter is installed for these inverters, the second meter is connected to the existing RGM in a daisy chain.

#### ► To configure the RS485 bus:

1. Turn OFF or verify that the StorEdge Connection Unit switch is OFF.
2. Turn the inverter ON/OFF switch to OFF.

3. Select **Communication** → **RS485-1 Conf** → **Device Type** → **Multi Devices**. A list of devices is displayed.

```
Device Type <MLT>
Meter 1 <--->
Meter 2 <--->
Battery 1 <--->
```

If an RGM is installed, it is pre-configured to Meter 1:

```
Device Type <MLT>
Meter 1 <WN, 1>
Meter 2 <--->
Battery 1 <--->
```

4. Select **Meter 2**. The meter configuration screen is displayed:

```
Device Type <MTR>
Protocol <WN>
Device ID <2>
CT Rating <0>
Meter Func. <None>
```

5. Configure the meter:

- Select **Device Type** → **Revenue Meter**
- Select **Protocol** → **WattNode**
- Verify that **Device ID** is set to **2**.
- Set the CT value that appears on the CT label: **CT Rating** → **<xxxxA>**.  
If CT resets to 0, check the communication as described in step b below.
- For a meter installed at the grid connection point select **Meter Func.** → **Export+Import**.

```
Export+Import
Export
Consumption
Production
Import
None
```

The selected option is displayed in the RS485 Conf screen as <E+I>.

6. Select **Battery 1**. The battery configuration screen is displayed:

```
Device Type <BAT>
Protocol <T74>
Device ID <24>
Battery Info < >
```

7. Select **Device Type** → **Battery Pack**.

8. Select **Battery Info** and check the battery information:

```
SN: <serial #>
Model: <XXXXXX>
Rated PWR[kWH]: N/A
FW Ver. <XXXXXX>
```

► **To verify the connection:**

1. Press the inverter external LCD light button to display the status screens one after the other:

- a. Check the RS485 communication status:

```
Dev Prot ##
RS485-1<MLT> <02><02>
```

- The number under **Prot** (protocol) should display the number of *configured* devices.
- The number under **##** should display the number of *communicating* devices.

The above screen shows an example of 2 devices on the same bus (e.g. meter and battery). If RGM is pre-installed, and a battery and an external meter are also installed, the screen should show <3><3>.

If the number of devices under Prot does not match the number under ##, refer to *Troubleshooting* on page 79

- b. Check the meter(s): In the meter(s) status screen check that the status is **OK**. The following is an example of the status of an Export (or Export+Import) meter:

```
Export Meter
Status: <OK>
<Error Message>
Total [Wh]: XXXXXXXX
```

If **Comm. Error** appears, refer to *Troubleshooting* on page 79.

- c. Check the battery information: identification, charging status and power, and the operating mode.

```
BSN: XXXXXXXXXXXX ID: 24
SOE: 89% PWR: 0W
Total: 0Wh
State: Idle
```

If **Comm. Error** appears, refer to *Troubleshooting* on page 79.

## Configuring StorEdge Application

This section describes the StorEdge applications and how to configure the system per application.

### Maximize Self-consumption

In this mode, the battery is automatically charged and discharged to meet consumption needs. This application requires connection to a meter.

The battery has two states:

- OFF – the battery is in standby
- ON – the battery is controlled for maximized self-consumption

Battery OFF periods can be configured to extend battery lifetime by minimizing the number of shallow discharges (for example at nighttime or during the winter).

### Profile Programming (for time of use arbitrage)

In this mode, the StorEdge system operates according to a configured charge/ discharge profile. This application requires connection to a meter. This application is covered in a separate application note available at [http://www.solaredge.com/files/pdfs/StorEdge\\_TOU\\_profile\\_programming.pdf](http://www.solaredge.com/files/pdfs/StorEdge_TOU_profile_programming.pdf).

This application can be used whether or not PV modules are installed at the site.

### Backup Power

The produced power is stored in the battery to be used during power outages. The StorEdge inverter senses the grid voltage, and when it is down it automatically switches to Backup mode, disconnecting from the grid and supplying power to the backed-up loads. This application requires connection to the SolarEdge Auto-transformer and a backed-up loads panel.

This application can be used in one of two ways:

- **Backup-only** – energy stored in the battery is discharged for backup power only
- **Backup with Smart Energy Management** – use some of the battery energy for backup power and the rest for MSC or TOU applications.

The Backup application can be used whether or not PV modules are installed at the site.

## System Configuration

### ► To access the Energy Control menu:

1. Enter Setup mode, scroll down to the **Power Control** menu and select it. A menu similar to the following is displayed:

```
Grid Control <En>
Energy Manager
RRCR Conf.
Reactive Pwr Conf.
Active Pwr Conf.
Phase Balance <Dis>
Wakeup Conf.
P (f)
Advanced
Load Defaults
```

2. Select **Energy Manager**. The following screen is displayed:

```
Limit Control<Dis>
Energy Ctrl <Dis>
Storage Control
```

**Limit Control:** For power limitation (including export limitation) configuration. This option can be used in parallel to energy control. For more information refer to

[http://www.solaredge.com/files/pdfs/products/feed-in\\_limitation\\_application\\_note.pdf](http://www.solaredge.com/files/pdfs/products/feed-in_limitation_application_note.pdf).

- **E:** Export (Feed-in) limit
- **P:** Production limit
- **Dis:** Disabled - no limit

**Energy Control:** The method by which to manage the energy.

**Storage Control:** Enables reserving a minimum battery charge level.

3. Select **Energy Ctrl..** The following is displayed, showing the SolarEdge applications:

```
Max Self-consume
Time of Use
Backup Only
Disable
```

**Max Self-consume (MSC):** Maximize Self-consumption .

**Time of Use (TOU):** Profile Programming.

**Backup Only:** Supply power to loads during power outage.

**Disable:** No energy control, that is, the battery is not used.

### ▶ **To set up maximum self-consumption:**

1. Access the **Energy Control** menu as described above.
2. Select **Max Self-Consume**. The Energy Manager screen changes to display the following:

```
Limit Control<Dis>
Energy Ctrl <MSC>
Set Operation
Storage Control
```

3. Optionally, set the battery OFF periods as follows:
  - a. Select **Set Operation**. A list is displayed, allowing 12 monthly profile setup:

```
Jan <ON>
Feb <ON>
Mar <ON>
Apr <ON>
```

- b. Select a month. A list of options is displayed.

```
Start Time <00:00>
End Time <00:00>
Always ON
Always OFF
```

- c. Select one of the options:
    - Select **Always OFF** to avoid battery usage entirely (for example during winter)
    - Set **Start Time** and **End Time** to set battery usage in specific hours and avoid usage during specific hours throughout the month (for example at night). This sets the periods during which the battery will be in the OFF state.
    - Select **Always ON** to use battery at all times for charging/ discharging.

#### ► **To set up Backup-only:**

1. Access the **Energy Control** menu as described above.
2. Select **Backup only**. The Energy Manager screen changes to display the following:

```
Limit Control<Dis>
Energy Ctrl <BU>
Storage Control
```

#### ► **To set up Backup Power + Smart Energy Management:**

1. Verify that **Backup** is set to **Enable** as follows (Backup should be enabled by default if the hardware supports it).
  - a. Enter Setup mode to display the main menu:

```
Country <USA+>
Language <Eng>
Communication
Power Control
Backup Conf <En>
Display
Maintenance
Information
```

- b. From the main menu select **Backup Conf**.



2. To set a minimum battery charge level, so that the battery will always have energy stored in case backup power is needed, do the following:
  - a. From the **Energy Manager** menu select **Storage Control**. The following is displayed:

```
B a c k u p   R S V D < % P V >
```

- b. Select **Backup RSVD** and set the required level as percentage of the battery capacity:
    - For backup power + Smart Energy Management - according to user requirement
    - For backup-only - according to battery manufacturer recommendation, if provided

## Verifying StorEdge Components Functionality

Upon installation and configuration completion, the system should be operating according to the selected StorEdge application.

This section describes how to verify that all system components are functioning as expected. If not, refer to *Troubleshooting* on page 79.

### ► To check the inverter and meter:

1. Turn the AC ON.
2. Check the meter (installed in export or consumption position, CT arrows point to the grid):
  - a. Turn the inverter ON/OFF switch to OFF.
  - b. Turn loads ON on all of the measured phases.
  - c. Press the external LCD light button to display the Import or Consumption meter status screen, and check that the import or consumption energy (Total [Wh]) is advancing (may take a few minutes, depending on the loads size):

```
I m p o r t   M e t e r
S t a t u s :   < O K >
< E r r o r   M e s s a g e >
T o t a l [ W h ] : X X X X X X X
```

- d. Press the LCD light button to display the Export meter status screen, and check that the Export energy (Total [Wh]) is not advancing: (If export is advancing check the CTs direction.)
3. Turn the inverter ON/OFF switch to ON.
4. Turn the StorEdge Connection Unit switch to ON.
5. While the modules are exposed to sunlight (PV system is connected to the grid and the inverter is producing power), press the inverter LCD light button to display the power status screen, and check that the grid AC output (Vac) increases to 220-240V, and the total AC output power produced (Pac):

```
V a c [ V ]   V d c [ V ]   P a c [ W ]
2 4 0 . 7      3 7 1 . 9   2 3 4 9 . 3
P _ O K :   X X X / Y Y Y   < S _ O K >
                                O N
```

### ► To check Maximum Self-consumption mode:

1. Turn on as many loads to ensure that consumption is greater than the inverter AC rating.
2. If the meter is installed at the grid connection point you can check that the import energy is advancing (may take a few minutes, depending on the loads size): Press the inverter LCD light button

to display the Meter status screen:

```
Import Meter
Status: <OK>

Total [Wh]: XXXXXXXX
```

3. Press the inverter LCD light button to display the Smart Energy Management and the battery status screens, and check that:
  - The State the battery is *Discharging* (assuming the load consumption > PV production and AC limit of inverter > PV production) - The loads are powered by the PV and the battery; if the test is performed at night, the loads are powered only by the battery.
  - The PWR value is greater than 0
  -

```
BSN: XXXXXXXXXX ID: 24
SOE: 89%          PWR: 2W
Total: <X>Wh
State: Discharging
```

```
Site Limit:      7.0 kW
Site Prod:       10.0 kW
Site Export:     4.0 kW
Self-consume:    6.0 kW
```

4. While the modules are exposed to sunlight, verify that the battery is operating properly:
  - a. Minimize the house load consumption by turning off all the load circuit breakers, except for the inverter.
  - b. Press the external LCD light button to display the battery status screen, and check that:
    - The battery State is: Charging
    - The SOE percentage is increasing
    - The PWR value is greater than 0

```
BSN: XXXXXXXXXX ID: 24
SOE: 89%          PWR: 2W
Total: <x>Wh
State: Charging
```


### ► To check Backup:

1. Disconnect the AC power by shutting off the AC at the main distribution panel. The inverter should disconnect from the grid, and continue supplying power to the backed-up loads.
- Switching to Backup mode takes a few seconds. The LCD screen will show tha Backup mode is ON:

```
Vac [V]  Vdc [V]  Pac [W]
240.7    371.9    2349.3
P_OK: XXX/YYY <S_OK>
Backup Mode      ON
```

2. Press the external LCD light button to display the battery status screen, and check that:

- The battery State is: Discharging / Charging
- The SOE percentage is decreasing/increasing
- The PWR value is greater than 0



```
BSN:  XXXXXXXXXXX ID: 24
SOE: 89%           PWR: 3W
Total:  <x>Wh
State:  Discharging
```

3. Turn the AC back ON from the main distribution panel. The inverter should reconnect loads back to the grid.

# Chapter 10: Setting Up Communication to the Monitoring Portal

Power optimizers send information to the inverter via the DC power lines (the PV output circuit). The information is sent from the inverter to the SolarEdge monitoring portal through the Internet. In order to send the data from the inverter, a communication connection must be set up, as described in this chapter.




**CAUTION!**

When connecting the communication cables, make sure that the ON/OFF switch at the bottom of the inverter is turned OFF, and the AC is turned OFF.

When configuring the communication parameters, make sure that the ON/OFF switch is OFF, and the AC is turned ON.

*Lors de la connexion des câbles de communication, assurez-vous que l'interrupteur MARCHE/ARRÊT à la base de l'onduleur soit en position ARRÊT, et le CA est en position ARRÊT. Lors de la configuration des paramètres de communication, assurez-vous que l'interrupteur MARCHE/ARRÊT soit en position ARRÊT, et le CA est en position MARCHE.*

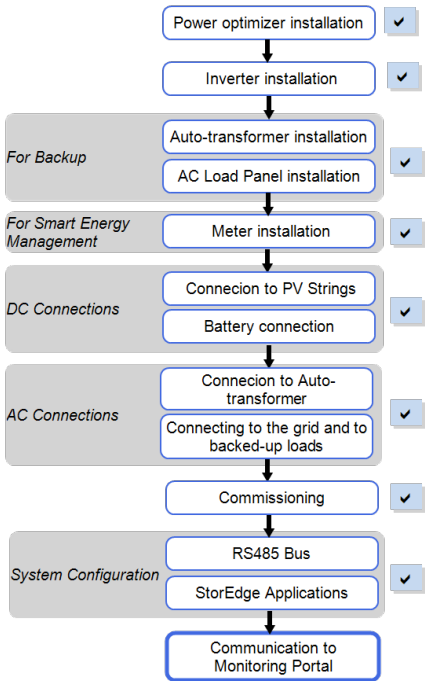

# Communication Types

- **Ethernet:** used for a LAN connection
- **RS485:** used for the connection of multiple SolarEdge devices on the same bus in a master-slave configuration. RS485 can also be used as an interface to external devices, such as meters and third party data loggers.
- **ZigBee:** Optional wireless communication (purchased separately; refer to the supplied manual, also available at <http://www.solaredge.us/groups/products/communication> (under ZigBee)).
- **Cellular:** Optional cellular wireless connection (purchased separately; refer to the supplied manual, also available at <http://www.solaredge.us/groups/products/communication> (under Cellular)).

Only communication products offered by SolarEdge are supported.

## Communication Connectors

Two communication glands are used for connection of the various communication options. Each gland has three openings. The table below describes the functionality of each opening. Unused openings should remain sealed.

Gland#	Opening	Functionality	Cable Size (diameter)
1 (PG16)	One small	External antenna cable	2-4 mm
	Two large	Ethernet connection (CAT5/6), ZigBee, Cellular	4.5-7 mm
2 (PG13.5)	All three	RS485, power reduction	2.5-5 mm

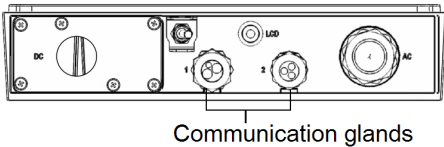


Figure 30: Communication Glands

The communication board has a standard RJ45 terminal block for Ethernet connection, and a 9-pin terminal block for RS485 connection, as shown below:

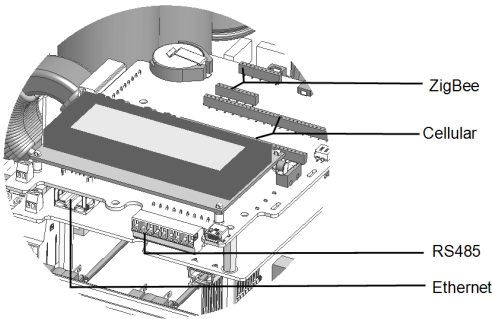


Figure 31: Internal connectors

## Creating an Ethernet (LAN) Connection

This communication option enables using an Ethernet connection to connect the inverter to the monitoring portal through a LAN.

Ethernet cable specifications:

- Cable type – CAT5/CAT6
- Maximum distance between the inverter and the router – 100 m/ 330 ft.

### NOTE



If using a cable longer than 10 m/33 ft in areas where there is a risk of induced voltage surges by lightning, it is recommended to use external surge protection devices. For details refer to: [http://www.solaredge.us/files/pdfs/lightning\\_surge\\_protection.pdf](http://www.solaredge.us/files/pdfs/lightning_surge_protection.pdf). If grounded metal conduit are used for routing the communication wires, there is no need for a lightning protection device.

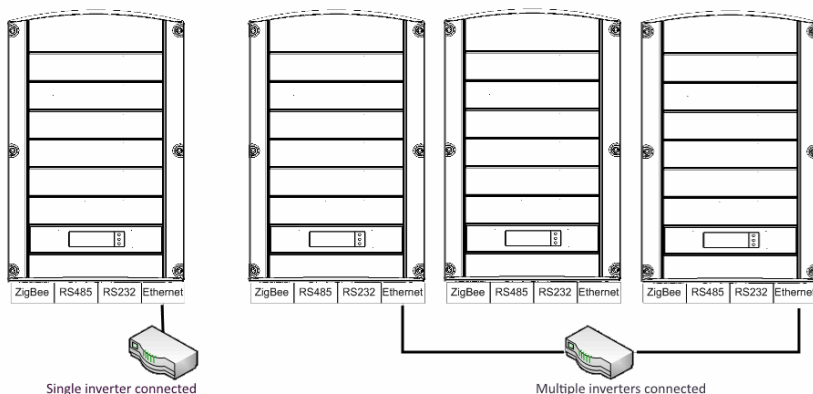


Figure 32: Example of Ethernet connection

### ▶ To connect the Ethernet cable:

1. Remove the inverter cover as described in *Removing the Inverter Cover* on page 39.
2. Open the communication gland #1.



### CAUTION!

The gland includes a rubber waterproof fitting, which should be used to ensure proper sealing.

*Le cote interne du gland contient une rondelle qui doit être utilisée pour une bonne étanchéité.*

3. Remove the plastic seal from the large opening that has a cut in the rubber fitting.
4. Remove the rubber fitting from the gland and insert the CAT5/6 cable through the gland and through the gland opening in the inverter.
5. Push the cable into the cut opening of the rubber fitting.




Figure 33: Rubber fitting

CAT5/6 standard cables have eight wires (four twisted pairs), as shown in the diagram below. Wire colors may differ from one cable to another. You can use either wiring standard, as long as both sides of the cable have the same pin-out and color-coding.

RJ45 Pin #	Wire Color <sup>1</sup>		10Base-T Signal 100Base-TX Signal
	T568B	T568A	
1	White/Orange	White/Green	Transmit+
2	Orange	Green	Transmit-
3	White/Green	White/Orange	Receive+
4	Blue	Blue	Reserved
5	White/Blue	White/Blue	Reserved
6	Green	Orange	Received-
7	White/Brown	White/Brown	Reserved
8	Brown	Brown	Reserved

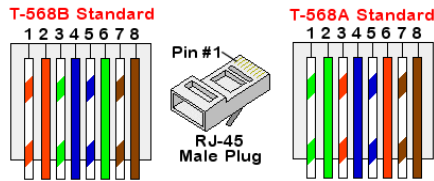


Figure 34: Standard cable wiring

- 6. Use a pre-terminated cable to connect via gland #1 to the RJ45 plug on the inverter's communication board or, if using a spool of cable, connect as follows:
  - a. Insert the cable through gland #1.
  - b. Remove the cable's external insulation using a crimping tool or cable cutter and expose eight wires.
  - c. Insert the eight wires into an RJ45 connector, as described in Figure 34
  - d. Use a crimping tool to crimp the connector.
  - e. Connect the Ethernet connector to the RJ45 port on the communication board.

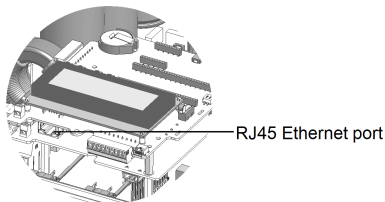


Figure 35: The RJ45 Ethernet connection

<sup>1</sup>The inverter connection does not support RX/TX polarity change. Supporting crossover Ethernet cables depends on the switch capabilities.

7. For the switch/router side, use a pre-crimped cable or use a crimper to prepare an RJ45 communication connector: Insert the eight wires into the RJ45 connector in the same order as above (Figure 34).
8. Connect the cable RJ45 connector to the RJ45 port of the Ethernet switch or router.  
You can connect more than one inverter to the same switch/router or to different switches/routers, as needed. Each inverter sends its monitored data independently to the SolarEdge monitoring portal.
9. The inverter is configured by default to LAN. If reconfiguration is required:
  - a. Make sure the ON/OFF switch is OFF.
  - b. Turn ON the AC to the inverter by turning ON the circuit breaker on the main distribution panel.
  - c. Turn ON the Safety Switch.

**WARNING!**

ELECTRICAL SHOCK HAZARD. Do not touch uninsulated wires when the inverter cover is removed.

*RISQUE D'ÉLECTROCUTION, ne touchez pas les fils non isolés lorsque le couvercle de l'onduleur est retiré.*

- d. Use the internal user buttons to configure the connection, as described in *Communication* on page 45.

**NOTE**

If your network has a firewall, you may need to configure it to enable the connection to the following address:

- Destination Address: prod.solaredge.com
- TCP Port: 22222 (for incoming and outgoing data)

10. Verify the connection, as described in *Verifying the Connection* on page 78.

## Creating an RS485 Bus Connection

The RS485 option enables creating a bus of connected inverters, consisting of up to 31 slave inverters and 1 master inverter. Using this option, inverters are connected to each other in a bus (chain), via their RS485 connectors. The first and last inverters in the chain must be terminated.

RS485 wiring specifications:

- Cable type: Min. 3-wire shielded twisted pair (a 4-wire cable may be used)
- Wire cross-section area: 0.2- 1 mm<sup>2</sup>/ 24-18 AWG (a CAT5 cable may be used)
- Maximum nodes: 32
- Maximum distance between first and last devices: 1 km /3300 ft.

**NOTE**

If using a cable longer than 10 m/33 ft in areas where there is a risk of induced voltage surges by lightning, it is recommended to use external surge protection devices. For details refer to: [http://www.solaredge.us/files/pdfs/lightning\\_surge\\_protection.pdf](http://www.solaredge.us/files/pdfs/lightning_surge_protection.pdf). If grounded metal conduit are used for routing the communication wires, there is no need for a lightning protection device.

**NOTE**


If a revenue grade meter is connected to your inverter, it uses the RS485 port and therefore an RS485 communication bus cannot be created.

The following sections describe how to physically connect the RS485 bus and how to configure the bus.




► **To connect the RS485 communication bus:**

1. Remove the inverter cover as described in *Removing the Inverter Cover* on page 39.
2. Remove the seal from one of the openings in communication gland and insert the wire through the opening.
3. Pull out the 9-pin RS485 terminal block connector, as shown below:

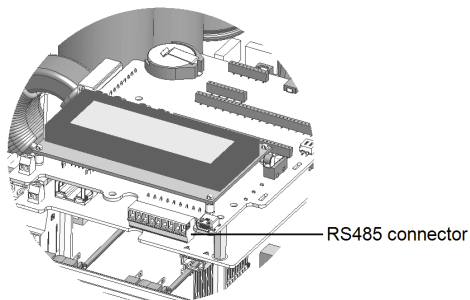

**Figure 36: The RS485 terminal block**


4. Loosen the screws of pins A(+), B(-), and G on the left of the RS485 terminal block.

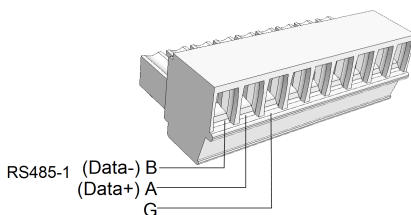

**Figure 37: RS485 terminal block**

5. Insert the wire ends into the **G**, **A** and **B** pins shown above. Use Four- or six-wire twisted pair cable for this connection. You can use any color wire for each of the **A**, **B** and **G** connections, as long as the same color wire is used for all A pins, the same color for all B pins and the same color for all G pins.

6. For creating an RS485 bus - connect all B, A and G pins in all inverters. The following figure shows this connection schema:

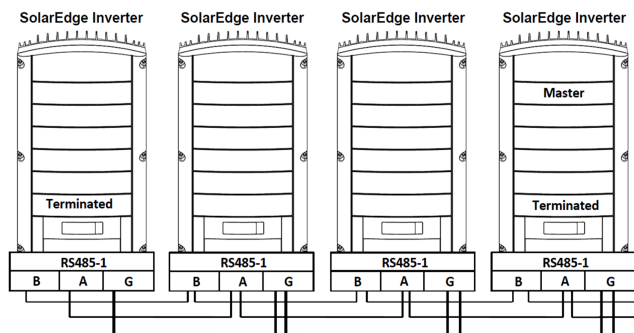


**Figure 38: Connecting the inverters in a chain**



#### NOTE

Do not cross-connect B, A and G wires. Do not insert wires into RS485- 2 pins.

7. Tighten the terminal block screws.
8. Check that the wires are fully inserted and cannot be pulled out easily.
9. Push the RS485 terminal block firmly all the way into the connector on the right side of the communication board.
10. Terminate the first and last SolarEdge device (inverter/Control and communication gateway, etc.) in the chain by switching a termination DIP-switch inside the inverter to ON (move the switch up). The switch is located on the communication board and is marked SW7.

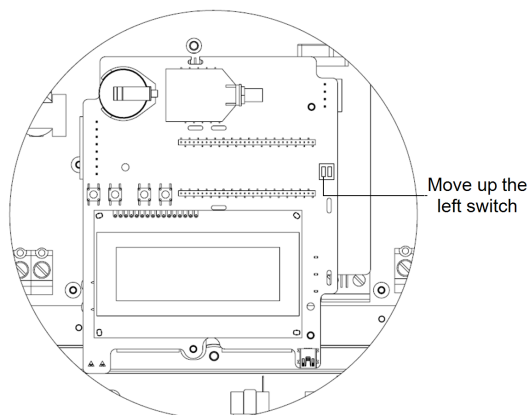

**Figure 39: RS485 termination switch**



#### NOTE


Only the first and last SolarEdge devices in the chain should be terminated. The other inverters in the chain should have the termination switch OFF (down position).

## Verifying the Connection

After connecting and configuring a communication option, perform the following steps to check that the connection to the monitoring server has been successfully established.

1. Close the inverter cover: Attach the inverter cover and secure it by tightening the screws with a torque of 9.0 N\*m / 6.6 lb.\*ft. For proper sealing, first tighten the corner screws and then the two central screws (see also *Figure 28*).
2. Turn ON the AC to the inverter by turning ON the circuit breaker on the main distribution panel and turning on the Safety Switch.
3. Wait for the inverter to connect to the SolarEdge monitoring portal. This may take up to two minutes.

A status screen similar to the following appears on the LCD panel:

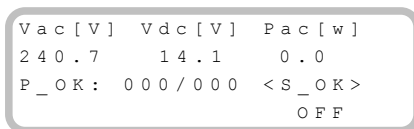

**S\_OK:** Indicates that the connection to the SolarEdge monitoring portal is successful. If S\_OK is not displayed, refer to *"Troubleshooting" on the facing page*.

## Appendix A: Troubleshooting

This appendix describes how to troubleshoot StorEdge related errors.

### Communication Troubleshooting

When a battery and a meter are connected (2 devices connected to the same bus), the following should appear in the Communication status screen:

```

      Dev  Prot  ##
RS485-1 <MLT> <02> <02>
ZigBee  <---> <---> <--->

```

### Device type, number and protocol are displayed incorrectly

If one or more of the following occurs, the meter(s) or the battery are not communicating with the inverter:

- **MLT** (Multi) is not displayed as the device type (under Dev)
- The number of devices under **Prot** (protocol) or under **##** does not match the number of connected devices
- The number under **Prot** (configured devices) does not match the number under **##** (communicating devices)

Check the following:

- The meter and battery configuration is as described in *Configuring the RS485 Bus for Battery and Meter Connection* on page 62.
- The wiring between the StorEdge Connection Unit, the battery and the meter is correct (refer to *Figure 19*).
- There are no loose connections at any of the system components connectors.

### Troubleshooting Ethernet Communication

When using Ethernet communication, use the **Server Communication Status** window to identify the location of the error:

```

Server: LAN    <S_OK>
Status:        <OK>
      xxxxxxxx
<ERROR MESSAGE>

```

xxxxxxxx is a string of 1s and 0s showing an eight-bit communication connection status. 1 indicates OK and 0 indicates an error.

Bit Location	Error Message	Cause and Troubleshooting
1st	LAN Disconnected	Physical connection fault. Check the cable pin-out assignment and cable connection. Refer to .
2nd	DHCP Failed, or Invalid DHCP Config	IP settings issue. Check the router and inverter configuration. Consult your network IT.
3rd	Gateway Ping Failed	Ping to router failed. Check the physical connection to the switch/router. Check that the link LED at the router /switch is lit (indicating phy-link). If OK - contact your network IT, otherwise replace the cable or change it from cross to straight connection.
4th	G Server Ping Failed	Ping to google.com failed. Connect a laptop and check for internet connection. If internet access is unavailable, contact your IT admin or your internet provider.
5th	Server x Ping Failed	Ping or connection to SolarEdge server failed.. Check the SolarEdge server address, under <b>LAN Conf</b> submenu: Address: prod.solaredge.com Port: 22222 Check with your network administrator whether a firewall or another device is blocking transmission.
6th		
7th		
8th	Tcp Connect. Failed	

## Meter Troubleshooting

For troubleshooting a built-in meter, refer to [http://www.solaredge.com/files/pdfs/built-in\\_rgm\\_troubleshooting.pdf](http://www.solaredge.com/files/pdfs/built-in_rgm_troubleshooting.pdf).

When a meter is connected, there will be a status screen for each meter function. The following is an example of the export meter function status:

```
Export Meter
Status: <OK>
<Error Message>
Total [Wh]:XXXXXXXX
```

### <OK> is not displayed

If <OK> is not displayed in the Status line of the status screens, the meter is not communicating with the inverter communication board. Check the following:

- There are no loose connections at the inverter communication board and at the meter.
- The wiring between the 4-pin terminal block on the meter and the RS485 terminal block on the StorEdge Connection Unit is correct (refer to *Figure 19*).

## An error message is displayed

If **Error 185 Meter Comm. Error** is displayed in the meter status screen, verify proper connection of:

- The RS485 cables and connectors
- The AC connection of the meter

## Total [Wh] Import value is not advancing

If the inverter is not producing power, and there is power consumption by the loads, the Total [Wh] value should be changing.

If the Total [Wh] value of the Import meter displays a steady value although the site is consuming power, check the following:

- The meter status LEDs are lit. If the LEDs are all OFF, the meter is not connected to a power source.
  - Check the meter AC connection (10-pin terminal block)
  - Check that the meter breaker is ON
- There are no loose connections at the 10-pin AC wiring of the meter.
- The CT black and white cables are correctly connected to the 6-pin connector on the meter:
  - White CT wire is connected to L1 white
  - Black CT wire is connected to L1 black
- CT direction is towards the grid and the green power LEDs are ON. If the LEDs are not green indicating import power - the CTs are reversed.

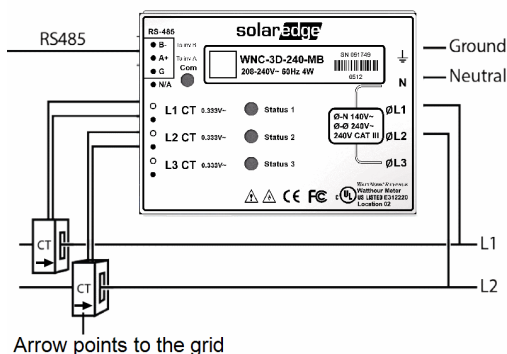


Figure 40: Meter with CT

## Battery Troubleshooting

The State line in the battery status screen should display one of the following: Charging, Discharging, Idle, Off, Init.:

```
BSN: XXXXXXXXXX ID: 24
SOE: 89% PWR: 0W
Total: 0Wh
State: Idle
```

- If **Error 186 Battery Comm. Error** appears, the battery communication is disconnected. Check the following:
  - The RS485 control connection to the battery
  - The DIP switches settings on the battery:
    - S1, S3, S5: Up
    - S2, S6: Left
    - S4: Down
  - The ID DIP switches setting on the battery - All should be set to the right (0) position
- If the state Idle is displayed instead of Charging/Discharging, check the following:
  - The system configuration
  - The DC connection
  - The LEDs in the StorEdge Connection Unit - refer to *StorEdge Connection Unit LEDs* on page 88

## Additional StorEdge Troubleshooting

Some of the troubleshooting procedure may require removing the covers of system components (inverter, battery, StorEdge Connection Unit, or meter). Be sure to disconnect all power sources to avoid electrocution.

For opening the cover refer to *Removing the Inverter Cover* on page 39



### WARNING!

ELECTRICAL SHOCK HAZARD. Do not touch uninsulated wires when the inverter cover is removed.

*RISQUE D'ÉLECTROCUTION, ne touchez pas les fils non isolés lorsque le couvercle de l'onduleur est retiré.*

Problem	Description or possible cause	Troubleshooting
During normal operation (grid supplies power), no power to the backup loads while the inverter is producing power	The main circuit breakers or loads circuit breakers in the backed up loads panel have been triggered	Check that the backed-up loads breakers on the CB panel are in the UP position
	Internal circuit breaker has been triggered	Check that the AC circuit breaker in the StorEdge Connection Unit is in the UP position (see <i>Figure 9</i> )
	The inverter is malfunctioning	Restart the inverter
	If the problem persists	If the problem persists, move the AC bypass switch in the StorEdge Connection Unit to position 2 (see

Problem	Description or possible cause	Troubleshooting
		Figure 9) to supply power to the loads until the inverter problem is solved. Then move to position 1.
No power to the backup loads while grid is OFF (power outage)	The backed-up loads are not backed up	<ul style="list-style-type: none"><li>○ Check that the inverter is producing power</li><li>○ Check that there are no errors on the inverter LCD</li><li>○ Check the circuit breakers on the backed-up loads AC panel</li><li>○ Check that the AC breaker in the StorEdge Connection Unit are in the UP position (see Figure 9)</li><li>○ Check that the AC bypass switch in the StorEdge Connection Unit is set to position 1 (see Figure 9) .</li></ul>
Inverter without auto-transformer (On-grid only) - The inverter does not start production and <b>Error 182 Auto-Transformer Temp. Too High</b> is displayed	The thermal sensor cables are not connected.	Move the DIP switch SW2 in the StorEdge Connection Unit to the UP position (ON) (refer to <i>DIP Switch Setup according to System Application</i> on page 38).

Error Codes

The error messages include an error number and a description, and have the following format:

```
Error Code XXX
( 3 x D 2 )
< Line 1 >
< Line 2 >
```

**XXX:** The error number. The error code numbers may differ depending on the inverter type (single phase or three phase) as described in the table below.

**(#-X#):** A code indicating the source of error and the error information sent to the monitoring server. This information is used by SolarEdge Support for advanced troubleshooting..

**Line 1-2:** Error description




**WARNING!**

All Warnings and Cautions in this manual should be adhered to while troubleshooting an error.

Tous les avertissements et précautions mentionnés dans ce manuel doivent être aussi appliqués en cas de dépannage.



## General Inverter Error Codes

Error # Single Phase	Error # Three Phase	LCD Message	Cause and Troubleshooting
4, 5, 8, 12, 18-23, 39, 42, 45	45, 48, 50-53, 94, 108- 111, 113	SW Error	Contact SolarEdge Support.
N/A	112	Wrong AC connection	Switch between L1 and L2 or L2 and L3 connections
9, 13	N/A	AC Current Surge	Ground current surge. <ul style="list-style-type: none"> <li>Check the AC connection to the inverter</li> <li>Check with the grid operator if a large surge source or irregular load exists near the site.</li> <li>If the grid does not have problems contact SolarEdge support.</li> </ul>
10, 37, 38	76, 77, 90	Ground Current - RCD	<p>Ground faults may occur due to insufficient insulation to the ground.</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;">  <p><b>WARNING!</b> ELECTRICAL SHOCK HAZARD. Do not touch uninsulated wires when the inverter cover is removed. <i>RISQUE D'ÉLECTROCUTION, ne touchez pas les fils non isolés lorsque le couvercle de l'onduleur est retiré.</i></p> </div> <p>Only a qualified technician should handle this problem, and only after taking proper precautions.</p> <ol style="list-style-type: none"> <li>Turn the inverter ON/OFF switch to OFF.</li> <li>Wait five minutes for the input capacitors to discharge.</li> <li>Disconnect the AC breaker.</li> <li>Disconnect the DC inputs.</li> <li>Connect each DC string separately, turn the AC and the inverter ON/OFF switch to ON, until the error appears for the faulty string. <ul style="list-style-type: none"> <li>Do not connect strings with a grounding fault to the inverter. A certified installer must fix the faulty string before connecting it to the inverter</li> <li>For further documentation, contact SolarEdge Support.</li> </ul> </li> </ol>
14	58/59/60	AC Voltage Too High (Line 1/2/3)	<p>If the fault persists:</p> <ul style="list-style-type: none"> <li>Check the AC connection to inverter.</li> <li>Verify that the inverter is set to the correct country.</li> <li>Check with the grid operator if a large surge source or irregular load exists near the site.</li> <li>Verify that the output wire size matches the distance between the inverter and the location of the grid connection.</li> <li>Use a larger gauge wire for the AC output.</li> </ul>

Error # Single Phase	Error # Three Phase	LCD Message	Cause and Troubleshooting
			<ul style="list-style-type: none"> <li>Refer to the <i>AC Wiring Application Note</i> <a href="http://www.solaredge.us/files/pdfs/application-note-recommended-wiring.pdf">http://www.solaredge.us/files/pdfs/application-note-recommended-wiring.pdf</a></li> </ul>
15	102	DC Voltage Too High	<p>The SolarEdge system normally eliminates DC overvoltage errors. If the fault persists:</p> <ul style="list-style-type: none"> <li>Turn OFF the inverter ON/OFF switch. If after five minutes, the LCD panel does not show a low safety voltage (1V per optimizer), check which string is malfunctioning and recheck its connections to the inverter.</li> <li>Proceed according to <i>Power Optimizer Troubleshooting</i> on page 88</li> <li>Re-commission all inverters in the site, as described in <i>Commissioning the Installation</i> on page 55</li> </ul>
16	123	Hardware Error	Contact SolarEdge Support.
17	104	Temperature Too High	<ul style="list-style-type: none"> <li>Verify proper inverter clearances.</li> <li>Make sure the heat-sink fins are clean and unobstructed.</li> </ul>
24	N/A	Faulty Temp. Sensor	Broken or unconnected temperature sensor. Contact SolarEdge Support.
25	121	Isolation Fault	<ul style="list-style-type: none"> <li>Check the PV installation for isolation problems and ground leakage.</li> <li>Only a certified PV installer must fix the faulty string before connecting it to the inverter.</li> <li>Refer to <a href="http://www.solaredge.us/files/pdfs/application_note_isolation_fault_troubleshooting.pdf">www.solaredge.us/files/pdfs/application_note_isolation_fault_troubleshooting.pdf</a></li> </ul>
26	122	Faulty AC Relay	<ul style="list-style-type: none"> <li>Disconnect inverter from AC grid.</li> <li>Contact SolarEdge Support.</li> </ul>
27, 153	95, 106, 120, 125, 126	Hardware Error	Contact SolarEdge support.
28	N/A	RCD Sensor Error	Contact SolarEdge support.
29-30	N/A	Phase Balance Error	<ul style="list-style-type: none"> <li>Check the grid connection.</li> <li>Check the GND connection.</li> <li>Check the L1, L2 and Neutral connections.</li> <li>Verify symmetric load between L1 and L2.</li> <li>Consult the local grid authority.</li> </ul>
31, 33	64/65/66	AC Voltage Too High (Line 1/2/3)	<ul style="list-style-type: none"> <li>Verify that the inverter is set to the correct country.</li> <li>Turn OFF the inverters in the site and verify AC grid voltage.</li> <li>If the inverter is located far from the connection point to the grid, use a larger gauge AC wire.</li> <li>Consult the grid operator.</li> </ul>

Error # Single Phase	Error # Three Phase	LCD Message	Cause and Troubleshooting
			<ul style="list-style-type: none"> <li>If permitted by local authorities, change the grid protection values. Refer to <a href="http://www.solaredge.com/files/pdfs/viewing_grid_protection_values.pdf">http://www.solaredge.com/files/pdfs/viewing_grid_protection_values.pdf</a></li> </ul>
32, 41	61/62/63, 67/68/69	AC Voltage Too Low	<ul style="list-style-type: none"> <li>Verify that the inverter is set to the correct country.</li> <li>Consult the grid operator.</li> <li>If permitted by local authorities, change the grid protection values. Refer to <a href="http://www.solaredge.com/files/pdfs/viewing_grid_protection_values.pdf">http://www.solaredge.com/files/pdfs/viewing_grid_protection_values.pdf</a></li> </ul>
34	79/80/81	AC Freq Too High (Line 1/2/3)	
35	82/83/84	AC Freq Too Low (Line 1/2/3)	
36	72/74/75	DC Injection (Line 1/2/3)	Contact SolarEdge support.
40	N/A	Islanding	AC grid voltage malfunction. When AC voltage returns the inverter should restart after the reconnection time. If the problem persists, consult with the grid operator.
43	N/A	Internal HW Error	Contact SolarEdge support.
44	44	No Country Selected	Select the country, as described in <i>Country and Grid</i> on page 45.
46		Phase Unbalance	Select <b>Power Control → Phase Balance → Disable</b> .
N/A	103, 119	UDC Min / DC Voltage Too Low	Turn the inverter OFF and ON. If the fault persists, contact SolarEdge support.
N/A	49	Communication Error	Contact SolarEdge support.
N/A	78	Grid Sync Error	Contact SolarEdge support.
N/A	91/92/93 (TZ L1/L2/L3), 96/97/98 (Iac L1/L2/L3 Max).	AC Over Current Line 1/2/3	Contact SolarEdge support.
N/A	99-101	AC Voltage Too High Line 1/2/3	Turn the inverter OFF and ON. If the fault persists, contact SolarEdge support.
N/A	105	Temperature Too Low	Make sure the inverter is installed in a location with ambient temperatures within the range specified in the datasheet.
N/A	124	Ground Current	Contact SolarEdge support.

Error # Single Phase	Error # Three Phase	LCD Message	Cause and Troubleshooting
		–RCD	
150, 151	150, 151	Arc Fault Detected	Refer to <i>Inverter Arc Detection and Interruption</i> on page 1.
152	152	Arc detector self-test failed	Refer to <i>Inverter Arc Detection and Interruption</i> on page 1.

## StorEdge-related Errors Codes

This section describes the error messages that are specific to the StorEdge solution. For the general SolarEdge troubleshooting refer to the codes in the previous section.

Error code	LCD message	Cause and Troubleshooting
178	Internal RGM Error	Check the CTs connections and direction.
179, 180	Backup Consumption Too High	Inverter production stopped due to backed-up loads' consumption exceeding product rating. Shutdown non-essential loads to reduce power consumption.
181	Connection Unit HW Error	Check all the communication cable between the StorEdge Connection Unit and the digital board in the inverter.
182	Auto-Transformer Temp. Too High	Inverter production stopped due to auto-transformer overheating. Shutdown non-essential loads to reduce the phase imbalance. If you use the inverter for on-grid applications only (without auto-transformer) - move SW2 to the UP position (ON) (refer to <i>DIP Switch Setup according to System Application</i> on page 38).
183	Connection Unit Communication Error	There is a faulty wire connection or an internal error. <ul style="list-style-type: none"> <li>Check the communication cable between the StorEdge Connection Unit and the digital board in the inverter.</li> <li>Check that the StorEdge Connection Unit LEDs are ON.</li> </ul>
184	Connection Unit Temp. Too High	Inverter production stopped due to StorEdge Connection Unit overheating or due to internal fan malfunction. <ul style="list-style-type: none"> <li>Clean the StorEdge Connection Unit fan</li> <li>If the fan is malfunctioning, replace the fan</li> </ul>
185	Meter Comm. Error	Refer to <i>Meter Troubleshooting</i> on page 80.

## System Warnings

Warnings are displayed in the initial status screen with the format: <Warning X>. For example:


```
Vac [V]   Vdc [V]   Pac [W]
1.0       0.5       0.0
P_OK: XXX/YYY <S_OK>
Warning 8           ON
```

The warning is a status screen. To view the warning description, press the LCD button. The following is a list of system warnings:

Warning #	LCD text	Comments and troubleshooting
1-4, 6-7	Fan X Failure	Clean or replace the fan
5	Turn Switch Off to Configure	Appears when trying to access the Setup menus during production
8	Connection Unit Low 9V Battery	Replace the 9V battery in the StorEdge Connection Unit. Refer to <i>9V Battery Replacement</i> on page 91.

## StorEdge Connection Unit LEDs

There are three LEDs on the lower board of the StorEdge Connection Unit, near the DIP switches:

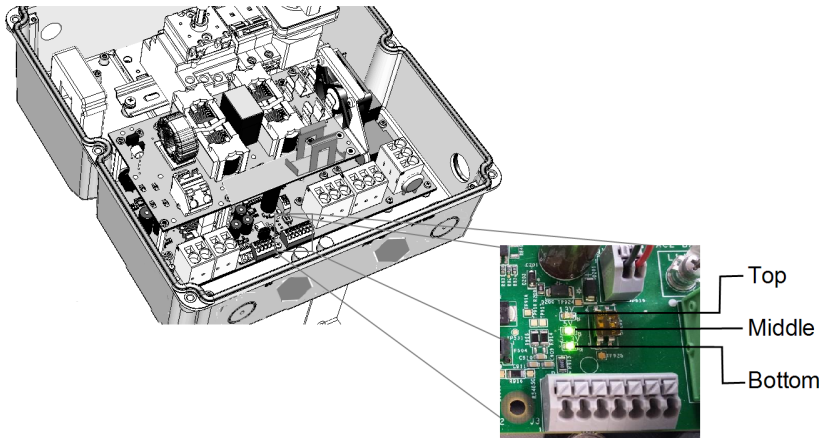

**Figure 41: StorEdge Connection Unit LEDs**

- In normal operation, the middle and bottom LEDs indicate auxiliary voltages (13V from DC/DC, 5V and 3.3V) and should always be lit.
- The top LED should be lit when the inverter DC voltage is at least 200 Vdc (check when both inverter ON/OFF switch and StorEdge Connection Unit switch are ON). You can check the status screen for the Vdc value.
- If all LEDs are OFF:
  - Check that AC voltage exists in the inverter
  - Check that the communication cable between the StorEdge Connection Unit and the digital board is properly connected.
- If the top LED is ON, and middle and bottom LEDs are off - an internal failure has occurred. Contact SolarEdge support.

## Power Optimizer Troubleshooting

If the inverter status screen indicates that not all power optimizers are paired or not all are reporting (P\_OK xxx/yyy, and x<y), those optimizers can be identified through the LCD. Refer to

<http://www.solaredge.com/files/pdfs/products/inverters/non-responding-power-optimizers.pdf>

Problem	Possible cause and troubleshooting
Pairing failed	Power optimizers are shaded. If you connected the inverter to the SolarEdge monitoring portal, retry pairing remotely (during sunlight). Make sure to leave the inverter ON/OFF switch ON and that S_OK appears on the LCD..
String voltage is 0V	Power optimizer(s) output is disconnected. Connect all power optimizer outputs
String voltage not 0V but lower than number of optimizers	Power optimizer(s) not connected in the string. Connect all power optimizers
	Module(s) not connected properly to power optimizer inputs (not applicable to smart modules). Connect the modules to the optimizer inputs
	String reverse polarity. Check string polarity using a voltmeter and correct if needed.
	Extra power optimizer(s) connected in the string (not applicable to smart modules). Check if an extra power optimizer is connected in the string. If not – proceed to next solution.
<b>WARNING!</b> If the measured voltage is too high, the installation may not have a safe low voltage. PROCEED WITH CARE! A deviation of $\pm 1\%$ per string is reasonable.  <i>Si la tension mesurée est trop haute, la tension basse de sécurité pourrait manquer dans l'installation. REDOUBLEZ DE PRECAUTION. Une déviation de <math>\pm 1\%</math> par string est raisonnable.</i>	A module is connected directly to the string, without a power optimizer (not applicable to smart modules). Verify that only power optimizers are connected in the string and that no module outputs are connected without a power optimizer. If the problem persists, proceed to the next step.
	Power optimizer(s) malfunction. <ul style="list-style-type: none"> <li>○ Disconnect the wires connecting the power optimizers in the string.</li> <li>○ Measure the output voltage of each power optimizer to locate the power optimizer that does not output 1V safety voltage. If a malfunctioning power optimizer is located, check its connections, polarity, module, and voltage.</li> <li>○ Do not continue before finding the problem and replacing the malfunctioning power optimizer. If a malfunction cannot be bypassed or resolved, skip the malfunctioning power optimizer, thus connecting a shorter string.</li> </ul>

## Appendix B: Replacing and Adding System Components



### NOTE


If you are permanently disassembling the installation or part of it, make sure to use the disposal methods dictated by local regulations.



### CAUTION!

Do not remove the six screws on the DC conduit metal panel as it may harm the inverter sealing and void the warranty.

*Ces vis ne doivent pas être retirées. Les enlever est susceptible d'endommager l'étanchéité de l'onduleur et annuler la validité de la garantie.*

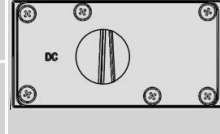

## Replacing an Inverter

1. Turn OFF the inverter ON/OFF switch, and wait until the LCD indicates that the DC voltage is safe (<50V), or wait five minutes before continuing to the next step.



### WARNING!

If you cannot see the inverter panel, or if a malfunction is indicated on the LCD panel, wait five minutes for the input capacitors of the inverter to discharge.

*Si vous ne pouvez pas voir l'écran de l'onduleur ou si un dysfonctionnement est indiqué sur l'écran LCD, attendez cinq minutes pour que les condensateurs d'entrée de l'onduleur soient déchargés.*

2. Turn OFF the StorEdge Connection Unit.
3. Open the StorEdge Connection Unit cover.
4. Turn the Bypass switch inside the StorEdge Connection Unit to position 2, in order to maintain power to the backed-up loads.
5. Open the inverter cover as described in *Removing the Inverter Cover* on page 39.
6. Disconnect the DC and AC wires from the inverter. Open the DC and AC wires ferrite beads and set them aside.
7. Disconnect the cable connecting the inverter digital board to the StorEdge Connection Unit.
8. Unscrew the two conduit nuts in the inverter securing the StorEdge Connection Unit to the inverter.
9. Remove the screws securing the inverter to the mounting bracket and remove the inverter from the mounting bracket.



### NOTE

If you remove the old inverter and do not immediately install a new one, then:

- Lock the StorEdge Connection Unit in the OFF position using a lock on the switch.
- Use insulation tape to isolate each of the AC and DC wires.
- Seal the open conduits using duct tape.

10. Place the new inverter on the mounting bracket; insert the screws securing the inverter to the mounting bracket.
11. Screw the two conduit nuts in the inverter securing the StorEdge Connection Unit to the inverter.
12. Connect the DC and AC wires to the inverter.

13. Place the ferrite beads on the wires and close them. Make sure the DC labeled ferrite bead is placed on the DC wires and the AC labeled ferrite bead is placed on the AC wires.
14. Close the inverter cover.
15. Configure the system to the required application as described in *System Configuration* on page 62
16. Perform the commissioning steps as described in *Commissioning the Installation* on page 55.

## 9V Battery Replacement

If Warning 8: **Connection Unit Low 9V Battery** is displayed in the main status screen, replace the 9V battery in the StorEdge Connection Unit.

1. Turn OFF the inverter ON/OFF switch, and wait until the LCD indicates that the DC voltage is safe (<50V), or wait five minutes before continuing to the next step.

### WARNING!



If you cannot see the inverter panel, or if a malfunction is indicated on the LCD panel, wait five minutes for the input capacitors of the inverter to discharge.

*Si vous ne pouvez pas voir l'écran de l'onduleur ou si un dysfonctionnement est indiqué sur l'écran LCD, attendez cinq minutes pour que les condensateurs d'entrée de l'onduleur soient déchargés.*

2. Turn OFF the StorEdge Connection Unit and the AC switch of the distribution panel.
3. Open and remove the StorEdge Connection Unit cover.
4. Open and remove the transparent internal cover.
5. Remove the battery from the upper board of the StorEdge Connection Unit and replace with a new standard 9V battery.
6. Close the StorEdge Connection Unit covers.

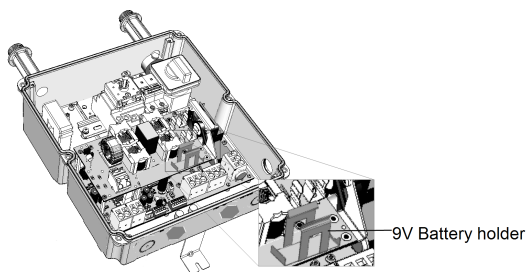


Figure 42: The battery holder



## Fuse Replacement

Replacement kits are available from SolarEdge or you can use other fuses with identical ratings.

1. Turn OFF the inverter ON/OFF switch, and wait until the LCD indicates that the DC voltage is safe (<50V), or wait five minutes before continuing to the next step.

**WARNING!**

If you cannot see the inverter panel, or if a malfunction is indicated on the LCD panel, wait five minutes for the input capacitors of the inverter to discharge.

*Si vous ne pouvez pas voir l'écran de l'onduleur ou si un dysfonctionnement est indiqué sur l'écran LCD, attendez cinq minutes pour que les condensateurs d'entrée de l'onduleur soient déchargés.*

2. Turn OFF the StorEdge Connection Unit and the AC switch of the distribution panel.
3. Open and remove the StorEdge Connection Unit cover.
4. Open and remove the internal transparent cover.
5. Remove the faulty fuse from the upper board of the StorEdge Connection Unit and replace with a new fuse.
6. Close the StorEdge Connection Unit covers.

## StorEdge Connection Unit Replacement

### Removing the Existing StorEdge Connection Unit

1. Turn OFF the inverter ON/OFF switch, and wait until the LCD indicates that the DC voltage is safe (<50V), or wait five minutes before continuing to the next step.

**WARNING!**

If you cannot see the inverter panel, or if a malfunction is indicated on the LCD panel, wait five minutes for the input capacitors of the inverter to discharge.


*Si vous ne pouvez pas voir l'écran de l'onduleur ou si un dysfonctionnement est indiqué sur l'écran LCD, attendez cinq minutes pour que les condensateurs d'entrée de l'onduleur soient déchargés.*

2. Turn OFF the StorEdge Connection Unit and the AC switch of the distribution panel.
3. Open the inverter cover.
4. Disconnect the DC and AC wires from the inverter. Open the DC and AC wires ferrite beads and set them aside.
5. For RGM inverter - Disconnect the RS485 connector from the inverter communication board.
6. Disconnect the cable connecting the inverter digital board to the StorEdge Connection Unit.
7. Unscrew the two conduit nuts in the inverter securing the StorEdge Connection Unit to the inverter.
8. Open the StorEdge Connection Unit cover and disconnect:
  - PV DC wires
  - Battery wires
  - Auto-transformer wires, if connected
  - Backed-up loads panel wires, if connected
  - External meter, if connected

9. Unscrew the two conduit nuts securing the StorEdge Connection Unit to the external conduits.
10. Release the bracket securing the StorEdge Connection Unit to the wall.
11. Carefully remove the StorEdge Connection Unit with its mounting bracket from the wall.

## Installing a New StorEdge Connection Unit

1. Open the StorEdge Connection Unit cover.
2. Position the new StorEdge Connection Unit below the inverter and from the inside of the inverter grab the AC and DC wires extending from the unit conduits, as shown below:

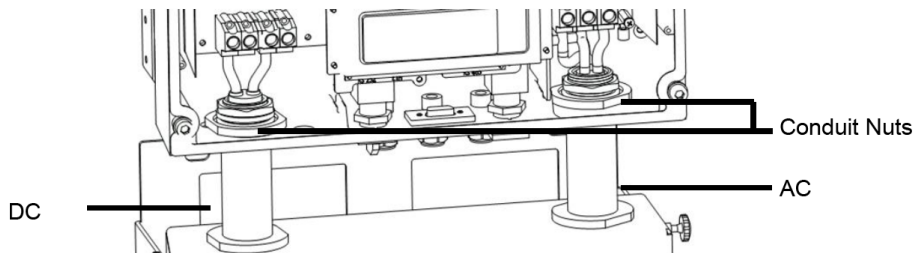

**Figure 43: Inserting the AC and DC conduits**

3. Attach the StorEdge Connection Unit with its bracket to the wall and slightly close the screws. Do not over tighten.
4. For RGM inverters - Insert the meter RS485 cable through the DC side conduit of the StorEdge Connection Unit and connect to the inverter communication board.
5. Reconnect the cable from the inverter digital board to the StorEdge Connection Unit.
6. Reconnect all the external wires and ferrite beads..
7. Securely screw the two conduit nuts onto the conduit ends in the inverter. Verify proper conduit sealing.
8. Close the StorEdge Connection Unit cover. Attach the cover and secure it by tightening the six screws with a torque of 1.2 N\*m / 0.9 ft. \*lb.

If you have technical queries concerning our products, please  
contact our support through SolarEdge service portal:  
<http://www.solaredge.com/groups/support/services>

USA and Canada: + 1 (0) 510 498 3200  
Worldwide: + 972 (0) 73 240 311 8  
Fax: + 1 (0) 530 273 276 9  
Email to: [support@solaredge.us](mailto:support@solaredge.us)

[www.solaredge.us](http://www.solaredge.us)



MAN-01-00262-1.0

**solar**edge