

The background of the entire page is a high-resolution photograph of several solar panels. The panels are dark blue with a grid of white lines representing the cell structure. They are arranged in a perspective that makes them appear to recede into the distance. A solid green rectangular area is located in the top-left corner of the page, partially overlapping the solar panels.

INSTALLATION MANUAL REC 72-CELL PANELS

Installation instructions for all REC Peak Energy and REC TwinPeak 72-cell size solar panels certified according to IEC 61215 / 61730:

- REC Peak Energy 72 & REC Peak Energy 72 XV Series
- REC TwinPeak 72 & REC TwinPeak 72 XV Series
- REC TwinPeak 2S 72 & REC TwinPeak 2S 72 XV Series
- REC TwinPeak 2S 72B XV Series

CONTENTS

CONTENTS	2
List of figures	2
INTRODUCTION	3
How to use this manual	3
Your responsibility as an installer	3
Liability disclaimer	3
Limited warranty	3
SAFETY MEASURES	4
Safety in the working area	4
Panel handling	4
ELECTRICAL INSTALLATION	5
MECHANICAL INSTALLATION	5
Fire guidelines	5
Orientation	5
Environmental factors	5
PANEL INSTALLATION	6
Rail specifications	6
Clamp specifications	6
Mounting methods: REC Peak Energy 72 & REC Peak Energy 72 XV Panels	7
Mounting methods: REC TwinPeak 72 & REC TwinPeak 72 XV panels	8
Mounting methods: REC TwinPeak 2S 72, REC TwinPeak 2S 72 XV & REC TwinPeak 2S 72 XV Bifacial panels	9
Drainage holes	10
Grounding	10
CONNECTIONS AND CONNECTORS	11
MAINTENANCE	12
Cleaning instructions	12
Recycling	12
Disposal of old electrical and electronic equipment	12
PANEL INFORMATION	13
Technical characteristics: REC Peak Energy 72 & REC Peak Energy 72 XV	13
Technical characteristics: REC TwinPeak 72 & REC TwinPeak 72 XV	14
Technical characteristics: REC TwinPeak 2S 72 & REC TwinPeak 2S 72 XV	15
Technical characteristics: REC TwinPeak 2S 72 XV Bifacial	16
ANNEX 1: INSTALLATIONS ON WATER PLATFORMS	17
ANNEX 1: INSTALLATIONS ON WATER PLATFORMS	18
EC DECLARATION OF CONFORMITY	19
DOCUMENT HISTORY	20

LIST OF FIGURES

Fig. 1: Example of rail cross-section	6	Fig. 14: Clamping Zones: REC TwinPeak 2S 72 Series	9
Fig. 2: Panel mounting: Rails parallel to long side	6	Fig. 15: Mounting holes: REC TwinPeak 2S 72 Series	9
Fig. 3: Panel mounting: Rails parallel to short side	6	Fig. 16: Mounting hole specifications: REC TwinPeak 2S 72 Series	9
Fig. 4: Clamp specifications: End and mid-clamps	6	Fig. 17: Mounting hole installation: REC TwinPeak 2S 72 Series	9
Fig. 5: Clamping the frame to rail	6	Fig. 18: Drainage and grounding holes	10
Fig. 6: Clamping Zones: REC Peak Energy 72 Series	7	Fig. 19: Connector mating matrix	11
Fig. 7: Mounting holes: REC Peak Energy 72 Series	7	Fig. 20: Minimum cable bend radius	11
Fig. 8: Mounting hole specifications: REC Peak Energy 72 Series	7	Fig. 21: WEEE symbol	12
Fig. 9: Mounting hole installation: REC Peak Energy 72 Series	7	Fig. 22: Panel dimensions: REC Peak Energy 72	13
Fig. 10: Clamping Zones: REC TwinPeak 72 Series	8	Fig. 23: Panel dimensions: REC TwinPeak 72	14
Fig. 11: Mounting holes: REC TwinPeak 72 Series	8	Fig. 24: Panel dimensions: REC TwinPeak 2S 72	15
Fig. 12: Mounting hole specifications: REC TwinPeak 72 Series	8	Fig. 25: Panel dimensions: REC TwinPeak 2S 72 XV Bifacial	16
Fig. 13: Mounting hole installation: REC TwinPeak 72 Series	8		

INTRODUCTION

Thank you for choosing REC photovoltaic panels for your installation. REC solar panels are ideal for delivering long-lasting and reliable power output. They have been created through intelligent design and are manufactured to the highest quality and environmental standards. With correct installation and maintenance, REC panels will provide clean, renewable energy for many years.

Please read this entire manual carefully. It contains critical information on safety, as well as detailed instructions for the installation, operation and maintenance of the panels. Failure to follow these procedures will invalidate the warranty (available to download via www.recgroup.com/warranty). Review all instructions and safety notes before working on the system. Failure to do so may lead to injury or damage to property.

HOW TO USE THIS MANUAL

This installation manual describes the procedures for the terrestrial mounting in a photovoltaic array of all REC solar panels of a '72-cell size' certified according to IEC 61215 and IEC 61730 standards. This includes all product variants (as indicated by the use of the appropriate suffix in the panel name) with a white, black or transparent backsheet, and a silver or black frame. The installed panel is considered to be in compliance with IEC 61215 and IEC 61730 only when mounted in the manner specified by this installation manual. Note that any panel without a frame (laminated) is not considered to comply with the requirements of IEC 61215 and IEC 61730 unless mechanically installed with hardware that has been tested and evaluated with the panel under this standard or by a field inspection certifying that the installed panel complies with the requirements of IEC 61215 and IEC 61730.

Except where specifically stated, the information and drawings within this manual refer to all frame, backsheet, and cell types; the illustrations are meant to be a generic representation of the instructions detailed in the text regardless of the color depicted. Review this entire manual before commencing installation of the panels and ensure you are working from the latest version. Throughout the manual, you will see icons which highlight important information or notes:



Indicates potential for damage to the array, property or personal safety.



Indicates important notes on best practice to help with the installation.

For further information on installation procedures, please call your panel distributor or contact your local REC Solar office. Details can be found at: www.recgroup.com/contact.

YOUR RESPONSIBILITY AS AN INSTALLER

Installers are responsible for the safe and effective installation and operation of the photovoltaic system and for adhering to all applicable local and national standards and regulations. Prior to installation, check all current regulations and permits concerning solar installations and ensure all local directives are observed. Furthermore, installers are responsible for the following points:

- Ensuring the REC panels are in a suitable condition for use and appropriate for the particular installation and environment,
- Using only parts that comply with the specifications set out in this manual,
- Ensuring a safe installation of all aspects of the electrical array.



All equipment should be properly maintained and inspected prior to use.

Do not attempt to install REC solar panels when you are unsure of the procedure or suitability. For questions or guidance with your installation, please call your distributor or contact your REC sales office, which can be found at: www.recgroup.com/contact.

LIABILITY DISCLAIMER

REC SOLAR PTE. LTD. accepts no liability for the usability and functionality of its photovoltaic panels if the instructions in this guide are not observed. Since compliance with this guide and the conditions and methods of installation, operation, use and maintenance of the panels are not checked or monitored by REC SOLAR PTE. LTD., REC SOLAR PTE. LTD. accepts no liability for damage arising from improper application or incorrect installation, operation or maintenance. This does not apply to damages due to a panel fault, in cases of loss of life, bodily injury or damage to health or in the event of a grossly negligent breach of obligations on the part of REC SOLAR PTE. LTD. and/or in the event of an intentional or grossly negligent breach of obligations by a legal representative or vicarious agent. REC reserves the right to make changes or amendments to this manual at any time, without prior notice.

This document may be produced in different languages. If there is any conflict, the English language version shall be definitive.

LIMITED WARRANTY

The REC Limited Warranty is available to download from www.recgroup.com/warranty. Ignoring any of the instructions in this manual may be classed as improper installation or use and invalidate the Warranty Terms and Conditions. If you have any questions about installation and the Warranty validity, please contact REC's technical support.



Caution: Only qualified personnel should perform work on photovoltaic systems such as installation, commissioning, maintenance and repairs. Be sure to follow the safety instructions for all system components. Ensure relevant local codes and regulations for health and safety are observed.

SAFETY MEASURES

Installers are responsible for the safe and effective installation and operation of the system and for adhering to all applicable local and national standards and regulations. All relevant local codes and regulations should be referred to and observed as well as regulations on working at heights and fall protection.

SAFETY IN THE WORKING AREA

i) Safety in the working area

Installation of REC solar panels may involve working on rooftops or raised platforms. Ensure all local regulations regarding working at heights are followed. Before beginning work on a photovoltaic system, ensure all working surfaces are structurally sound and capable of bearing the weight of employees and required equipment.



Remember to isolate the system from the grid before carrying out any maintenance or repair work.

ii) Preventing current generation

To prevent the panels automatically generating current (electricity) when exposed to light, shield the system with a non-transparent cover during installation, maintenance or repair work.

iii) Specific hazards of DC electricity

Solar panels generate direct current (DC). Once current is flowing, breaking or opening a connection (e.g., disconnecting two panels) can cause an electrical arc. Unlike low voltage AC wiring, DC arcs are not self-extinguishing. They are potentially lethal burn and fire hazards:

- Follow inverter manufacturers' installation, handling and operating instructions,
- Remove/open the inverter AC fuse/circuit breaker before disconnecting from the public grid,
- Switch off or disconnect the inverter and wait for the time specified by the manufacturer before commencing work. High-voltage components need sufficient time to discharge.

iv) Safety requirements

The voltage produced by a single panel and panels connected in series (voltages added together) or in parallel (currents added together) can be dangerous. Although the fully insulated plug contacts on the panel's output cables provide touch-safe protection, the following points must be observed during handling to avoid the risk of sparking, fire hazards, burns and lethal electric shocks:

- Exercise extreme caution when wiring panels and look out for damaged or dirty cables etc,
- Never insert metallic or other conductive objects into plugs or sockets,
- Ensure that all electrical connections are completely dry before assembly,
- Keep all materials, tools, and working conditions dry and tidy,
- Use appropriate safety equipment e.g., non-slip footwear, insulated gloves and insulated tools,
- Solar panels produce current when exposed to sunlight. Do not connect the system to the inverter during solar exposure.

PANEL HANDLING

In order to avoid damage to the solar cells and other components, all REC solar panels should be handled with care and protected from damage at all times. All warnings and instructions on the packaging should be observed. Follow these guidelines when unpacking, transporting, installing or storing panels:

- Record the serial numbers prior to installation and note the information in the system documentation,
- Carry the panels using both hands and do not use the junction box or cables as a grip,
- Do not allow the panels to sag or bow under their own weight when being carried,
- Do not subject panels to loads or stresses, e.g., leaning on them or through the placing of weight on them,
- Do not stand or walk on the panels,
- Avoid dropping the panels as any damage caused may be unseen,
- Keep all electrical contacts clean and dry,
- Do not apply force to the backsheet,
- Avoid using sharp or pointed objects if panels require marking,
- Never apply paints, adhesives or detergents to the front or rear of the panel,
- Do not use any solar panel that is damaged or has been tampered with,
- Never attempt to disassemble, modify, or adapt the panels or labels in any way as this will void the warranty.



The pallet packaging is not water- or weatherproof. Prior to installation, and to avoid any damage or degradation to the packaging or panel components, pallets and panels must be stored in a controlled and protected environment, ideally in internal storage conditions, where it is shielded from the elements, e.g., rain, dust, and direct sunlight. If overnight external storage in an uncontrolled environment is unavoidable, the panels and the pallet packaging must be protected from direct exposure to the elements and from contact with the ground, including earth, mud etc.



Do not use a panel which is broken or damaged. If the panel front glass is broken or laminate back sheet is damaged, it can expose personnel to hazardous voltages.

ELECTRICAL INSTALLATION

ELECTRICAL REQUIREMENTS

i) Application Class

REC solar panels are rated for use in Electrical Application Safety Class II; at hazardous levels of voltage (>35V), current(>8A) and power (>240W) where general contact access is anticipated (panels qualified for safety through IEC 61730-1 and -2).

ii) System Requirements

REC solar panels are only for use where they meet the specific technical requirements of the complete system. Ensure other components will not cause mechanical or electrical damage to the panels. Only panels of the same type and power class should be connected.

iii) String configuration

When connecting panels in a string, plan and execute according to the inverter manufacturer's instructions. The number of panels connected to an inverter not exceed the voltage limits and operating range permitted by the manufacturer, nor under any circumstance exceed the maximum system voltage as stated in the technical specifications for the product at the rear of this manual. The maximum system fuse rating (overcurrent protection rating) and the maximum reverse current for each panel can be found in the technical specifications for the product at the rear of this manual.

The maximum number of panels in a string can be calculated by dividing the maximum system voltage of the panel by its V_{oc} accounting for the lowest ambient temperature at site, e.g.: for a 1000V system, if the lowest ambient temperature is 20°C, the panel has a V_{oc} of 46.7 V and a temperature coefficient of V_{oc} of -0.30%/°C, the maximum panels per string is 21 ($\Delta T^{\circ}C = 25^{\circ} - 20^{\circ} = 5^{\circ}; 5^{\circ} \times 0.3 = 1.5\%; 46.7 + 1.5\% = 47.4; 1000 V / 47.4 = 21.1$, so a total of 21 panels or 995 V). Qualified system designers can make exact calculations that account for specific project requirements and site conditions.

iv) String connection

Panels connected in series must have the same ampere rating. The maximum number of panels that can be connected in series or parallel depends upon system design, inverter type and environmental conditions. String configuration must correspond to the specifications of other system components e.g., inverter. Refer to the reverse current rating of the panel indicated in the technical characteristics at the rear of this manual or on the panel datasheet.

v) Wiring layout

To minimize voltage surges (e.g., indirect lightning strikes), cables of the same string must be bundled together so loops are as small as possible. String configurations must be checked before commissioning. If open circuit voltage (V_{oc}) and short circuit current (I_{sc}) deviate from specification, this may indicate a configuration fault. Correct DC polarity must be observed at all times.

vi) Electrical Ratings

Electrical ratings are within a specific tolerance of measured values at Standard Test Conditions (STC) as given in the technical characteristics for each panel at the rear of this manual. Allow for increased panel output as a result of conditions different to STC by multiplying the I_{sc} and V_{oc} values by a factor of 1.25 (or according to local regulations) when determining component voltage ratings, conductor ampacities, overcurrent device ratings and size of controls connected to the PV output.

MECHANICAL INSTALLATION

FIRE GUIDELINES

REC solar panels have a Class C fire classification. Utilize the following fire safety guidelines when installing REC solar panels:

- Check with all relevant local authorities for fire safety requirements for any building or structure on to which the panels will be installed,
- The system design must ensure that it can be easily accessed in the event of a building fire,
- Check with relevant authorities for applicable regulations concerning setbacks or other placement restrictions that may apply for roof-mounted arrays,
- The use of DC ground fault interrupters is recommended. This may also be required by local and national codes,
- All electrical appliances are a fire risk. The panel must be mounted over a fire retardant roof covering rated for the application and a distance of 40 mm between the panel and the mounting surface, allowing free circulation of air beneath the panels must be respected at all times.

ORIENTATION

The optimal mounting position of panels results in the sun's rays falling perpendicular (i.e., at 90°) to the surface. To maximize system output, panels should be installed at the optimum orientation and tilt angle. The specifics of this depend on location and can be calculated by a qualified system designer. All panels in a string should, wherever possible, have the same orientation and tilt to ensure the system does not underperform due to mismatched outputs.



Dependent on local conditions, a lower angle of installation will potentially increase the requirement for regular cleaning.



The solar panels must not be exposed to artificially concentrated light.

ENVIRONMENTAL FACTORS

REC solar panels are designed to provide decades of durable and stable output in installations up to 2000 m above sea level. Ambient operating temperatures must be between -40° and +85°C.



For further information regarding installations on water platforms, e.g., floating pontoons, see Annex 1 at the rear of this manual.

The panels are not suitable for installation in potentially hazardous locations nor should they be installed in the following locations:

- Near sources of flammable gas or vapor e.g., gas stations, gas containers or spray paint facilities,
- Near open flames,
- Under water or in water features,
- Where exposed to sulfur e.g., near sulfur springs or volcanoes,
- Where the panels may be exposed to harmful chemicals.



Ensure panels are not exposed to direct contact with salt water/spray.

PANEL INSTALLATION

REC solar panels are designed for capturing solar radiation and are not suitable for use as overhead or vertical glazing. The IP rating of the junction box provides a level of protection that allows panels to be mounted in any orientation (see product technical specifications for exact rating).

⚠ Panels must be installed so that the cells are not shaded as this will drastically reduce electrical output. If partial shading is inevitable at certain times of the day or year, it must be kept to an absolute minimum.

There are different options for securing REC solar panels depending on the design of the array. Ensure the mounting structure can withstand anticipated wind and snow loads. Mounting hardware is not supplied by REC. Follow the mounting hardware manufacturer's instructions and recommendations at all times.

⚠ Remove any labels or stickers that may be on the front of the panels and ensure no residue is left on the glass.

⚠ There must be a minimum clearance gap of 40 mm between the uppermost part of the installation surface (e.g., rooftop) and the lowest part of the panel (i.e., underside of module frame) to avoid any damage to the panel and to ensure sufficient airflow for cooling, helping to improve performance. The surface below the modules must be kept clear of any objects that may cause damage to the panel.

RAIL SPECIFICATIONS

REC solar panels are typically installed on a rail-based mounting system (fig. 1). When using mounting rails, ensure they run underneath the frame to provide support or across the panel, underneath the frame (figs. 2 & 3) and the positioning of the rails must ensure that the minimum clamp grip length and the central point of the fixation, e.g., the bolt, is fully within the required clamping zone as indicated on the following pages.

Fig. 1: Example of rail cross-section

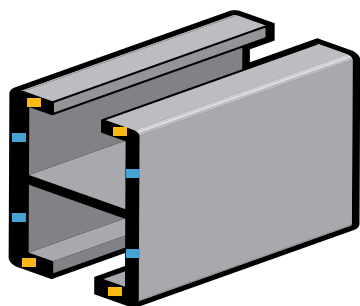


Fig. 2: Panel mounting: Rails parallel to long side


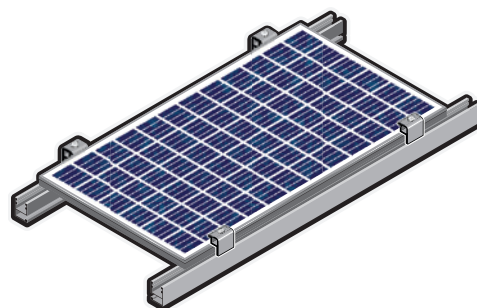


Fig. 3: Panel mounting: Rails parallel to short side

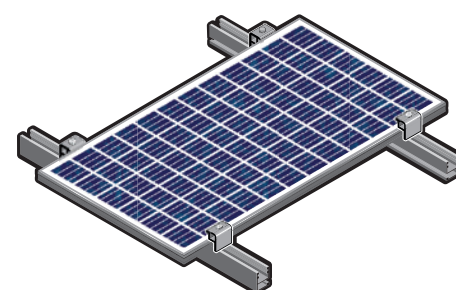

CLAMP SPECIFICATIONS

Ensure the clamps used are rigid and suitable for the planned installation and expected system design loads.

- Minimum grip length of 40 mm, minimum grip depth of 5 mm (fig. 4). The grip area must not extend onto the panel frame and cause cell shading.
- Each panel must be clamped at a minimum of four points (fig. 5), as illustrated on the subsequent pages.
- Clamp installation must be carried out according to the manufacturer's instructions, including specific hardware and torque requirements.
- Avoid the application of excessive pressure to prevent frame deformation.

Fig. 4: Clamp specifications: End and mid-clamps


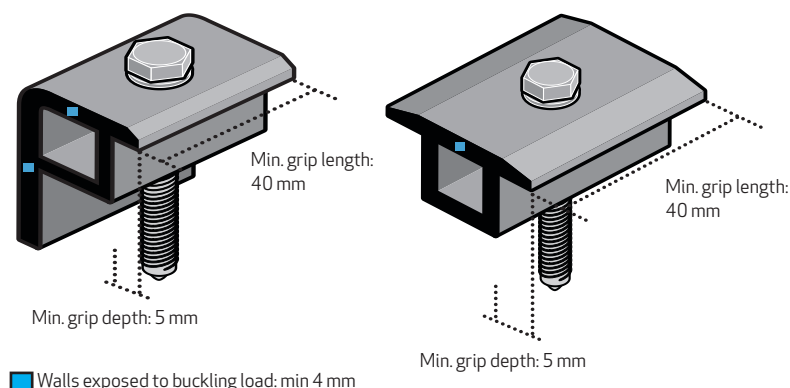


Fig. 5: Clamping the frame to rail

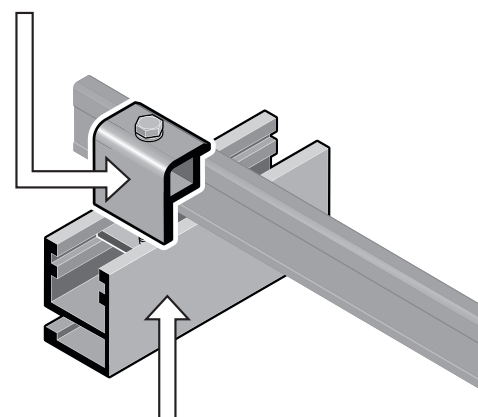

⚠ In areas of snow build-up panels can be subjected to forces in excess of the stated limit even when snow depth does not appear extreme, causing damage to the framework. If the installation is likely to be affected by this, further suitable panel support is recommended on the lower row of panels.

★ In the case of any questions regarding mounting systems, or if the mounting system to be used does not match any of the instructions shown in this installation manual, please contact REC for further support.

MOUNTING METHODS: REC PEAK ENERGY 72 & REC PEAK ENERGY 72 XV PANELS



Mounting using clamps


REC Peak Energy 72 solar panels can be secured using clamps on both the long and short sides of the panel where the clamps and rails are located within the constraints shown in fig. 6. Mounting utilizing clamps has been found to be in compliance with IEC 61215 & IEC 61730 requirements for test loads of up to 5400 Pa (design load of 3600 Pa*) downward pressure and 2400 Pa (design load of 1600 Pa) upward pressure according to the clamping position (*stated design loads (DL) apply a safety factor of 1.5 to the test load, e.g., 5400 Pa / 1.5 = 3600 Pa). Site-specific loads such as wind or snow which may exert forces in a different way need to be taken into consideration to ensure these limits are not exceeded.

Each panel must be clamped at a minimum of four points, in four separate and non-adjacent color zones.

- Clamps must be positioned so that the minimum grip length and the center point of each clamp are located in the required clamping zone.
- Follow the clamp manufacturer's recommended instructions, e.g., applied torque, to fasten the clamps.
- The distance between the end clamp and the end of the rail must be minimum 25 mm.

Fig. 6: Clamping Zones: REC Peak Energy 72 Series

-  Clamping in the green zone (250 - 350 mm) is certified for downward loads of 5400 Pa (DL: 3600 Pa) & upward loads of 2400 Pa (DL :1600 Pa).
-  Clamping in the red zone is not permitted (0 - 250 mm, > 350 mm on long side, entire length of short side).

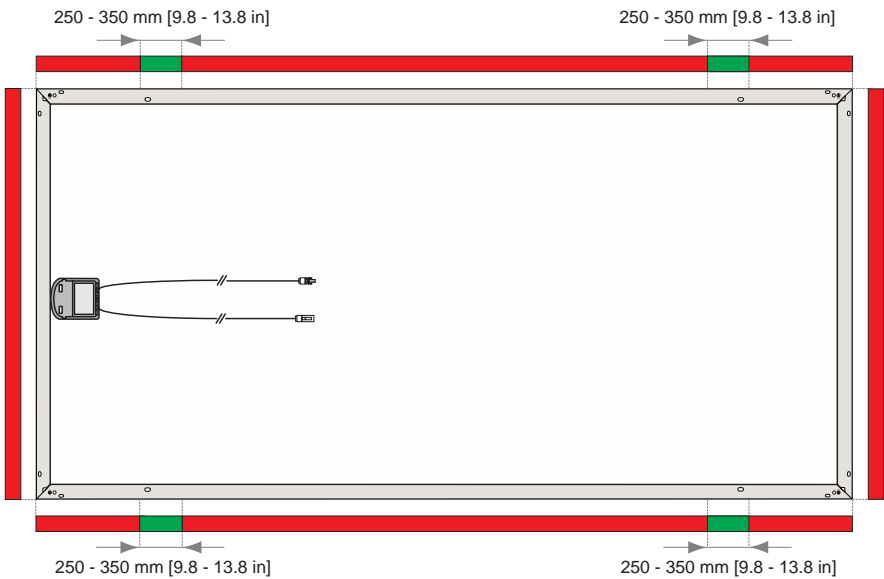

The minimum grip length of each clamp (fig. 4) and its center point must be fully located in the same color zone to be rated to that load value (fig. 6). If the panel is secured in two different zones, it is rated to the lower load value only.

If so required, any further clamps, i.e., ≥5, may be clamped elsewhere on the panel, including in the red zone without affecting the warranty.

Mounting holes

REC Peak Energy 72 Series panels have been certified for installation using the four elongated holes (14 x 9 mm) on the underside of the panel frame at a distance of 270 mm from the short side edge (fig. 7), utilizing rails and bolts matching the specifications in fig. 8. Installation of REC Peak Energy 72 panels using mounting holes has been found to be in compliance with IEC 61215 & IEC 61730 requirements for test loads of up to 5400 Pa (design load of 3600 Pa) downward force and 2400 Pa (design load of 1600 Pa) upward force. When installing in this way, the frame and panel edge must be supported by two transverse rails (figs. 1 & 2) of aluminium or galvanized steel (to avoid galvanic corrosion) suitable for the application and the local environment. These must be held in position by bolts and flange nuts as per the specifications below. Observe the following procedures when using mounting holes:

- The mounting construction should be of aluminium or galvanized steel to avoid galvanic corrosion and be appropriate for the local environment.
- Additional electrical bonding to Ground is required for the support structure.
- All four mounting holes in the frame must be used (fig. 9).
- Tighten fastenings using a torque wrench according to the mounting structure manufacturer's instructions.

Fig. 7: Mounting holes: REC Peak Energy 72 Series


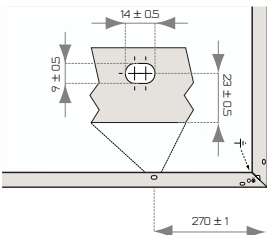


Fig. 8: Mounting hole specifications: REC Peak Energy 72 Series

Part Name	Material
Rail	6105 - T5 aluminum extrusion
Bolt	M6 x 25 drop in T-stud kit
Nut	M6 flanged hex locking nut

Fig. 9: Mounting hole installation: REC Peak Energy 72 Series

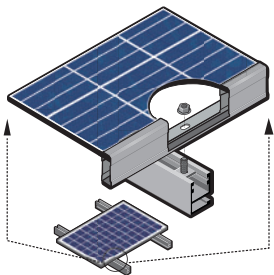

The product warranty will be voided if additional holes are made in the frame. All fixing and fastening materials must be corrosion resistant.

MOUNTING METHODS: REC TWINPEAK 72 & REC TWINPEAK 72 XV PANELS

Mounting using clamps


REC TwinPeak 72 solar panels can be secured using clamps on both the long and short sides of the panel where the clamps and rails are located within the constraints shown in fig. 10. Mounting utilizing clamps has been found to be in compliance with IEC 61215 & IEC 61730 requirements for test loads of up to 5400 Pa (design load of 3600 Pa*) downward force and 2400 Pa (design load of 1600 Pa) upward force according to the clamping position (*stated design loads (DL) apply a safety factor of 1.5 to the test load, e.g., 5400 Pa / 1.5 = 3600 Pa). Site-specific loads such as wind or snow which may exert forces in a different way need to be taken into consideration to ensure these limits are not exceeded.

Each panel must be clamped at a minimum of four points, in four separate and non-adjacent color zones.

- Clamps must be positioned so that the minimum grip length and the center point of each clamp are located in the required clamping zone.
- Follow the clamp manufacturer's recommended instructions, e.g., applied torque, to fasten the clamps.
- The distance between the end clamp and the end of the rail must be minimum 25 mm.

Fig. 10: Clamping Zones: REC TwinPeak 72 Series

- Clamping in the green zone (250 - 350 mm) is certified for downward loads of 5400 Pa (DL: 3600 Pa) & upward loads of 2400 Pa (DL: 1600 Pa).
- Clamping in the red zone is not permitted (0 - 250 mm, > 350 mm on long side, entire length of short side).

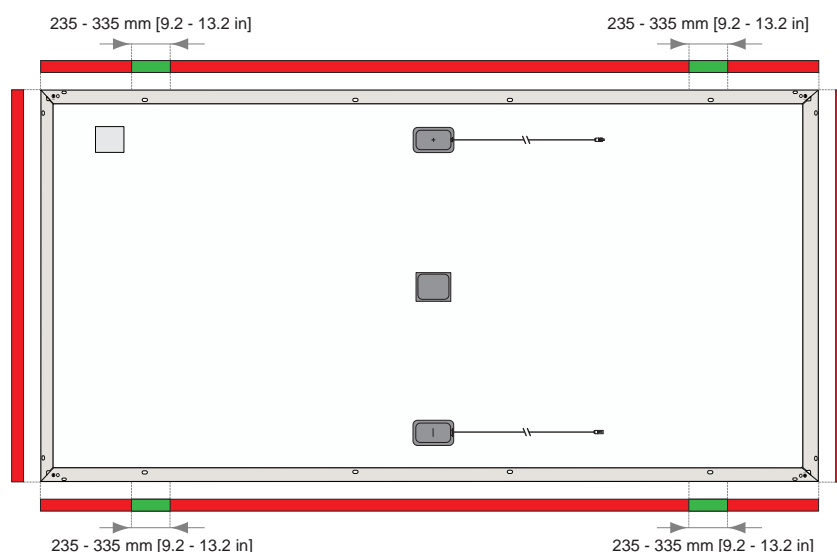

The minimum grip length of each clamp (fig. 4) and its center point must be fully located in the same color zone to be rated to that load value (fig. 10). If the panel is secured in two different zones, it is rated to the lower load value only.

If so required, any further clamps, i.e., ≥5, may be clamped elsewhere on the panel, including in the red zone without affecting the warranty.

Mounting holes

REC TwinPeak 72 Series panels have been certified for installation using the four elongated holes (14 x 9 mm) on the underside of the panel frame at a distance of 275 mm from the short side edge (fig. 11), utilizing rails and bolts matching the specifications in fig. 12. Installation of REC TwinPeak 72 panels using mounting holes has been found to be in compliance with IEC 61215 & IEC 61730 requirements for test loads of up to 5400 Pa (design load of 3600 Pa) downward force and 2400 Pa (design load of 1600 Pa) upward force. When installing in this way, the frame and panel edge must be supported by two transverse rails (figs. 1 & 2) of aluminium or galvanized steel (to avoid galvanic corrosion) suitable for the application and local environment. These must be held in position by bolts and flange nuts as per the specifications below. Observe the following procedures when using mounting holes:

- The mounting construction should be of aluminium or galvanized steel to avoid galvanic corrosion and be appropriate for the local environment.
- Additional electrical bonding to Ground is required for the support structure.
- All four mounting holes in the frame must be used (fig. 13).
- Tighten fastenings using a torque wrench according to the mounting structure manufacturer's instructions.

Fig. 11: Mounting holes: REC TwinPeak 72 Series


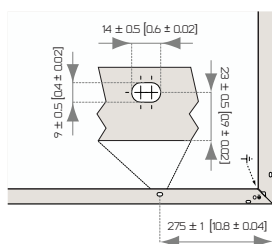


Fig. 12: Mounting hole specifications: REC TwinPeak 72 Series

Part Name	Material
Rail	6105 - T5 aluminum extrusion
Bolt	M6 x 25 drop in T-stud kit
Nut	M6 flanged hex locking nut

Fig. 13: Mounting hole installation: REC TwinPeak 72 Series

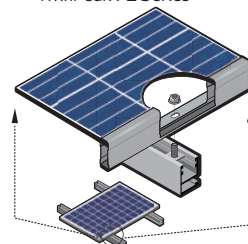

There are four mounting holes on the underside of the long frame side spaced 200 mm from the center (802.5 mm from the corner). These are intended for use with specific tracker systems only, and not for rail-based systems. Unauthorized use of these may void the warranty. Consult first with REC if you need to use these for installation, otherwise only the mounting holes shown in fig. 11 are to be used.

The product warranty will be voided if additional holes are made in the frame. All fixing and fastening materials must be corrosion resistant.

MOUNTING METHODS: REC TWINPEAK 2S 72, REC TWINPEAK 2S 72 XV & REC TWINPEAK 2S 72 XV BIFACIAL PANELS

Mounting using clamps


REC TwinPeak 2S 72 solar panels can be secured using clamps on both the long and short sides of the panel where the clamps and rails are located within the constraints shown in fig. 14. Mounting utilizing clamps has been found to be in compliance with IEC 61215 & IEC 61730 requirements for test loads of up to 5400 Pa (design load of 3600 Pa*) downward force and 2400 Pa (design load of 1600 Pa) upward force according to the clamping position (*stated design loads (DL) apply a safety factor of 1.5 to the test load, e.g., 5400 Pa / 1.5 = 3600 Pa). Site-specific loads such as wind or snow which may exert forces in a different way need to be taken into consideration to ensure these limits are not exceeded.

Each panel must be clamped at a minimum of four points, in four separate and non-adjacent color zones.

- Clamps must be positioned so that the minimum grip length and the center point of each clamp are located in the required clamping zone.
- Follow the clamp manufacturer's recommended instructions, e.g., applied torque, to fasten the clamps.
- The distance between the end clamp and the end of the rail must be minimum 25 mm.

Fig. 14: Clamping Zones: REC TwinPeak 2S 72 Series

- Clamping in the green zone (350-520 mm) is certified for downward design loads of 367 kg/m² (3600 Pa) & upward design loads of 163 kg/m² (1600 Pa).
- Clamping in the yellow zone (200-350 mm) is certified for downward and upward design loads up to 163 kg/m² (1600 Pa).
- Clamping in the red zone is not permitted (0 - 200 mm, > 520 mm on long side, entire length of short side).

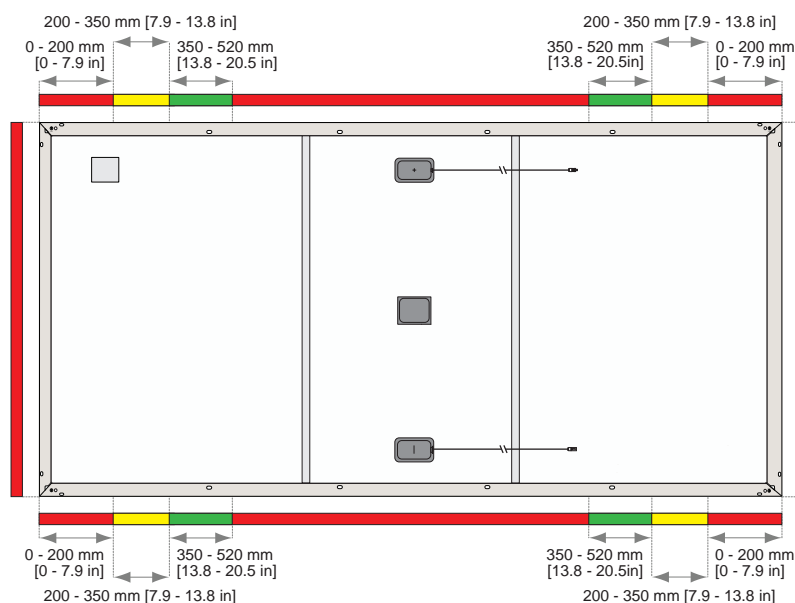

The minimum grip length of each clamp (fig. 4) and its center point must be fully located in the same color zone to be rated to that load value (fig. 14). If the panel is secured in two different zones, it is rated to the lower load value only.

If so required, any further clamps, i.e., ≥5, may be clamped elsewhere on the panel, including in the red zone without affecting the warranty.

Mounting holes


REC TwinPeak 2S 72 Series panels have been certified for installation using the four elongated holes (11 x 6.6 mm) on the underside of the panel frame at a distance of 460 mm from the short side edge (fig. 15), utilizing rails and bolts matching the specifications in fig. 16. Installation of REC TwinPeak 2S 72 panels using mounting holes has been found to be in compliance with IEC 61215 & IEC 61730 requirements for test loads of up to 5400 Pa (design load of 3600 Pa) downward force and 2400 Pa (design load of 1600 Pa) upward force. When installing in this way, the frame and panel edge must be supported by two transverse rails (figs. 1 & 2) of aluminium or galvanized steel (to avoid galvanic corrosion) suitable for the application and the local environment. These must be held in position by bolts and flange nuts as per the specifications below. Observe the following procedures when using mounting holes:

- The mounting construction should be of aluminium or galvanized steel to avoid galvanic corrosion and be appropriate for the local environment.
- Additional electrical bonding to Ground is required for the support structure.
- All four mounting holes in the frame must be used (fig. 17).
- Tighten fastenings using a torque wrench according to the mounting structure manufacturer's instructions.


Fig. 15: Mounting holes: REC TwinPeak 2S 72 Series

Fig. 16: Mounting hole specifications: REC TwinPeak 2S 72 Series

Fig. 17: Mounting hole installation: REC TwinPeak 2S 72 Series

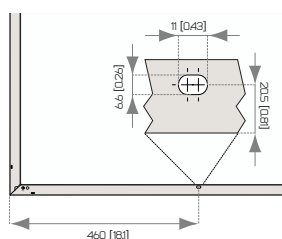

Part Name	Material
Rail	6105 - T5 aluminum extrusion
Bolt	M6 x 25 drop in T-stud kit
Nut	M6 flanged hex locking nut

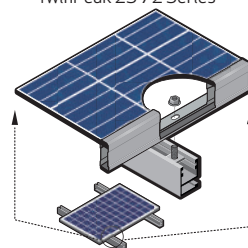

There are four mounting holes on the underside of the long frame side spaced 200 mm from the center (802.5 mm from the corner). These are intended for use with specific tracker systems only, and not for rail-based systems. Unauthorized use of these may void the warranty. Consult first with REC if you need to use these for installation, otherwise only the mounting holes shown in fig. 15 are to be used.

The product warranty will be voided if additional holes are made in the frame. All fixing and fastening materials must be corrosion resistant.

DRAINAGE HOLES

Each corner of the REC panel frame has small drainage holes that allow water caused by rain, condensation, snow melt, cleaning or any other process to exit the frame easily and to minimize damage caused by freezing and thawing (fig. 18). These holes must not be used for mounting the panel.




To enable effective drainage and ensure there is no damage to the panel, the drainage holes must remain fully open and enable water egress during and after installation.



The shape and dimensions of the drainage holes may vary slightly from the below image depending on product and/or frame design.

Fig. 18: Drainage and grounding holes

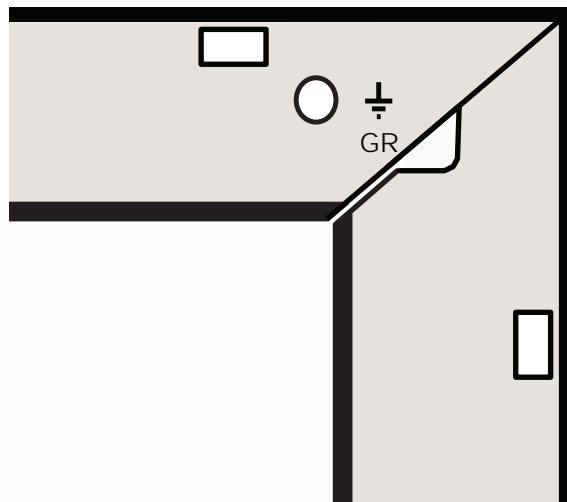

GROUNDING

Local regulations may require grounding of the panels. Where grounding is necessary or desired, it must be done using an electrical connection from the panel frame. REC solar panels have a clearly marked, small round grounding hole positioned near each corner of the panel to aid in grounding as shown in fig. 18; these can be further identified by the grounding symbol stamped in the frame next to it. The support bars across the rear of REC solar panels are connected to the frame via specially designed grounding clip and do not need to be individually grounded. Check all applicable requirements before beginning installation.

- Suitable grounding clips, lugs or other constructions must be used.
- Attach grounds to the grounding holes in the panel frames.
- Follow the grounding device manufacturer's installation instructions to ensure a safe and conductive connection, including any supplementary hardware, e.g., star washer, and tighten according to recommended torque.



Where common grounding hardware (nuts, bolts, star washers, split-ring lock washers, flat washers and the like) are used to attach a grounding device, the attachment must be made in conformance with the grounding device manufacturer's instructions.



To avoid galvanic corrosion, galvanized or hot dipped zinc plated fasteners are preferred, however stainless steel fastening materials are equally suitable.



Negative grounding of the REC solar panels is not required.

CONNECTIONS AND CONNECTORS

The connectors used on REC solar panels are specified in the product specifications at the rear of this manual. The given IP rating is only valid when the connectors are correctly mated. All connectors and cables must be checked to ensure they are secure and tight, as well as electrically and mechanically sound. UV-resistant cables and connectors approved for outdoor use must be used. Conductor gauge must be chosen to ensure DC power losses (voltage drop) are kept to a minimum (<1%).

Observe all local regulations when selecting cables. For string connections, use minimum 4 mm² or copper wires insulated for a maximum operating temperature of 90°C. Secure cables using UV-resistant cable ties or other device. Loose and unsecured cables must be protected from damage (e.g., mechanical, abrasion, sharp objects, animals). Avoid exposing cables to direct sunlight and permanent tension.

In order to ensure durable and safe connections between panels and BOS equipment, the following instructions must be followed in order to protect the electrical connections from the elements. More detailed information is given in the *Guide to Best Practice - Connections and Connectors* which can be found via the REC online Download Center (www.recgroup.com/downloads).

Safety is paramount when working with electrical connectors. Ensure that any installation work is not carried out on live or load-carrying parts. Connections must not be disconnected under load and the system must be isolated from the grid before carrying out any maintenance or repair work.

CONNECTORS

To ensure connector compatibility and reduce the potential for damage to the panels and the wider installation, REC recommends that mated connectors are from the same manufacturer and of the same connector type. The factory-installed connectors on REC solar panels are of the Stäubli 'MC4 type design' as detailed in the Technical Specifications, therefore REC only permits the mating of factory-installed connectors to connectors of the same manufacturer and type, and to Stäubli MC4 as shown in the table below (fig. 19):

Fig. 19: Connector mating matrix

Connector 1	+	Connector 2	Permitted?
REC Factory-Installed	+	Stäubli MC4	✓
REC Factory-Installed	+	REC Factory-Installed	✓
REC Factory-Installed	+	Any other connector	✗

★ **Some countries and/or regions have specific regulations regarding the mating of connectors. Installers are responsible for ensuring the compliancy of the system with such local regulations.**

⚠ **The cutting of cables is only permitted in order to replace a factory-installed connector with another brand of connector to ensure 'like-for-like' mating when connected to a non-REC external device. All other changes are prohibited and will invalidate the REC warranty. The connector replacement procedure must be carried out by the installer correctly and according to the replacement connector manufacturer's instructions. The selected replacement connector must also fulfil all relevant technical specifications and be certified according to applicable standards (e.g., EN 50521, IEC 62852 or UL 6703) so as to ensure they are fit for purpose and safety. The REC warranty does not extend to cover any fault traceable to the replaced connectors.**


- The secure connection of connectors is identified by a firm click once inserted.
- Use of any chemicals or lubricants on the connectors or contacts may only be carried out in line with the connector manufacturer's instructions.

⚠ **Any other modification to the panel is prohibited, including the opening of the junction box, unless explicitly authorized by REC. Doing so will invalidate the warranty.**

PROTECTING THE CABLES

- To prevent stress on the junction box casing, ensure the cable exits the junction box in a straight line before any bend in the cable.
- The cables on REC solar panels have a minimum bending radius of 30 mm to avoid damage to the insulation (fig. 20).

Fig. 20: Minimum cable bend radius

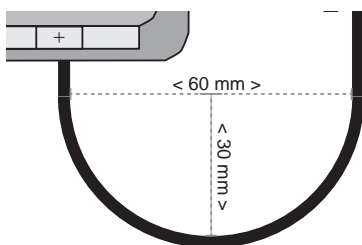

- Ensure cables do not hang loose where they may be damaged through friction or stress, e.g., caused by wind or grazing animals.
- Shield connectors from falling or dropping water by locating them directly beneath a panel.
- Cables must be firmly secured to the structure, without over-tightening, as this can deform the cable insulation.

SECURING CABLES AND CONNECTORS

- When securing the connector, place it so that it has with sufficient air circulation all around. This allows the connector to dry effectively and avoids the risk of damage or degradation of the connection.
- Good practice is to secure the cable either side of the connectors, ensuring no stress is exerted on the connector casing or cable entry.

⚠ **To enable correct cooling and drying of the connectors, do not add extra protection to the connector, e.g., heat shrink, grease or tape.**

MAINTENANCE

CLEANING INSTRUCTIONS

REC solar panels have been designed for easy maintenance. The need for cleaning the solar panels will vary dependent on location, rainfall, air pollution levels and the angle of installation – the lower the angle of installation, the more cleaning will be required. 'Normal' rainfall will naturally clean the panels if installed at a sufficient angle. To optimize electrical output it is recommended to clean the panels when dirt can be seen on the glass surface.

★ **Panel cleaning should always be carried out when the panels are cool to avoid breakage through thermal shock, e.g., early morning.**

The build up of dirt on the panel surface over time may cause cell shading which will reduce power output or can even cause further damage. To clean either the front or rear of the panels, use only deionized water free from grit and physical contaminants, at ambient temperature and use a sponge, microfiber cloth or a soft brush to wipe away the dirt (rainwater, tap water or diluted alcohol may also be used as a secondary solution). For further cleaning a mild, biological and biodegradable washing-up liquid may be used.

When cleaning the panel, take care not to scratch the surface or introduce foreign elements that may cause damage. Ensure the water used is free from grit and physical contaminants that may damage the panel. Always rinse the panel with plenty of water. If soiling remains on the panel, repeat the cleaning process. If stains require more effort to be removed, Isopropyl alcohol of a concentration less than 10% may be used. Acid or Alkali detergent may not be used.

! **Use of high pressure hoses or cleaners is not permitted as these may damage the panels, laminate or cells.**

Using a soft rubber squeegee, wipe the panel surface from the top downwards to remove any residual water from the panel glass. Panels can be left to dry in the air or wiped dry with a clean and soft cloth or chamois. Avoid putting pressure on the on the panel surface when drying, e.g., leaning or standing on it.

For more information on cleaning REC solar panels, consult the *REC Cleaning Information Sheet* which is available to download from the online REC Download Center www.recgroup.com/downloads. If in doubt at any time when cleaning the panels, stop and obtain professional advice.

SYSTEM INSPECTION

The system should be inspected regularly to ensure that:

- Fasteners are secure, tight and free from corrosion,
- Electrical connections are secure, tight, clean, and free of corrosion,
- The mechanical integrity of the cables is intact,
- Bonding points to ground are tight, secure and free from corrosion (which could break the continuity between the panels and ground).

RECYCLING

REC makes every effort to ensure panel packaging is kept to a minimum. The paper and cardboard packaging can be recycled and the protective wrapping and panel separating blocks are also recyclable in many areas. Recycle packaging and panels according to local guidelines and regulations.

DISPOSAL OF OLD ELECTRICAL AND ELECTRONIC EQUIPMENT

panels should be recycled at the end of their useful life according to local guidelines and regulations. By ensuring REC solar panels are disposed of correctly, you will help prevent potential negative consequences for the environment and human health which could otherwise be caused by inappropriate waste treatment. The majority of the panel components can be recycled.

For installations in the European Union, REC solar panels are subject to WEEE regulations. The symbol in fig. 21 as found on the label on the rear of the panel indicates that this product shall not be treated as household waste and must be disposed of at an appropriate collection point for the recycling of electrical and electronic equipment. The recycling of the different components and materials will help to conserve natural resources.

Fig. 21: WEEE symbol




The European WEEE (Waste Electrical and Electronic Equipment) Directive regulates the correct recycling of electronic and electrical waste in all member states of the European Union (EU). For end-customers it is a free of charge disposal system, financed by the manufacturers and importers, where panels can be brought to a local recycling depot, or in the case of larger numbers, be picked up from site, as is the case with other electrical equipment, e.g., refrigerators or televisions. The extensive process steps for proper disposal are strictly regulated by the authorities and place no further obligations on the owner of the panels. For more information about the recycling of this product, please contact your local recycling authority or recycling center.

PANEL INFORMATION

TECHNICAL CHARACTERISTICS: REC PEAK ENERGY 72 & REC PEAK ENERGY 72 XV

Fig. 22: Panel dimensions: REC Peak Energy 72

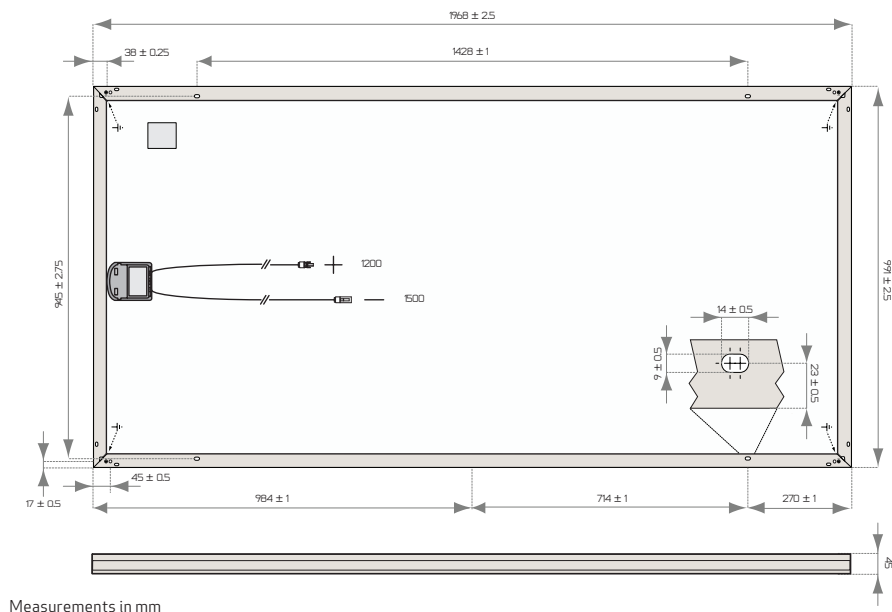

16.7% EFFICIENCY

10 YEAR PRODUCT WARRANTY

25 YEAR LINEAR POWER OUTPUT WARRANTY

GENERAL DATA

Cell type:	72 multicrystalline cells 3 strings of 24 cells in series
Glass:	4 mm solar glass with anti-reflection surface treatment
Backsheet:	Highly resistant polymeric construction
Frame:	Anodized aluminum
Junction box:	3 bypass diodes, IP67 rated in accordance with IEC 62790
Cable:	4 mm ² solar cable, 1.2 m + 1.2 m in accordance with EN 50618
Connectors:	Tonglin TL-Cable01 (4 mm ²) in accordance with IEC 62852, IP67 only when connected
Origin:	Made in Singapore

ELECTRICAL DATA @ STC

Product code*: RECxxxPE72

Nominal Power - P_{MPP} (Wp)	300	305	310	315	320	325
Watt Class Sorting - (W)	-0/+5	-0/+5	-0/+5	-0/+5	-0/+5	-0/+5
Nominal Power Voltage - V_{MPP} (V)	36.5	36.9	37.2	37.5	37.9	38.5
Nominal Power Current - I_{MPP} (A)	8.22	8.27	8.34	8.40	8.45	8.46
Open Circuit Voltage - V_{OC} (V)	44.9	45.2	45.5	45.8	46.1	46.4
Short Circuit Current - I_{SC} (A)	8.76	8.82	8.88	8.93	8.99	9.05
Panel Efficiency (%)	15.4	15.6	15.9	16.2	16.4	16.7

Values at standard test conditions (STC: air mass AM 1.5, irradiance 1000 W/m², temperature 25°C), based on a production spread with a tolerance of P_{MPP} , V_{OC} & I_{SC} $\pm 3\%$ within one watt class. At low irradiance of 200 W/m² at least 95.5% of the module efficiency of P_{MPP} @ STC will be achieved.
*Where xxx indicates the nominal power class (P_{MPP}) at STC indicated above, and can be followed by the suffix XV for 1500 V rated modules.

ELECTRICAL DATA @ NMOT

Product code*: RECxxxPE72

Nominal Power - P_{MPP} (Wp)	217	221	225	229	232	236
Nominal Power Voltage - V_{MPP} (V)	29.9	30.1	30.4	30.6	30.8	31.0
Nominal Power Current - I_{MPP} (A)	7.27	7.34	7.41	7.48	7.54	7.61
Open Circuit Voltage - V_{OC} (V)	36.9	37.2	37.4	37.6	37.9	38.1
Short Circuit Current - I_{SC} (A)	7.67	7.72	7.77	7.83	7.88	7.94

Nominal module operating temperature (NMOT: air mass AM 1.5, irradiance 800 W/m², temperature 20°C, windspeed 1 m/s)

*Where xxx indicates the nominal power class (P_{MPP}) at STC indicated above, and can be followed by the suffix XV for 1500 V rated modules.

CERTIFICATIONS



takeaway take-e-way WEEE-compliant recycling scheme

WARRANTY

10 year product warranty
25 year linear power output warranty
(max. degradation in performance of 0.7% p.a.)

See warranty conditions for further details.

MAXIMUM RATINGS

Operational temperature:	-40 ... +85°C
Maximum system voltage:	1000 V / 1500 V
Design load (+): snow	367 kg/m ² (3600 Pa)*
Maximum test load (+):	550 kg/m ² (5400 Pa)
Design load (-): wind	163 kg/m ² (1600 Pa)*
Maximum test load (-):	244 kg/m ² (2400 Pa)
Max series fuse rating:	25 A
Max reverse current:	25 A

* Safety factor 1.5

TEMPERATURE RATINGS*

Nominal Module Operating Temperature:	46.6°C ($\pm 2^\circ$ C)
Temperature coefficient of P_{MPP}	-0.40 %/°C
Temperature coefficient of V_{OC}	-0.27 %/°C
Temperature coefficient of I_{SC}	0.013 %/°C


*The temperature coefficients stated are linear values

MECHANICAL DATA

Dimensions:	1968 x 991 x 45 mm
Area:	1.95 m ²
Weight:	27 kg

TECHNICAL CHARACTERISTICS: REC TWINPEAK 72 & REC TWINPEAK 72 XV

Fig. 23: Panel dimensions: REC TwinPeak 72

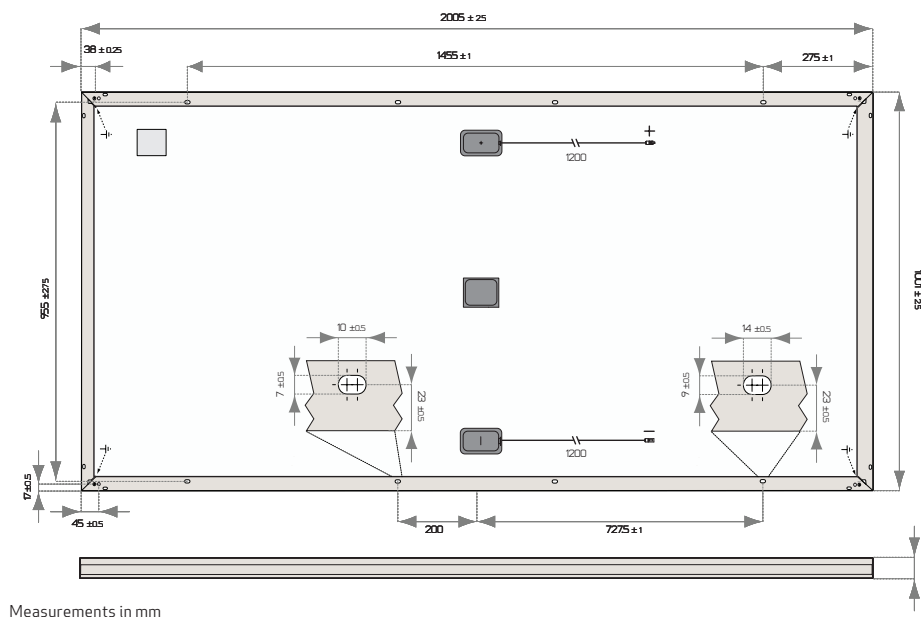

ELECTRICAL DATA @ STC

Product Code*: RECxxxTP72

Nominal Power - P_{MPP} (Wp)	330	335	340	345
Watt Class Sorting - (W)	-0/+5	-0/+5	-0/+5	-0/+5
Nominal Power Voltage - V_{MPP} (V)	38.1	38.3	38.5	38.7
Nominal Power Current - I_{MPP} (A)	8.67	8.75	8.84	8.92
Open Circuit Voltage - V_{OC} (V)	46.0	46.2	46.3	46.5
Short Circuit Current - I_{SC} (A)	9.22	9.27	9.32	9.36
Panel Efficiency (%)	16.4	16.7	16.9	17.2

Values at standard test conditions (STC: air mass AM1.5, irradiance 1000 W/m², temperature 25°C), based on a production spread with a tolerance of P_{MPP} , V_{OC} & I_{SC} ±3% within one watt class. At low irradiance of 200 W/m² at least 95% of the module efficiency of P_{MPP} @ STC will be achieved.
 *Where xxx indicates the nominal power class (P_{MPP}) at STC indicated above, and can be followed by the suffix XV for 1500 V rated modules.

ELECTRICAL DATA @ NMOT

Product Code*: RECxxxTP72

Nominal Power - P_{MPP} (Wp)	244	248	251	255
Nominal Power Voltage - V_{MPP} (V)	34.9	35.1	35.2	35.4
Nominal Power Current - I_{MPP} (A)	6.99	7.06	7.13	7.21
Open Circuit Voltage - V_{OC} (V)	42.3	42.5	42.6	42.8
Short Circuit Current - I_{SC} (A)	7.44	7.48	7.52	7.57

Nominal module operating temperature (NMOT: air mass AM1.5, irradiance 800 W/m², temperature 20°C, windspeed 1 m/s).

*Where xxx indicates the nominal power class (P_{MPP}) at STC indicated above, and can be followed by the suffix XV for 1500 V rated modules.

CERTIFICATIONS



takeaway take-e-way WEEE-compliant recycling scheme
 for an easy way

WARRANTY

10 year product warranty
 25 year linear power output warranty
 (max. degradation in performance of 0.7% p.a.)
 See warranty conditions for further details.

17.2% EFFICIENCY

10 YEAR PRODUCT WARRANTY

25 YEAR LINEAR POWER OUTPUT WARRANTY

GENERAL DATA

Cell type:	144 half-cut multicrystalline PERC cells 6 strings of 24 cells in series
Glass:	4 mm solar glass with anti-reflection surface treatment
Backsheet:	Highly resistant polymeric construction
Frame:	Anodized aluminum
Junction box:	3-part, 3 bypass diodes, IP67 rated in accordance with IEC 62790
Cable:	4 mm ² solar cable, 1.2 m + 1.2 m in accordance with EN 50618
Connectors:	Tonglin TL-Cable01 (4 mm ²) in accordance with IEC 62852, IP67 only when connected
Origin:	Made in Singapore

MAXIMUM RATINGS

Operational temperature:	-40 ... +85°C
Maximum system voltage:	1000 V / 1500 V
Design load (+): snow	367 kg/m ² (3600 Pa)*
Maximum test load (+):	550 kg/m ² (5400 Pa)
Design load (-): wind	163 kg/m ² (1600 Pa)*
Maximum test load (-):	244 kg/m ² (2400 Pa)
Max series fuse rating:	25 A
Max reverse current:	25 A

* Safety factor 1.5

TEMPERATURE RATINGS*

Nominal Module Operating Temperature:	44.6°C (±2°C)
Temperature coefficient of P_{MPP} :	-0.36 %/°C
Temperature coefficient of V_{OC} :	-0.30 %/°C
Temperature coefficient of I_{SC} :	0.066 %/°C

*The temperature coefficients stated are linear values


MECHANICAL DATA

Dimensions:	2005 x 1001 x 45 mm
Area:	2.01 m ²
Weight:	28 kg

Ref: NE-05-07-06 Rev-E 07.17 Specifications subject to change without notice.

TECHNICAL CHARACTERISTICS: REC TWINPEAK 2S 72 & REC TWINPEAK 2S 72 XV

Fig. 24: Panel dimensions: REC TwinPeak 2S 72

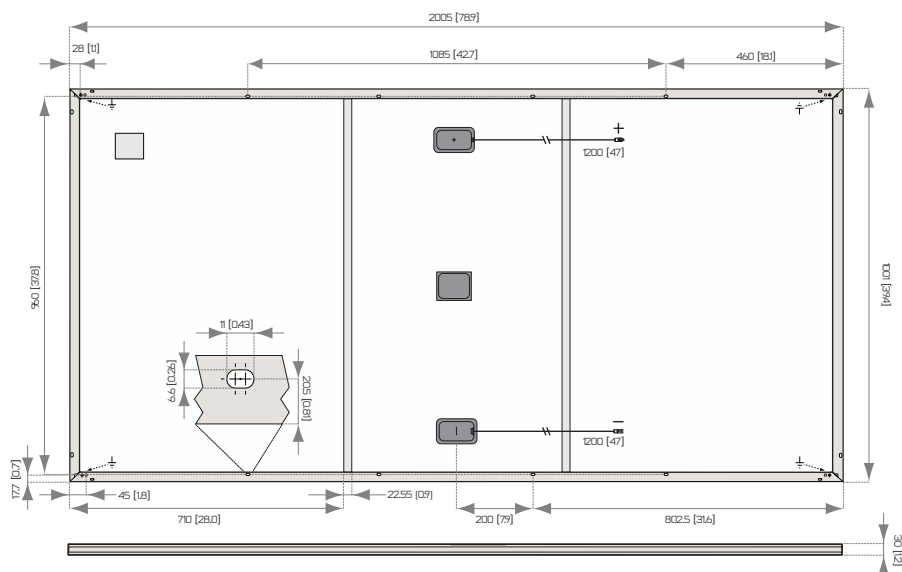

Measurements in mm [in]

ELECTRICAL DATA @ STC

Product code*: RECxxxTP2S 72

Nominal Power - P_{MPP} (Wp)	330	335	340	345	350	355
Watt Class Sorting - (W)	-0/+5	-0/+5	-0/+5	-0/+5	-0/+5	-0/+5
Nominal Power Voltage - V_{MPP} (V)	38.1	38.3	38.5	38.7	38.9	39.1
Nominal Power Current - I_{MPP} (A)	8.67	8.75	8.84	8.92	9.00	9.09
Open Circuit Voltage - V_{OC} (V)	46.0	46.2	46.3	46.5	46.7	46.8
Short Circuit Current - I_{SC} (A)	9.44	9.52	9.58	9.64	9.72	9.78
Panel Efficiency (%)	16.5	16.7	16.9	17.2	17.4	17.7

Values at standard test conditions (STC: air mass AM1.5, irradiance 1000 W/m², temperature 25°C), based on a production spread with a tolerance of V_{OC} & I_{SC} $\pm 3\%$ within one watt class. At low irradiance of 200 W/m² at least 95% of the STC module efficiency will be achieved.
*Where xxx indicates the nominal power class (P_{MPP}) at STC indicated above, and can be followed by the suffix XV for 1500 V rated modules.

ELECTRICAL DATA @ NMOT

Product code*: RECxxxTP2S 72

Nominal Power - P_{MPP} (Wp)	244	252	257	260	264	268
Nominal Power Voltage - V_{MPP} (V)	34.9	35.5	35.7	35.8	36.0	36.2
Nominal Power Current - I_{MPP} (A)	6.99	7.10	7.19	7.25	7.32	7.39
Open Circuit Voltage - V_{OC} (V)	42.3	42.8	42.9	43.1	43.2	43.3
Short Circuit Current - I_{SC} (A)	7.44	7.74	7.79	7.84	7.90	7.95

Nominal module operating temperature (NMOT: air mass AM1.5, irradiance 800 W/m², temperature 20°C, windspeed 1 m/s).

*Where xxx indicates the nominal power class (P_{MPP}) at STC indicated above, and can be followed by the suffix XV for 1500 V rated modules.

CERTIFICATIONS



take-way for an easy way take-e-way WEEE-compliant recycling scheme

WARRANTY

10 year product warranty
25 year linear power output warranty
(max. degradation in performance of 0.7% p.a.)
See warranty conditions for further details.

17.7% EFFICIENCY

10 YEAR PRODUCT WARRANTY

25 YEAR LINEAR POWER OUTPUT WARRANTY

GENERAL DATA

Cell type:	144 half-cut multicrystalline PERC cells 6 strings of 24 cells in series
Glass:	3.2 mm solar glass with anti-reflection surface treatment
Backsheet:	Highly resistant polymeric construction
Frame:	Anodized aluminum
Support bars:	Anodized aluminum
Junction box:	3-part, 3 bypass diodes, IP67 rated in accordance with IEC 62790
Cable:	4 mm ² solar cable, 1.2 m + 1.2 m in accordance with EN 50618
Connectors:	Tonglin TL-Cable01S-F (4 mm ²) (1500V) Tonglin TL-Cable01S-FR (4 mm ²) (1000V) in accordance with IEC 62852, IP68 only when connected
Origin:	Made in Singapore

MAXIMUM RATINGS

Operational temperature:	-40 ... +85°C
Maximum system voltage:	1000 V / 1500 V
Design load (+): snow	367 kg/m ² (3600 Pa)*
Maximum test load (+):	550 kg/m ² (5400 Pa)
Design load (-): wind	163 kg/m ² (1600 Pa)*
Maximum test load (-):	244 kg/m ² (2400 Pa)
Max series fuse rating:	25 A
Max reverse current:	25 A

* Safety factor 1.5

TEMPERATURE RATINGS*

Nominal Module Operating Temperature:	44.6°C ($\pm 2^\circ\text{C}$)
Temperature coefficient of P_{MPP} :	-0.36 %/°C
Temperature coefficient of V_{OC} :	-0.30 %/°C
Temperature coefficient of I_{SC} :	0.066 %/°C


*The temperature coefficients stated are linear values

MECHANICAL DATA

Dimensions:	2005 x 1001 x 30 mm
Area:	2.01 m ²
Weight:	22 kg

TECHNICAL CHARACTERISTICS: REC TWINPEAK 2S 72 XV BIFACIAL

Fig. 25: Panel dimensions: REC TwinPeak 2S 72 XV Bifacial

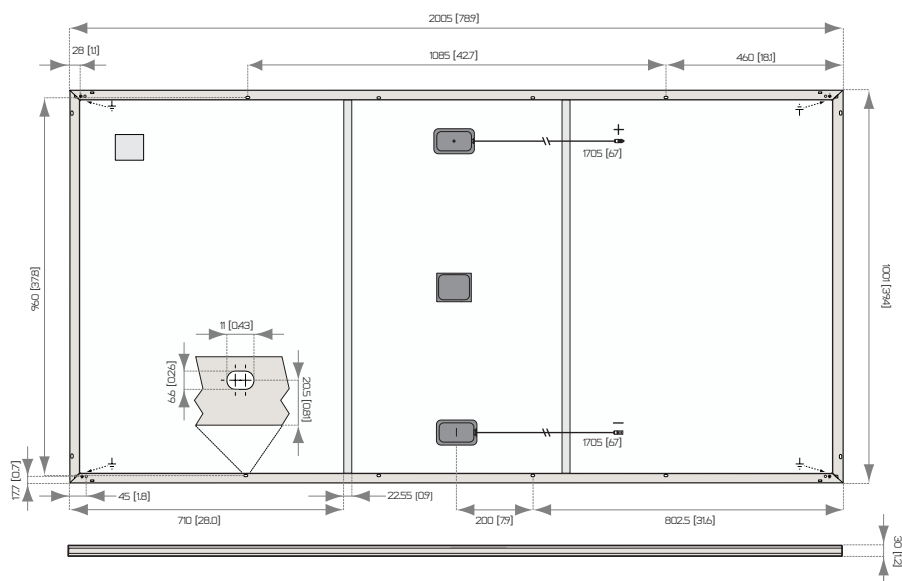

Measurements in mm [in]

ELECTRICAL DATA @ STC

Product Code*: RECxxxTP2SB 72 XV

	Front side				Rear side			
Module Nameplate Power (Wp)	325	330	335	340	325	330	335	340
Nominal Power - P_{MPP} (Wp)	325	330	335	340	163	165	170	175
Nominal Power Voltage - V_{MPP} (V)	37.8	38.1	38.4	38.6	40.6	40.8	41.2	41.4
Nominal Power Current - I_{MPP} (A)	8.62	8.67	8.74	8.82	4.02	4.05	4.14	4.23
Open Circuit Voltage - V_{OC} (V)	46.3	46.6	46.8	47.0	45.3	45.4	45.6	45.8
Short Circuit Current - I_{SC} (A)	9.18	9.28	9.36	9.44	7.38	5.60	5.66	5.74
Panel Efficiency (%)	16.2	16.4	16.7	16.9	8.1	8.2	8.5	8.7

Values at standard test conditions (STC: air mass AM 1.5, irradiance 1000 W/m², temperature 25°C), based on a production spread with a tolerance of V_{OC} & I_{SC} ±3% within one watt class. At low irradiance of 200 W/m² at least 95% of the STC module efficiency will be achieved.
*Where xxx indicates the nominal power class (P_{MPP}) at STC indicated above.

ELECTRICAL DATA @ NMOT

Product Code*: RECxxxTP2SB 72 XV

	Front side				Rear side			
Module Nameplate Power (Wp)	325	330	335	340	325	330	335	340
Nominal Power - P_{MPP} (Wp)	244	247	251	255	119	123	127	130
Nominal Power Voltage - V_{MPP} (V)	35.3	35.6	35.8	36.0	37.2	37.5	37.9	38.1
Nominal Power Current - I_{MPP} (A)	6.91	6.96	7.01	7.08	3.19	3.27	3.34	3.42
Open Circuit Voltage - V_{OC} (V)	43.3	43.5	43.7	43.9	41.6	41.8	41.9	42.1
Short Circuit Current - I_{SC} (A)	7.38	7.45	7.51	7.58	4.45	4.52	4.57	4.64

Nominal module operating temperature (NMOT: air mass AM 1.5, irradiance 800 W/m², temperature 20°C, windspeed 1 m/s).

*Where xxx indicates the nominal power class (P_{MPP}) at STC indicated above, and can be followed by the suffix XV for 1500 V rated modules.

CERTIFICATIONS



IEC 61215, IEC 61730 & UL 1703; IEC 62804 (PID)
ISO 9001: 2015, ISO 14001: 2004, OHSAS 18001: 2007

WARRANTY

10 year product warranty
25 year linear power output warranty
(max. degradation in performance of 0.7% p.a.)
See warranty conditions for further details.

16.9% EFFICIENCY

10 YEAR PRODUCT WARRANTY

25 YEAR LINEAR POWER OUTPUT WARRANTY

GENERAL DATA

Cell type:	144 half-cut mcSi bifacial PERC cells 6 strings of 24 cells in series
Glass:	3.2 mm solar glass with anti-reflection surface treatment
Backsheet:	Highly resistant transparent polyester
Frame:	Anodized aluminum
Support bars:	Anodized aluminum
Junction box:	3-part, 3 bypass diodes, IP67 rated in accordance with IEC 62790
Cable:	4 mm ² solar cable, 1.7 m + 1.7 m in accordance with EN 50618
Connectors:	Tonglin TL-Cable01S-F (4 mm ²) in accordance with IEC 62852, IP68 only when connected
Origin:	Made in Singapore

MAXIMUM RATINGS

Operational temperature:	-40 ... +85°C
Maximum system voltage:	1500 V
Design load (+): snow	367 kg/m ² (3600 Pa)*
Maximum test load (+):	550 kg/m ² (5400 Pa)
Design load (-): wind	163 kg/m ² (1600 Pa)*
Maximum test load (-):	244 kg/m ² (2400 Pa)
Max series fuse rating:	25 A
Max reverse current:	25 A

* Safety factor 1.5

TEMPERATURE RATINGS*

Nominal Module Operating Temperature:	44.6°C (±2°C)
Temperature coefficient of P_{MPP} :	-0.36 %/°C
Temperature coefficient of V_{OC} :	-0.30 %/°C
Temperature coefficient of I_{SC} :	0.066 %/°C

*The temperature coefficients stated are linear values

MECHANICAL DATA

Dimensions:	2005 x 1001 x 30 mm
Area:	2.01 m ²
Weight:	22 kg

takeaway take-e-way WEEE-compliant recycling scheme
for an easy way

ANNEX 1: INSTALLATIONS ON WATER PLATFORMS

This section is applicable to the following products only (other panel types have not yet been qualified for installations on water platforms):

- REC Peak Energy 72 Series & REC Peak Energy 72 XV Series
- REC TwinPeak 72 Series & REC TwinPeak 72 XV Series
- REC TwinPeak 2S 72 Series, REC TwinPeak 2S 72 XV Series
- REC TwinPeak 2S 72B XV Series

The above named REC solar panels may be installed on water platform-type mounting systems (note that the certification testing of solar panels does not include testing on these types of systems). When installing any of the above named REC solar panels on fixed position (e.g., anchored) water platforms, for example, floating pontoons, follow the instructions below specific to such applications. Failure to do so will invalidate the warranty.



For all installations on water platforms, first advise REC before the start of installation in case of any site specific instructions or constraints.

INSTALLATION ENVIRONMENT

i) Installation site

- REC solar panels may only be installed on closed bodies of fresh water where water salinity does not exceed 25 mS/cm at 25°C (15 PSU). This specifically excludes mounting on sea and ocean applications.
- The maximum permitted wave height must not exceed 1 m from the crest to the trough of the wave.

ii) Floating platforms

- When using a floating platform, follow the manufacturer's instructions regarding installation, maintenance, inspection and cleaning at all times.

iii) Minimum installation height

- The minimum installation height of REC solar panels on floating platform systems is 15 cm and is defined as the height between the water surface and the lowest edge/part of the panel during normal operation. This will help to shield the panel from direct water spray.

INSTALLATION INSTRUCTIONS

i) System installation

- All cables used for the installation must have sufficient length and slack to prevent damage due to water level changes and wave motions.



Negative system grounding is required for REC solar panels installed on a floating platform.

ii) Mounting panels

- Installation of REC solar panels must be in accordance with the aforementioned standard mounting instructions.
- The junction box should be oriented as far as possible from the water surface according to system design and the junction box, cables and connectors must be protected from direct water splash.
- The installation must allow for sufficient spacing between individual panels, in order to avoid all contact as caused by the natural movement and flexing of the floating structure.

iii) Panel protection

- In areas with high avian activity, additional bird repelling devices may be installed as long as they do not adversely affect system performance, e.g., shading or to the local environment etc.
- If using lightning protection equipment on the floating installation, all relevant local regulations must be respected.

MAINTENANCE

- Regularly inspect the installation to ensure all panels are securely mounted.



For installations with high avian activity, system cleaning may be required at more frequent intervals to reduce shading of panels caused by bird defecation.

SAFETY

- Immediately disconnect the system if the installation or the floating platform exhibits deviation from standard operating conditions.
- In the event of the floating platform being submerged, disconnect the DC connection at the inverter immediately. Do not attempt to salvage panels when sunlight is present.

ANNEX 1: INSTALLATIONS ON WATER PLATFORMS

This section is applicable to the following products only (other module types have not yet been qualified for installations on water platforms):

- REC Peak Energy 72 Series
- REC TwinPeak 72 Series & REC TwinPeak 72 XV Series
- REC TwinPeak 2S 72 Series & REC TwinPeak 2S 72 XV Series
- REC TwinPeak 2S 72B XV Series

The above named REC solar panels may be installed on water platform-type mounting systems (note that the certification testing of solar panels does not include testing on these types of systems). When installing any of the above named REC solar panels on fixed position (e.g., anchored) water platforms, for example, floating pontoons, follow the instructions below specific to such applications. Failure to do so will invalidate the warranty.



For all installations on water platforms, first advise REC before the start of installation in case of any site specific instructions or constraints.

INSTALLATION ENVIRONMENT

i) Installation site

- REC solar panels may only be installed on closed bodies of fresh water where water salinity does not exceed 25 mS/cm at 25°C (15 PSU). This specifically excludes mounting on sea and ocean applications.
- The maximum permitted wave height must not exceed 1 m from the crest to the trough of the wave.

ii) Floating platforms

- When using a floating platform, follow the manufacturer's instructions regarding installation, maintenance, inspection and cleaning at all times.

iii) Minimum installation height

- The minimum installation height of REC solar panels on floating platform systems is 15 cm and is defined as the height between the water surface and the lowest edge/part of the panel during normal operation. This will help to shield the panel from direct water spray.

INSTALLATION INSTRUCTIONS

i) System installation

- All cables used for the installation must have sufficient length and slack to prevent damage due to water level changes and wave motions.



Negative system grounding is required for REC solar panels installed on a floating platform.

ii) Mounting panels

- Installation of REC solar panels must be in accordance with the aforementioned standard mounting instructions.
- The junction box should be oriented as far as possible from the water surface according to system design and the junction box, cables and connectors must be protected from direct water splash.
- The installation must allow for sufficient spacing between individual panels, in order to avoid all contact as caused by the natural movement and flexing of the floating structure.

iii) Panel protection

- In areas with high avian activity, additional bird repelling devices may be installed as long as they do not adversely affect system performance, e.g., shading or to the local environment etc.
- If using lightning protection equipment on the floating installation, all relevant local regulations must be respected.

MAINTENANCE

- Regularly inspect the installation to ensure all panels are securely mounted.



For installations with high avian activity, system cleaning may be required at more frequent intervals to reduce shading of panels caused by bird defecation.

SAFETY

- Immediately disconnect the system if the installation or the floating platform exhibits deviation from standard operating conditions.
- In the event of the floating platform being submerged, disconnect the DC connection at the inverter immediately. Do not attempt to salvage panels when sunlight is present.

EC Declaration of Conformity



Issuer's name and address:

REC SOLAR PTE. LTD.
20 Tuas South Avenue 14
SINGAPORE 637312
SINGAPORE

Product:

Crystalline silicon terrestrial photovoltaic modules

Type designation:

RECxxxPE#	REC Peak Energy Series;
RECxxxPE 72*	REC Peak Energy 72 Series;
RECxxxPE Z-Link	REC Peak Energy Z-Link Series;
RECxxxPE Z-Link-S	REC Peak Energy Z-Link-S Series;
RECxxxPE2SM 50#	REC Peak Energy 2S Mono 50 Series;
RECxxxTP#	REC TwinPeak Series;
RECxxxTP 72*	REC TwinPeak 72 Series;
RECxxxTP2#	REC TwinPeak 2 Series;
RECxxxTP2M#	REC TwinPeak 2 Mono Series
RECxxxTP2S 72*	REC TwinPeak 2S 72 Series;
RECxxxNP#	REC N-Peak Series;

in the type can be with or without any of the following suffixes or a combination of these: ECO, BLK, BLK2, IQ; * in the type can be with or without the suffix: XV.

The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:

2014/35/EU

"Directive of the European Parliament and of the Council on the harmonisation of the laws of the Member States relating to the making available on the market of electrical equipment designed for use within certain voltage limits".


The technical documentation and full compliance with the standards listed below proves the conformity of the product with the requirements of the above-mentioned EC Directive and its conformity with the safety requirements of the EC Low-Voltage Directive 2014/35/EU.:

DIN EN 61215 (VDE 0126-31):2006-02; EN 61215:2005
DIN EN 61730-1 (VDE 0126 Teil 30-1):2007-10; EN 61730-1:2007-05
DIN EN 61730-1/A1 (VDE 0126-30-1/A1):2012-09; EN 61730-1:2007/A1:2012
DIN EN 61730-1/A2 (VDE 0126-30-1/A2):2014-01; EN 61730-1:2007/A2:2013
DIN EN 61730-1/A11 (VDE 0126-30-1/A11):2015-08; EN 61730-1:2007/A11:2014
DIN EN 61730-2 (VDE 0126-30-2):2012-09; EN 61730-2:2007 + A1:2012
IEC 61215-1:2016; EN 61215-1:2016
IEC 61215-1-1:2016; EN 61215-1-1:2016
IEC 61215-2:2016; EN 61215-2:2017
IEC 61215:2005
IEC 61730-1:2004
IEC 61730-1:2004/AMD1:2011
IEC 61730-1:2004/AMD2:2013
IEC 61730-1:2016
IEC 61730-2:2004
IEC 61730-2:2004/AMD1:2011
IEC 61730-2:2016

Remark: The VDE Testing and Certification Institute, Merianstr. 28, 63069 Offenbach (Germany), has tested and certified the product(s) according to these standards.

Certificate No.	40046983
File Reference	5017538-3972-0001 / 249090

This declaration is issued under the sole responsibility of the manufacturer and loses its validity if the product is misused or modified without proper authorization from REC.

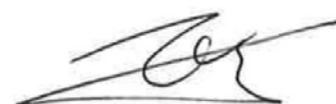

Ter Soon Kim – Chief Operating Officer
Singapore, June 29, 2018

DOCUMENT HISTORY

Date	Revision Number	Reason
09.2017	A	First release of combined installation manual for all REC 60-cell solar panels
07.2018	B	Textual updates for string configuration and clamping zones



REC SOLAR PTE. LTD.
20 TUAS SOUTH AVENUE 14
SINGAPORE 637312
Tel: +65 6495 9228
Mail: post@recgroup.com

www.recgroup.com